



# TROUBLESHOOTING GUIDE


## 1. NO POWER

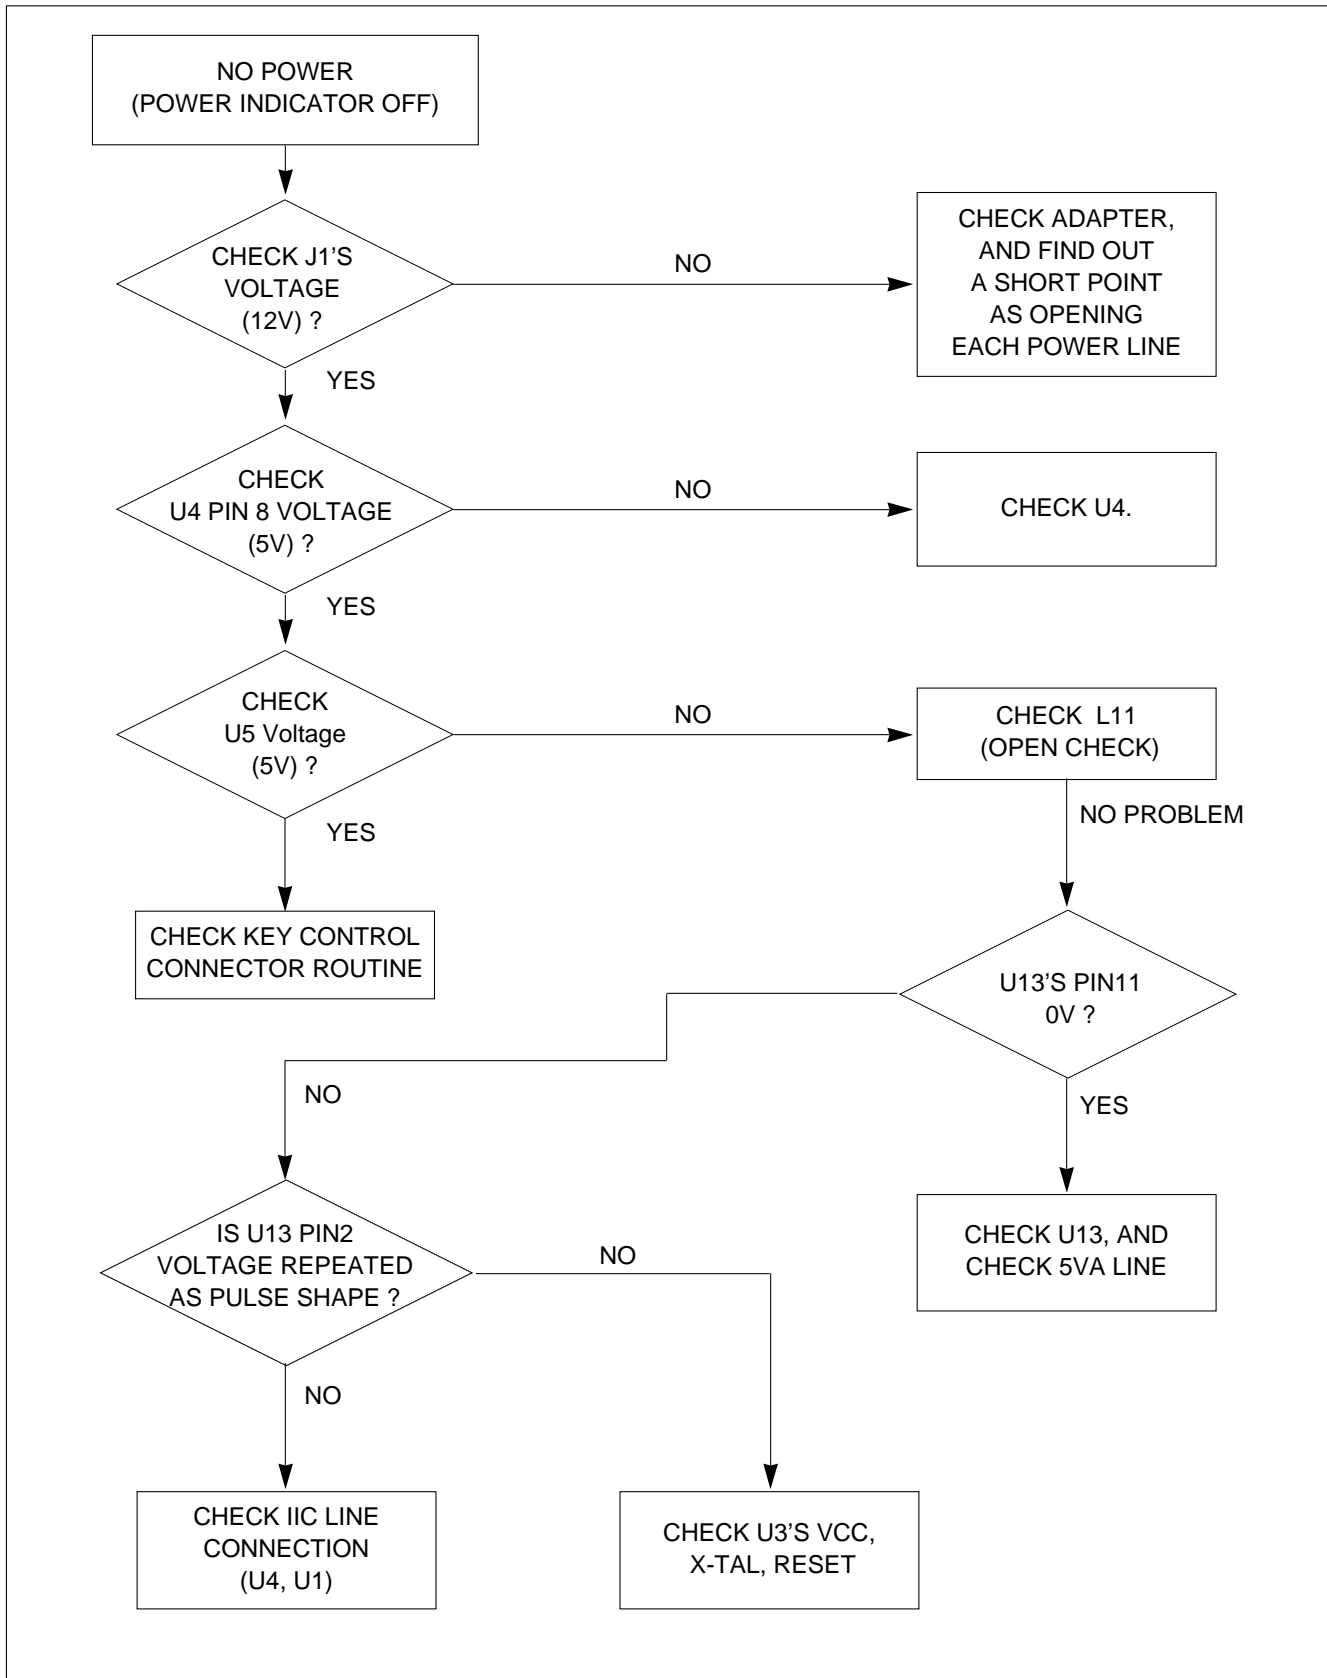


## 2. NO RASTER (OSD IS NOT DISPLAYED) – INVERTER

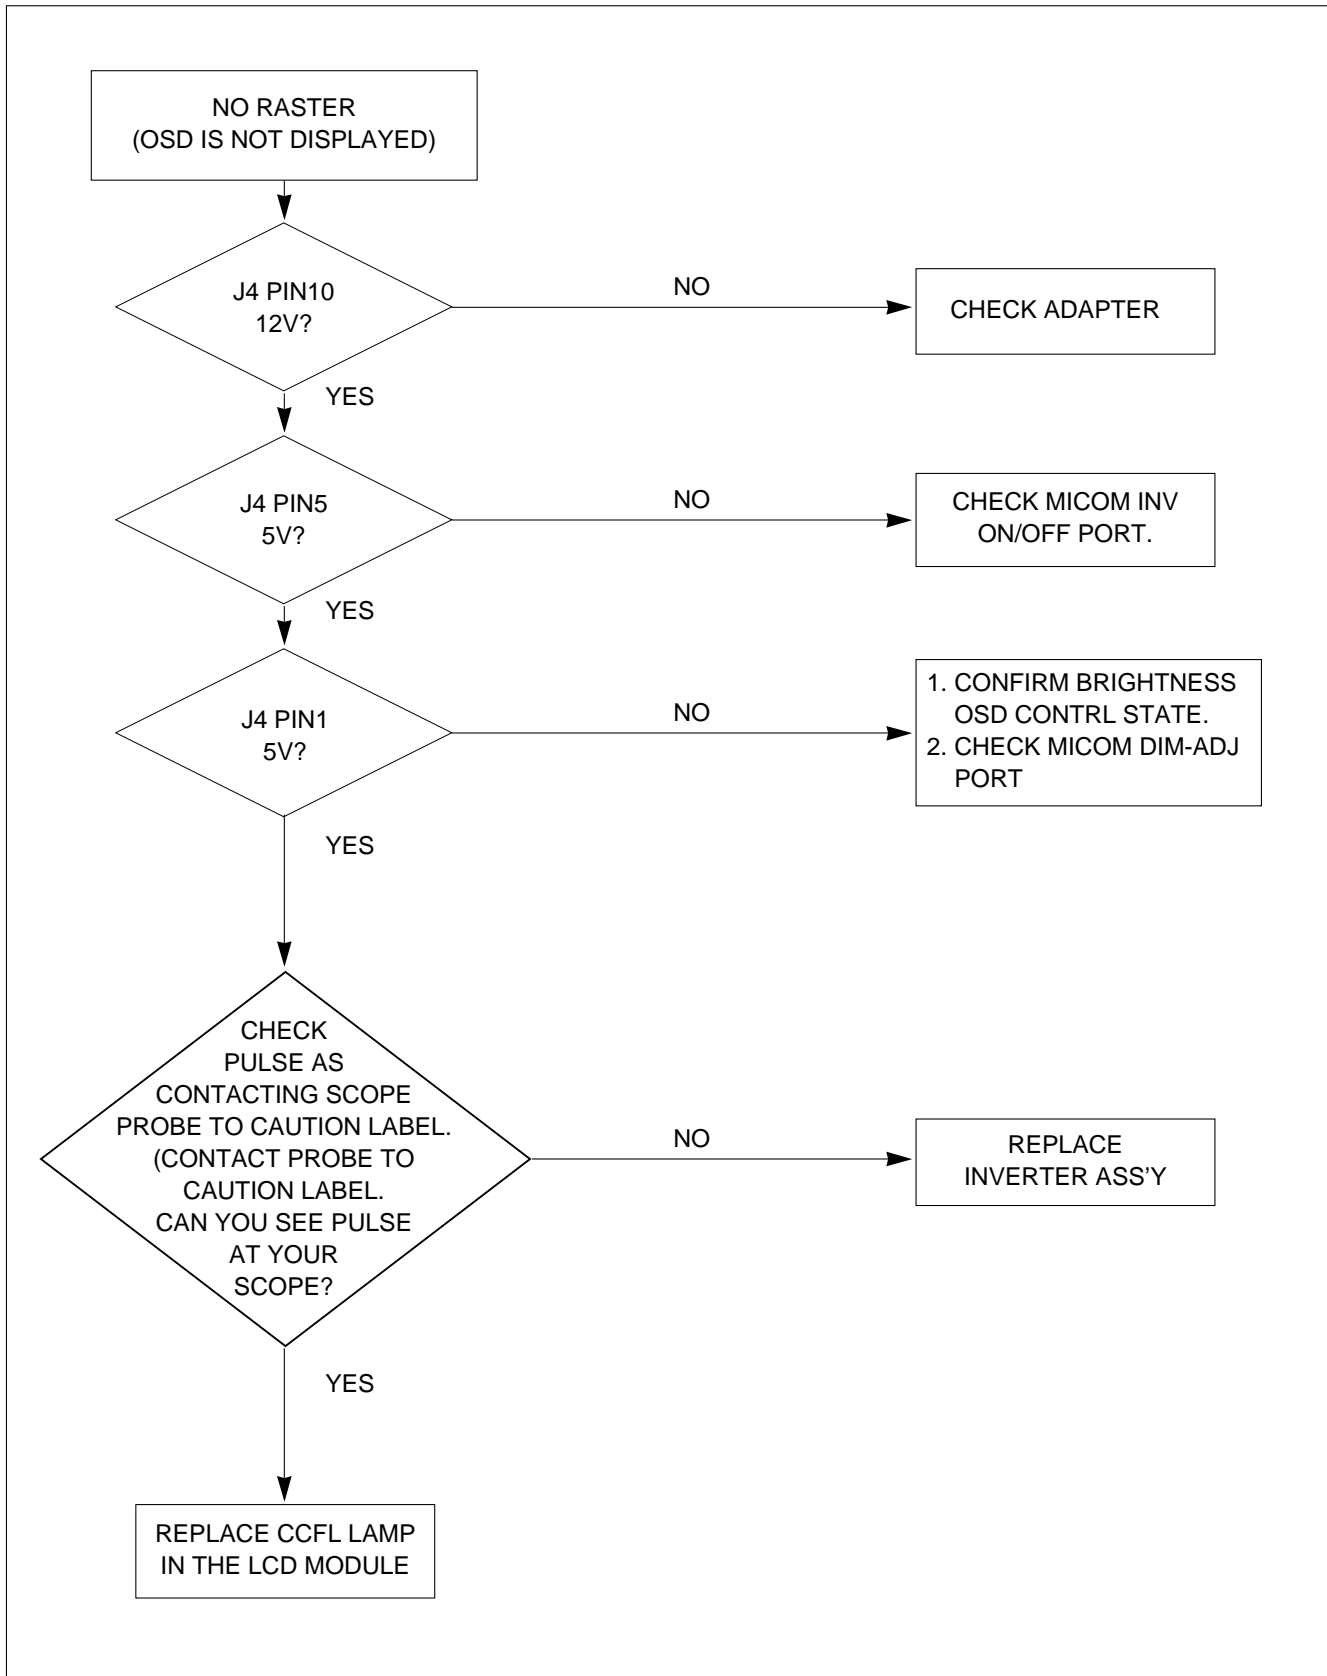

### 3. NO RASTER (OSD IS NOT DISPLAYED) – gmZAN1

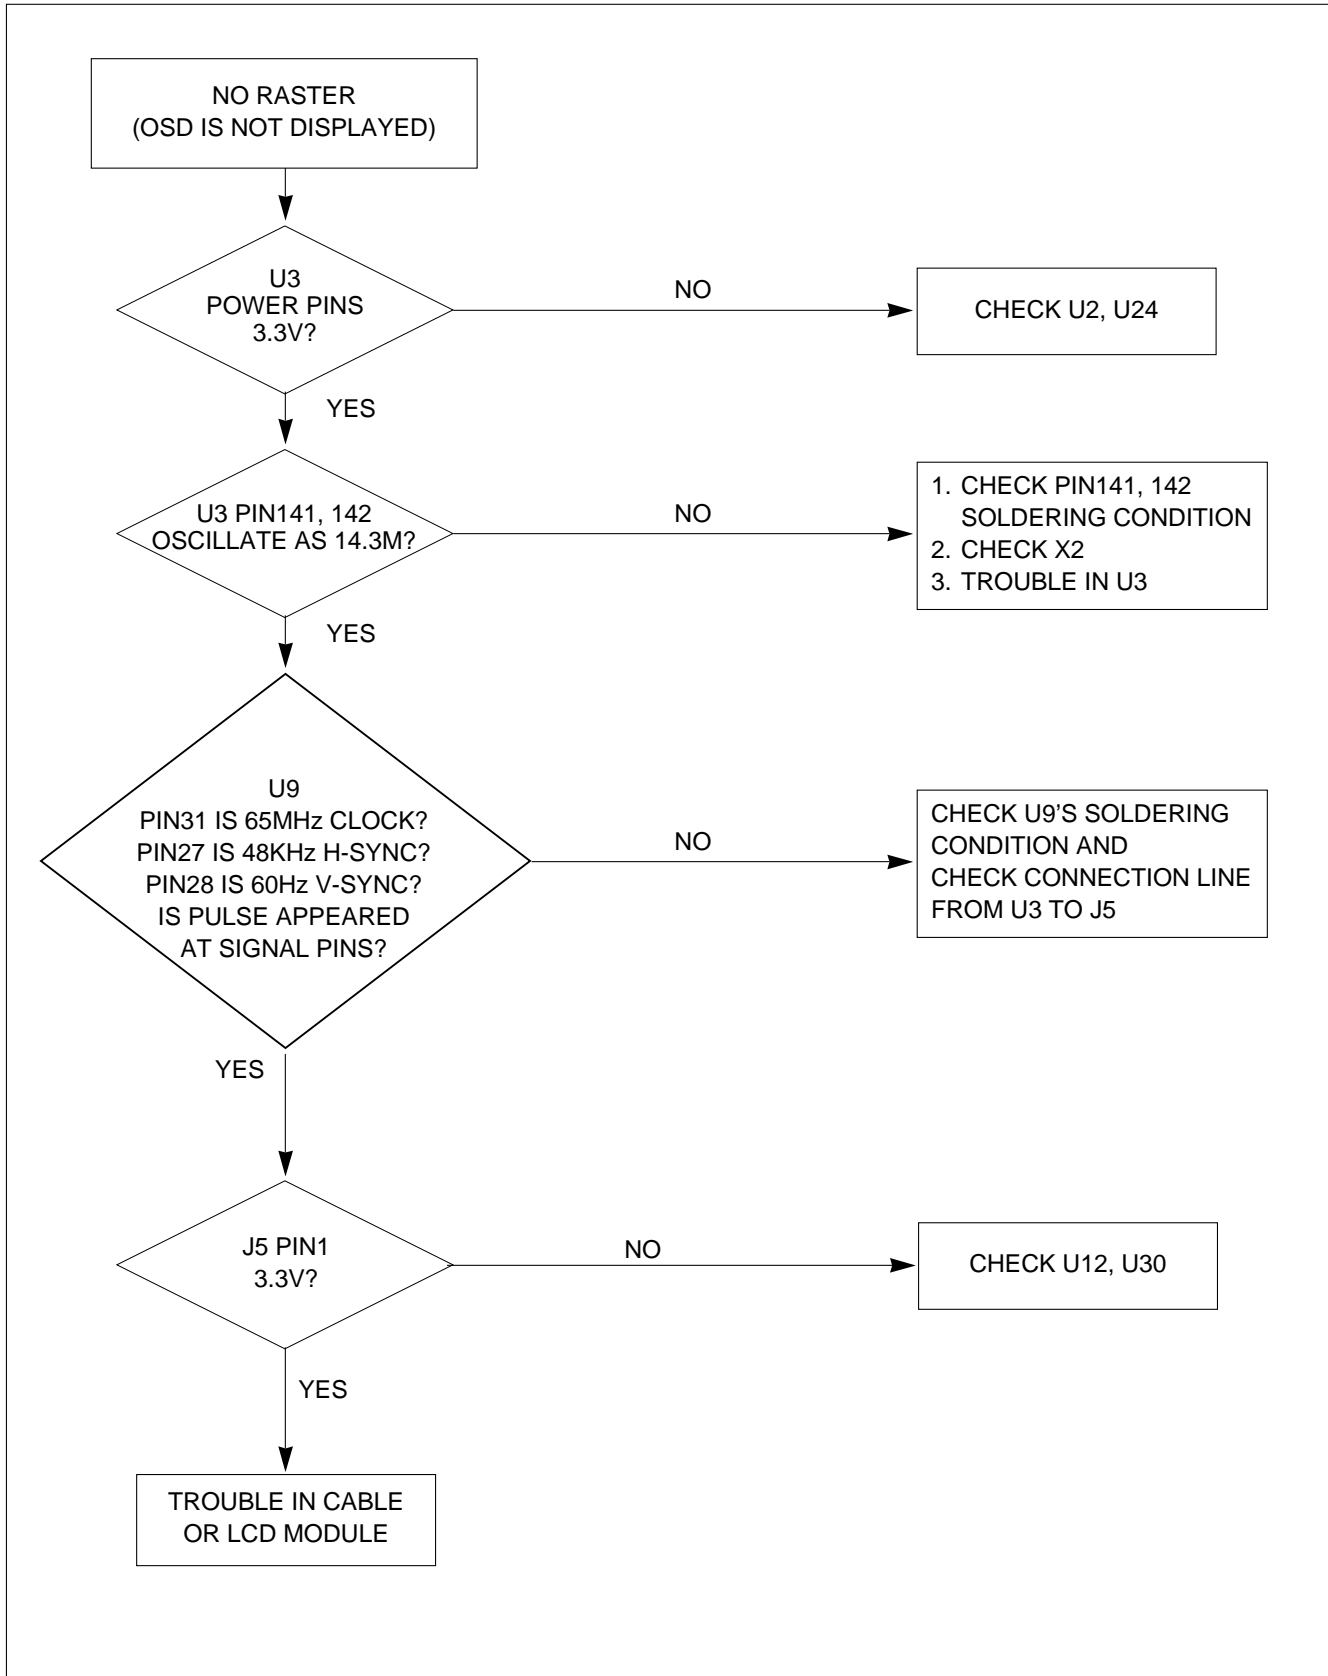

#### 4. NO RASTER (OSD IS DISPLAYED) – gmZAN1

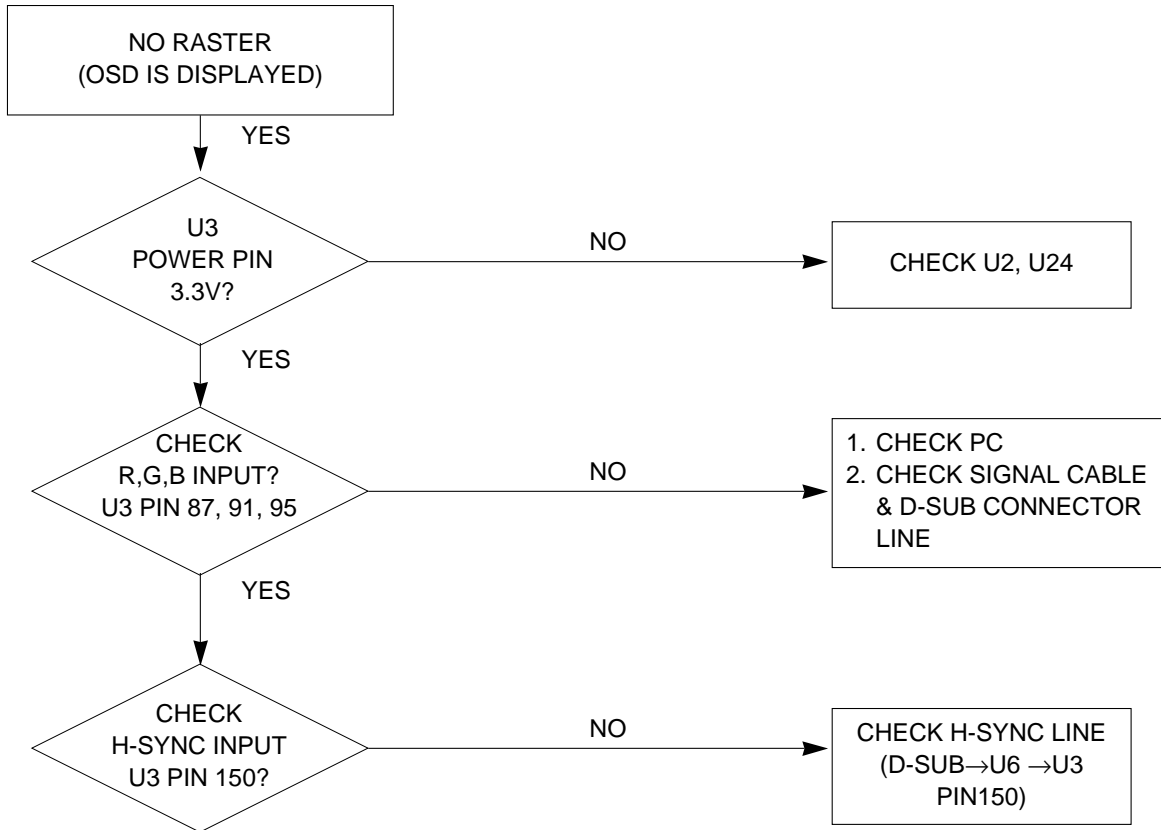

## 5. NO SOUND

