

Chapter 6

FRU (Field Replaceable Unit) list

This chapter gives you the FRU (Field Replaceable Unit) listing in global configurations of AL1914. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).

- NOTE : Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel(<u>http://aicsl.acer.com.tw/spl/</u>). For whatever reasons a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED CERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts repair and service of customer machines.
- NOTE: To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how best to dispose it, or follow the rules set by your regional Acer office on how to return it.

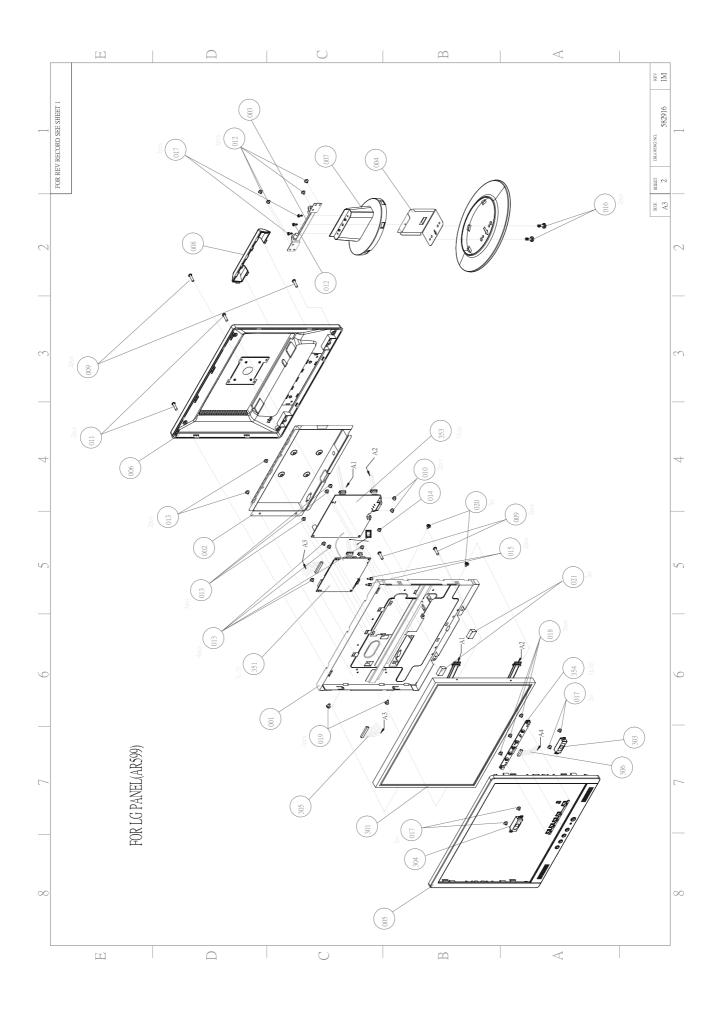

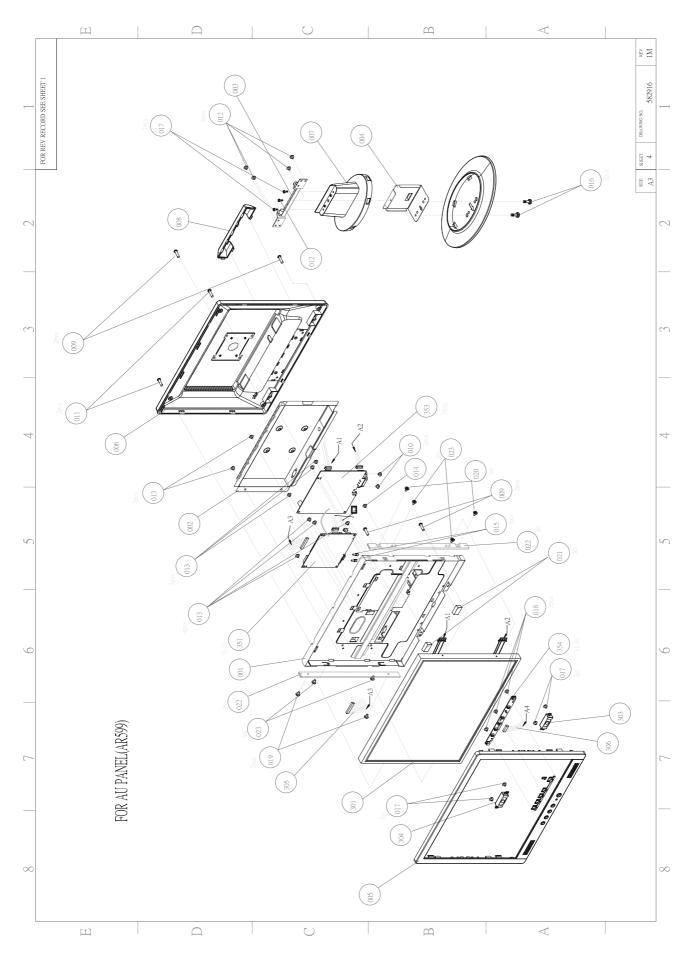

Part list

No.	Photo	Part Name	Part No.
1		Hinge Cover	FAAR7721000
2	acer	Base Assy	FAAR9913A00
3		Rear Cover	FAAR9912000
4		Base	FAAR9913000
6	acer	Neck	FAAR7713000
7		Main Shield	ECAR9914A00
8		MB	DA2R877V01A Or DA2R577V012

9	Power Board to MB cable	LG/AU: 453AAP300B1 Samsung: 453AAP300A1
10	Inverter Board	LG/AU: 453AAP300B1 Samsung: 453AAP300A1
11	Front Bezel	FAAR9911A00
12	Keyboard to MB Cable	DCO20162300
13	Speaker-R	CG10021V900
14	Speaker-L	CG19921V910
15	Frame	ECAR9915A00
16	LCD (R)	AC6VG190000 AC6VA1901P0 AC6VT1901R5

17	Panel to MB cable	NBX30001040 NBX30001330
18	Function Board	454AAPE0001

Chapter 7

Schematic Diagram

