



<http://www.wjel.net>

**Acer X173W
Service Guide**

Service Guide Version and Revision

Version	Release Date	Revision History	TPV model
A00	Jul.-23-2007	Initial Release	T77HRDDK2WAYNN

<http://www.wjel.net>

Copyright

Copyright © 2003 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, Transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

Disclaimer

The information in this guide is subject to change without notice. Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Intel is a registered trademark of Intel Corporation.

Pentium and Pentium II/III are trademarks of Intel Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Trademarks

Acer is a registered trademark of Acer Incorporated.

All other trademarks are property of their respective owners.

Conventions

The following conventions are used in this manual:

Screen messages	Denotes actual messages that appear on screen.
Note	Gives bits and pieces of additional information related to the current topic.
Warning	Alerts you to any damage that might result from doing or not doing specific actions.
Caution	Gives precautionary measures to avoid possible hardware or software problems.
Important	Remind you to do specific actions relevant to the accomplishment of procedures.

Preface

Before using this information and the product it supports, please read the following general information.

1. This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for Acer's "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office may have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed Service Guide. For ACER-AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

Warning: (For FCC Certified Models)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

Notice:

1. The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
2. Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.
3. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. It is the responsibility of the user to correct such interference.

As ENERGY STAR® Partner our company has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Warning:

To prevent fire or shock hazard, do not expose the monitor to rain or moisture. Dangerous high voltages are present inside the monitor. Do not open the cabinet. Refer servicing to qualified personnel only.

Precautions

- Do not use the monitor near water, e.g. near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
- Do not place the monitor on an unstable trolley, stand, or table. If the monitor falls, it can injure a person and cause serious damage to the appliance. Use only a trolley or stand recommended by the manufacturer or sold with the monitor. If you mount the monitor on a wall or shelf, use a mounting kit approved by the manufacturer and follow the kit instructions.
- Slots and openings in the back and bottom of the cabinet are provided for ventilation. To ensure reliable operation of the monitor and to protect it from overheating, be sure these openings are not blocked or covered. Do not place the monitor on a bed, sofa, rug, or similar surface. Do not place the monitor near or over a radiator or heat register. Do not place the monitor in a bookcase or cabinet unless proper ventilation is provided.
- The monitor should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supplied to your home, consult your dealer or local power company.
- The monitor is equipped with a three-pronged grounded plug, a plug with a third (grounding) pin. This plug will fit only into a grounded power outlet as a safety feature. If your outlet does not accommodate the three-wire plug, have an electrician install the correct outlet, or use an adapter to ground the appliance safely. Do not defeat the safety purpose of the grounded plug.
- Unplug the unit during a lightning storm or when it will not be used for long periods of time. This will protect the monitor from damage due to power surges.
- Do not overload power strips and extension cords. Overloading can result in fire or electric shock.
- Never push any object into the slot on the monitor cabinet. It could short circuit parts causing a fire or electric shock. Never spill liquids on the monitor.
- Do not attempt to service the monitor yourself; opening or removing covers can expose you to dangerous voltages and other hazards. Please refer all servicing to qualified service personnel
- To ensure satisfactory operation, use the monitor only with UL listed computers which have appropriate configured receptacles marked between 100 - 240V AC, Min. 5A.
- The wall socket shall be installed near the equipment and shall be easily accessible.

Special Notes On LCD Monitors

The following symptoms are normal with LCD monitor and do not indicate a problem.

Notes

- Due to the nature of the fluorescent light, the screen may flicker during initial use. Turn off the Power Switch and then turn it on again to make sure the flicker disappears.
- You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
- The LCD screen has effective pixels of 99.99% or more. It may include blemishes of 0.01% or less such as a missing pixel or a pixel lit all of the time.
- Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen is recovered slowly by changing the image or turning off the Power Switch for hours.

Table Of Contents

Chapter 1	Monitor Features	7
	Introduction	7
	Electrical Requirements	8
	LCD Monitor General Specification	9
	LCD Panel Specification	10
	Support Timing	12
	Monitor Block Diagram	13
	Main Board Diagram	14
	Software Flow chart	15
	Main Board Layout	17
	Installation	18
	Attaching/Removing the base	19
Chapter 2	Operating Instructions	20
	External Controls	20
	Front Panel Controls	21
	eColor Management (OSD)	22
	How to Adjust a Setting	23
	LOGO	28
Chapter 3	Machine Disassembly	29
Chapter 4	Troubleshooting	34
Chapter 5	Connector Information	38
Chapter 6	FRU (Field Replacement Unit) List	39
	Exploded Diagram	40
Chapter 7	Schematic Diagram	43

Introduction**Scope**

This specification defines the requirements for the 17" MICROPROCESSOR based Multi-mode supported high resolution color LCD monitor. This monitor can be directly connected to general 15-pin D-sub VGA connector, also supports VESA DPMS power management and plug & play function. There is a build-in stereo audio amplifier with OSD control to drive a pair of speakers.

Description

The LCD monitor is designed with the latest LCD technology to provide a performance oriented product with no radiation. This will alleviate the growing health concerns. It is also a space saving design, allowing more desktop space, and comparing to the traditional CRT monitor, it consumes less power and gets less weight in addition MTBF target is 50k hours or more.

Chart of X173W

Panel	HSD170MGW1-B00
Signal Interface	D-Sub 15-pin
Sync Type	Separate / Compatible
Color Temp User Adjust	Support
DDC	DDC2B
Speaker	No
Headphone Jack	No
Microphone Jack	No
USB Hub	Not support
Tilt / Swivel	Yes / No

Electrical Requirements

Standard Test Conditions

All tests shall be performed under the following conditions, unless otherwise specified.

Ambient light	:	Dark room
Viewing distance	:	30-50 cm for LCD performance
Warm up time		
All specifications	:	> 30 minutes
Measuring equipment	:	Photo detector PR650 w/2°
		Measurement field
Control temperature		6500° K (e-color set to User mode)
User brightness control	:	Set to Factory preset value (cut off raster)
User contrast control	:	Set to factory preset value, which allows that the brightest two of 32 linear distributed gray-scales (0~ 700mv) can be distinguished.
User red/white balance,		
Green/white balance and		
Blue/white balance control	:	In the center (unless otherwise specified)
AC Supply voltage	:	230V± 5%, 50±3Hz
Ambient temperature	:	20+5°C
Display mode	:	1440x900 60Hz, all white

Measurement systems

The units of measure stated in this document are listed below:

1 gamma = 1 nano tesla

1 tesla = 10,000 gauss

cm = in x 2.54

Lb = kg x 2.2

Degrees F = [°C x 1.8] + 32

Degrees C = [°F - 32]/1.8

$u' = 4x/(-2x + 12y + 3)$

$v' = 9y/(-2x + 12y + 3)$

$x = (27u'/4)/[(9u'/2) - 12v' + 9]$

$y = (3v')/[(9u'/2) - 12v' + 9]$

nits = cd/(m²) = Ft-L x 3.426

lux = foot-candle x 10.76

LCD Monitor General Specification

LCD Panel	Driving system	TFT Color LCD
	Active Display Area	367.92(H) × 229.5mm(V)
	Pixel pitch	0.255mm(H) × 0.255mm(V)
	Viewable angle	(H) 160° and (V) 150° (CR>10) (H) 170° and (V) 170° (CR>5)
	Response time	8ms
Input	Separate Sync.	H/V TTL
	H-Frequency	30kHz – 80kHz
	V-Frequency	55-75Hz
Display Colors	16.2M (6-bit+FRC)	
Max. Dot Clock	140MHz	
Display mode	1440 × 900 @60Hz	
EPA ENERGY STAR®	ON Mode	< 36W
	OFF Mode	< 1W
Input Connector	D-Sub 15pin	
Input Video Signal	Analog:0.7 Vpp (standard)	
Power Source	90~240VAC,47~63Hz	
Environmental Considerations	Operating Temp: 0° to 40°C Storage Temp: -30° to 65°C Operating Humidity: 0% to 90% Storage Humidity: 0% to 90%	
Dimension	411 (W)×334(H)×164(D) mm	
Leakage current	< 3.5mA	
Peak surge current	< 55A peak at 240 VAC and cold starting	

LCD Panel Specification

General Specifications

Item		Specification	Unit
Outline Dimension		389.2 x 254.5 x 11.5 (Typ)	mm
Display area		367.2 (H) x 229.5 (V)	mm
Number of Pixel		1440(H) x 900(V)	pixels
Pixel pitch		0.255(H) x 0.255(V)	mm
Pixel arrangement		RGB Vertical stripe	
Display color		16.2M (6-bit+FRC)	colors
Color Gamut		63% NTSC	
Display mode		Normally white	
Surface treatment		Antiglare (3H)	
Weight		1365	g
Back-light		2-CCFLs, Top & bottom edge side	
Input signal		2-ch LVDS	
Power Consumption	Logic System	3.0(TYP.)	W
	B/L System	11.76(TYP.)	W

Mechanical Information

Item		Min.	Typ.	Max.	Unit
Module Size	Horizontal (H)	388.7	389.2	389.7	mm
	Vertical (V)	254.0	254.5	255.0	mm
	Depth (D)	11.2	11.5	11.8	mm
Weight (Without inverter)		-	1365	-	g
Torque of customer screw hole		-	-	3.0	Kgf•Cm

Optical Specifications

Item		Symbol	Condition	Min.	Typ.	Max.	Unit	
Contrast		CR	$\theta = 0$ viewing angle	500	600	-		
Response time	Rising	T_R		-	3	5	msec	
	Falling	T_F		-	5	7		
White luminance (Center)		Y_L			200	250	-	cd/m^2
Color chromaticity (CIE1931)	Red	R_x			0.621	0.651	0.681	
		R_y			0.302	0.332	0.362	
	Green	G_x		-	0.288	0.318	0.348	
		G_y		-	0.539	0.569	0.599	
	Blue	B_x			0.117	0.147	0.177	
		B_y			0.061	0.091	0.121	
	White	W_x		0.283	0.313	0.343		
		W_y		0.299	0.329	0.359		
Viewing angle	Hor.	θ_L	CR>10	70	80	-		
		θ_R		70	80	-		
	Ver.	θ_D		75	85	-		
		θ_U		55	65	-		
Viewing angle	Hor.	θ_L	CR>5	75	85	-		
		θ_R		75	85	-		
	Ver.	θ_D		75	85	-		
		θ_U		75	85	-		
Brightness uniformity		B_{UNI}	$\theta = 0$	70	75	-	%	


Support Timing

Mode	Resolution		
1	VGA	720 x 400	70 Hz
2	VGA	640 x 480	59.94 Hz
3	MAC	640 x 480	66.66 Hz
4	VESA	640 x 480	72 Hz
5	VESA	640 x 480	75 Hz
6		648 x 500	57.7 Hz
7	VESA	800 x 600	56.25 Hz
8	VESA	800 x 600	60 Hz
9	VESA	800 x 600	72 Hz
10	VESA	800 x 600	75 Hz
11	MAC	832 x 624	74.55 Hz
12	VESA	1024 x 768	60 Hz
13	VESA	1024 x 768	70 Hz
14	VESA	1024 x 768	75 Hz
15	VESA	1152 x 864	75 Hz
16	VESA	1280 x 960	60 Hz
17	VESA	1280 x 1024	60 Hz
18	VESA	1280 x 1024	75 Hz
19	CVT	1440 x 900	60 Hz
20	CVT	1440 x 900	75 Hz


Monitor Block Diagram

The LCD MONITOR will contain a main board, a power board, and keypad board which house the flat panel control logic, brightness control logic and DDC.


The power board will provide AC to DC Inverter voltage to drive the backlight of panel and the main board chips each voltage.

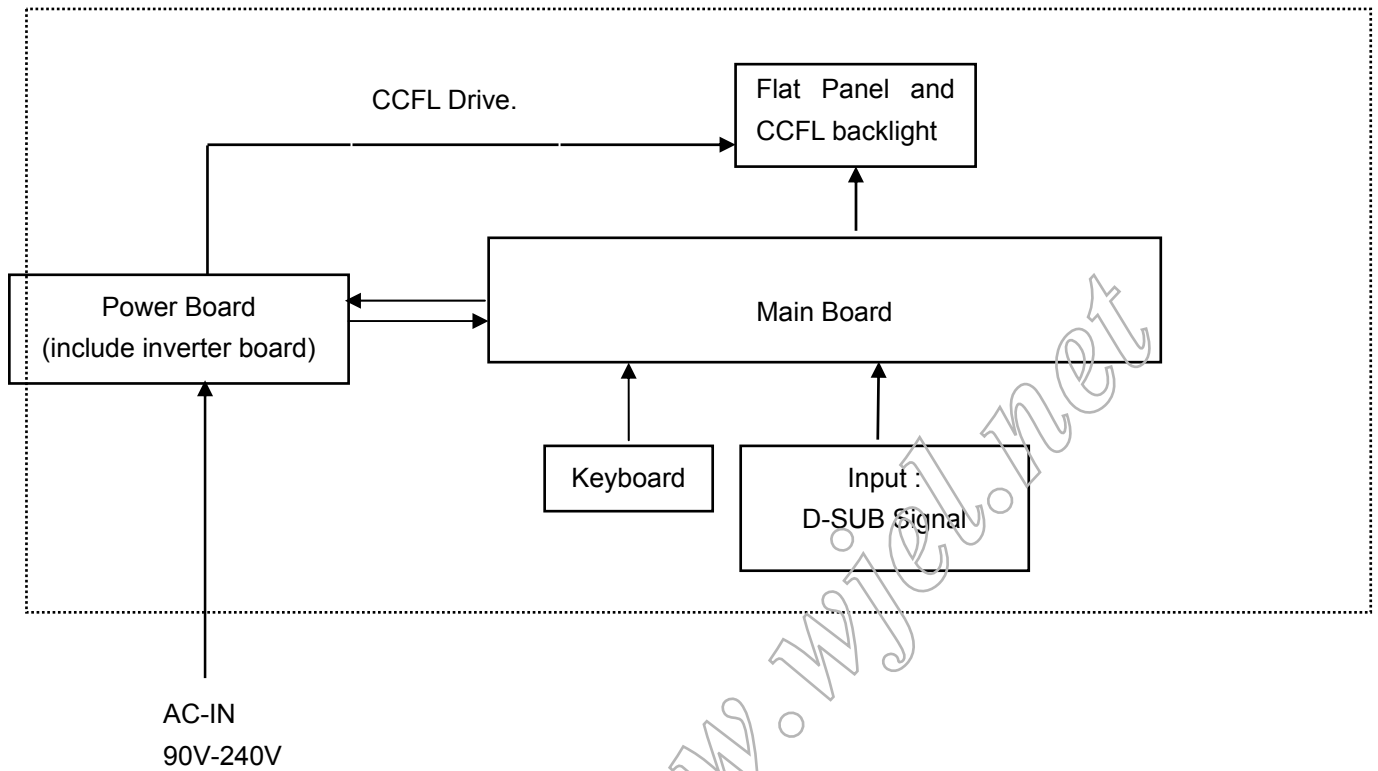

Main Board Diagram

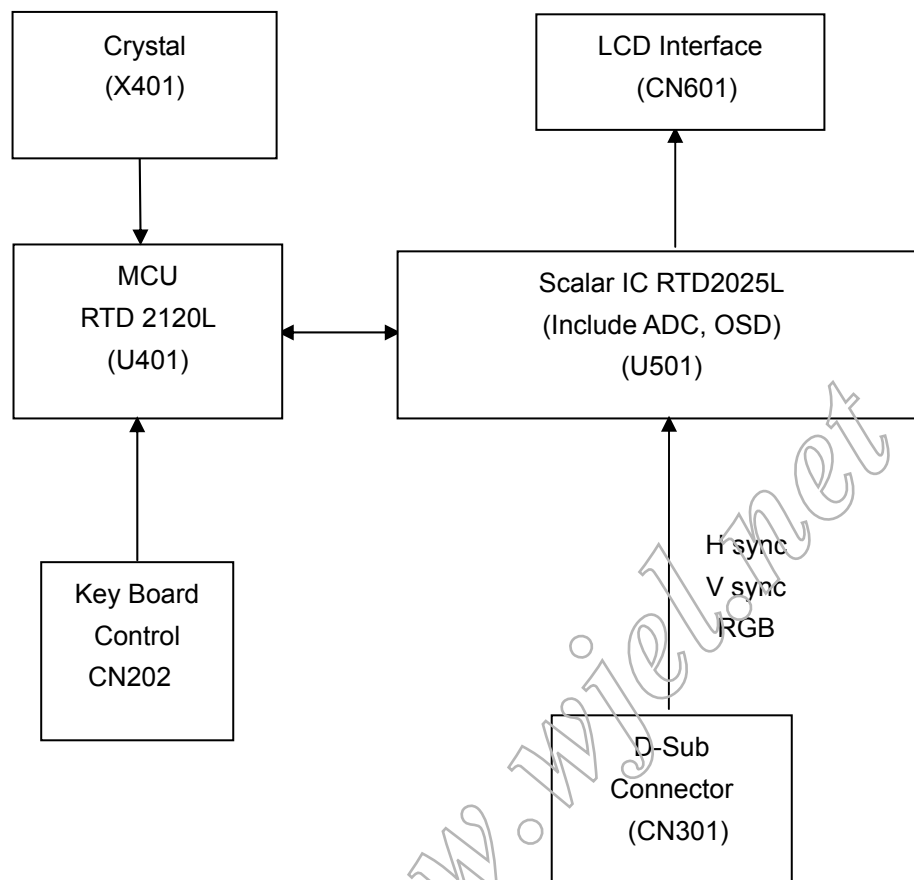


Software Flow Chart

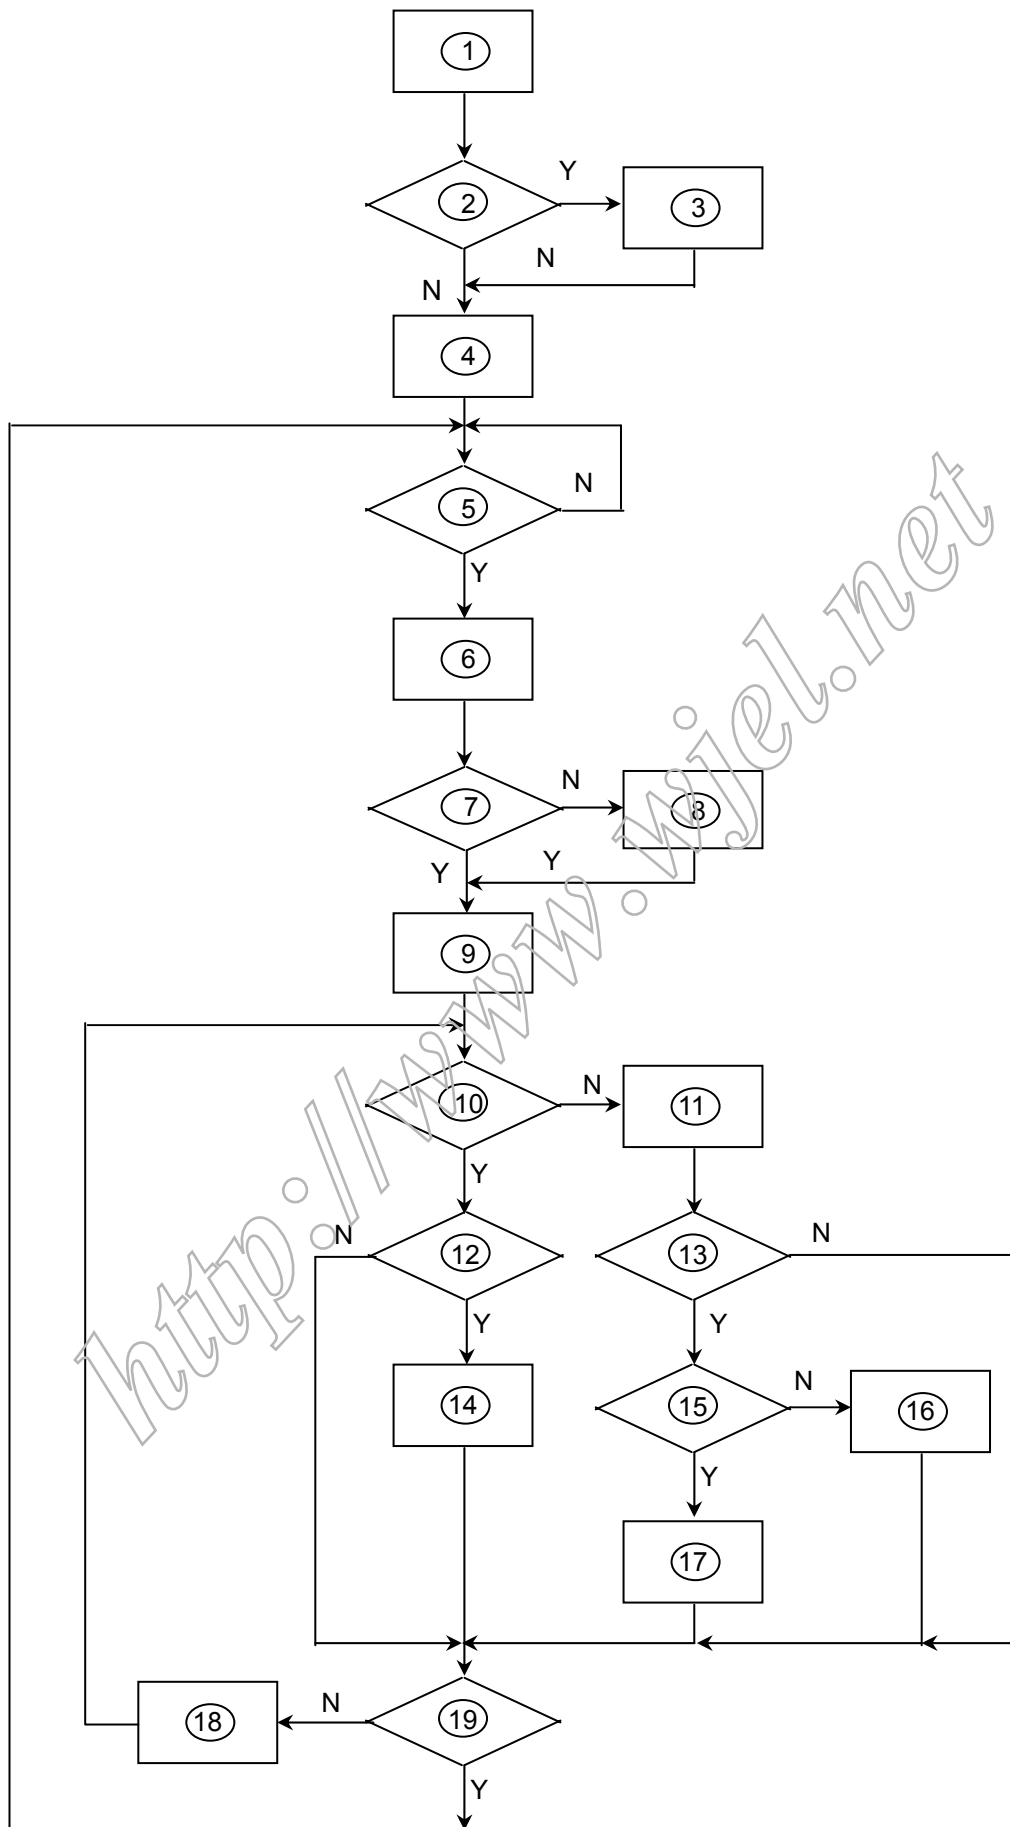

Remark:

1) MCU initializes.
2) Is the EEPROM blank?
3) Program the EEPROM by default values.
4) Get the PWM value of brightness from EEPROM.
5) Is the power key pressed?
6) Clear all global flags.
7) Are the AUTO and SELECT keys pressed?
8) Enter factory mode.
9) Save the power key status into EEPROM. Turn on the LED and set it to green color. Scalar initializes.
10) In standby mode?
11) Update the lifetime of back light.
12) Check the analog port, are there any signals coming?
13) Does the scalar send out an interrupt request?
14) Wake up the scalar.
15) Are there any signals coming from analog port?
16) Display "No connection Check Signal Cable" message. And go into standby mode after the message disappears.
17) Program the scalar to be able to show the coming mode.
18) Process the OSD display.
19) Read the keyboard. Is the power key pressed?

Main Board Layout

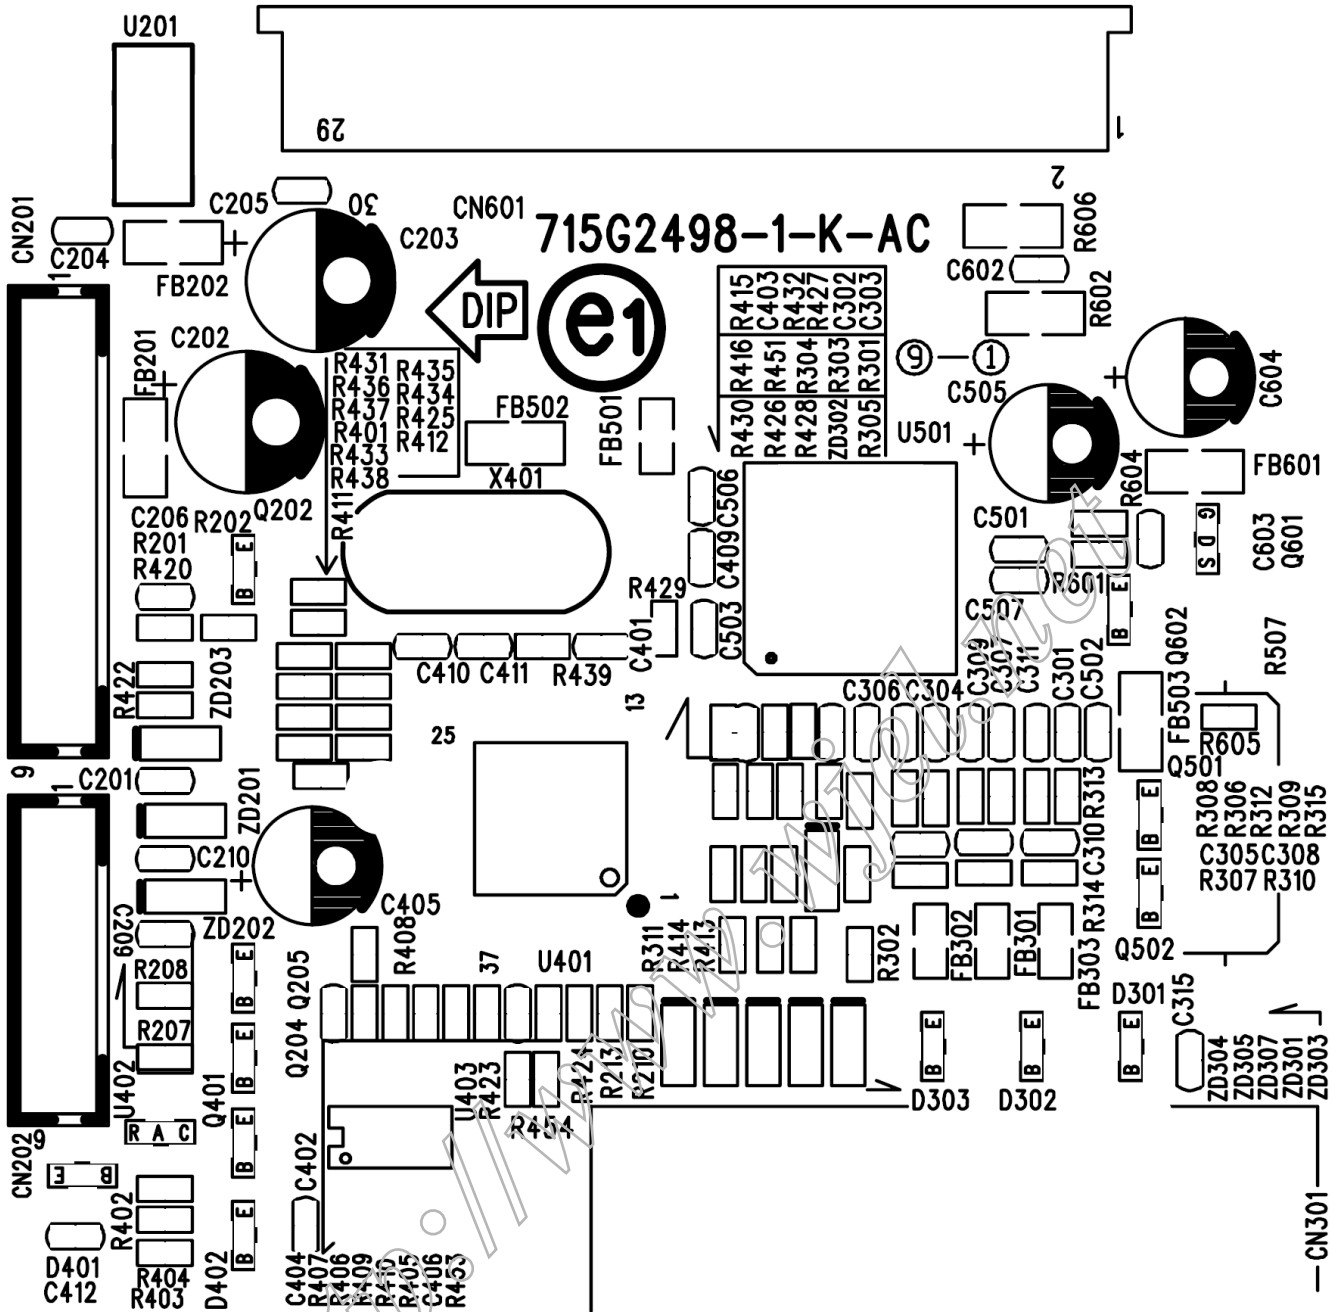


Symbol	Description	Symbol	Description
U201	056G 585 4A	X401	093G 22 45 H
U401	056G1125701 X	CN201	033G3802 9
U402	056G 158501	CN202	033G3802 6
U501	056G 562701	CN601	033G801930F CH JS

Installation

To install the monitor to your host system, please follow the steps as given below:

Steps


1. 1-1 Connect Video Cable
 - a. Make sure both the monitor and computer are powered-OFF.
 - b. Connect the VGA video cable to the computer.
- 1-2 Digital Cable (Only Dual-Input Model)
 - a. Make sure both the monitor and computer are powered-OFF.
 - b. Connect one end of the 24-pin DVI cable to the back of the monitor and connect the other end to the computer's port.
2. Connect power cord
Connect the power cord to the monitor, then to a properly grounded AC outlet.
3. Power-ON Monitor and Computer
Power-ON the monitor first, then power-ON the computer.
This sequence is very important.
4. If the monitor still does not function properly, please refer to the troubleshooting section to diagnose the problem.

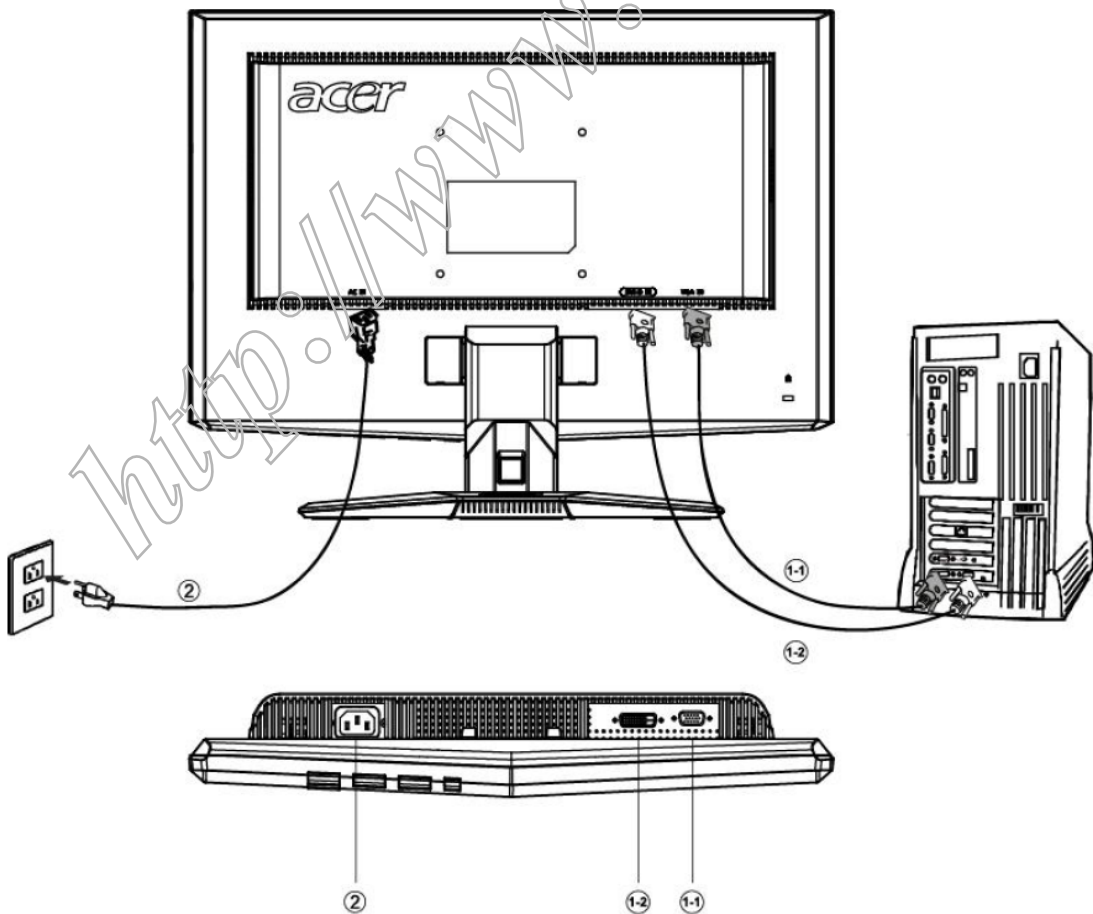

Attaching/Removing the Base


Install:

Align the release button on the bottom of the monitor with the corresponding slots on the bottom of the base.

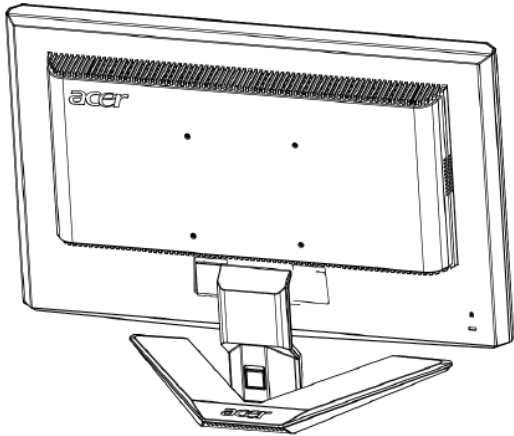

Remove:


Depress the release button as indicated first before removing the base and follow the arrow direction to remove it.

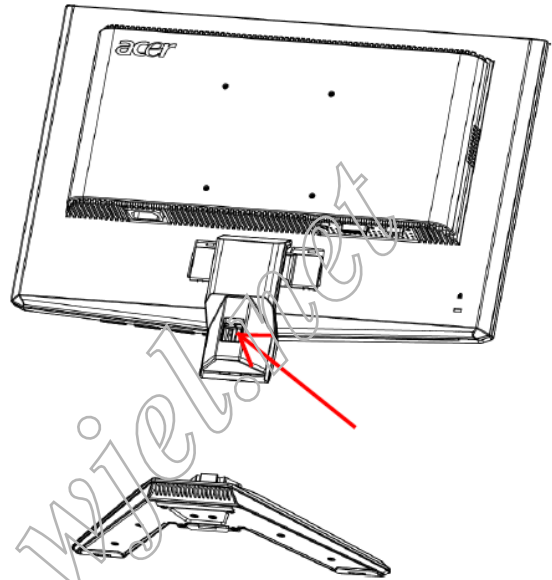

SCREEN POSITION ADJUSTMENT

In order to optimize the best viewing position, you can adjust the tilt of the monitor by using both of your hands to hold the edges of the monitor as shown in the figure below.


The monitor can be adjusted to 15 degrees up or 5 degrees down as indicated by arrow below.

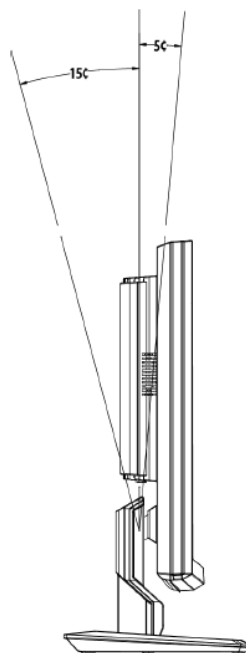

Press the power button to turn the monitor on or off. The other control buttons are located at front panel of the monitor. By changing these settings, the picture can be adjusted to your personal preferences.


- The power cord should be connected.
- Connect the video cable from the monitor to the video card.
- Press the power button to turn on the monitor position. The power indicator will light up.

External Controls

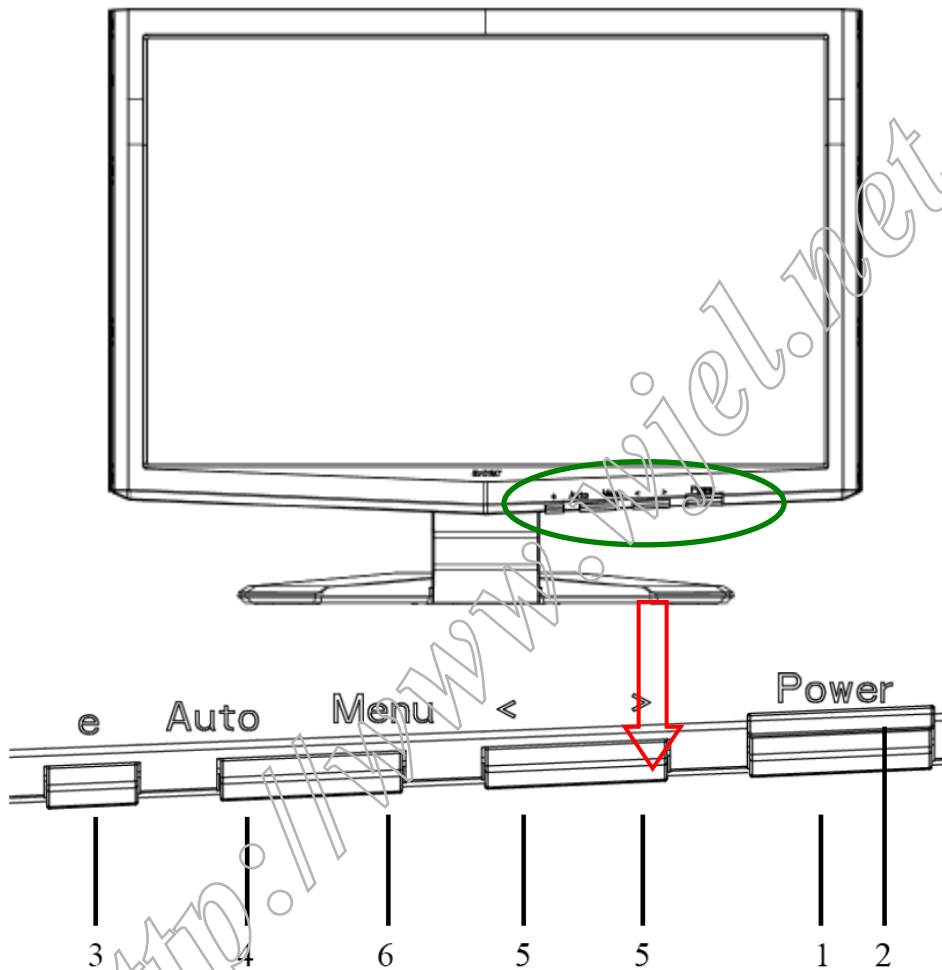

Item	Description	Item	Description
1.	Power Switch	4.	Auto Adjust botton/Exit
2.	Power LED	5.	< / >
3.	Empowering / Exit	6.	MENU/ENTER

Front Panel Control

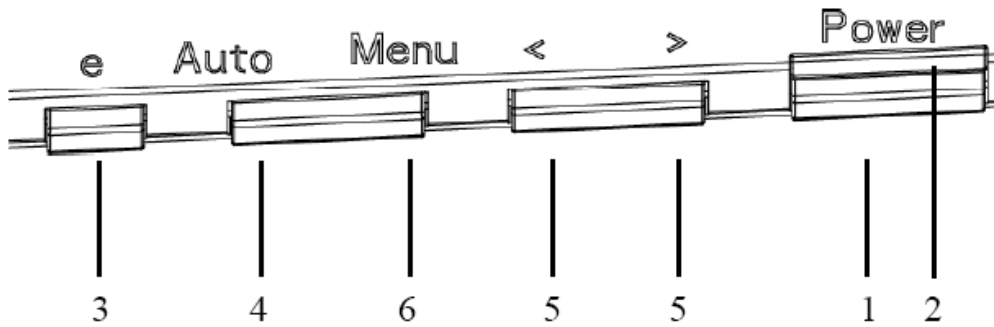

Front Panel Controls

1. Power Switch:

To turn ON or OFF the power.

2. Power LED:

Lights up to indicate the power is turned ON.

3. Empowering / Exit:

1) When OSD menu is in active status, this button will act as EXIT-KEY (EXIT OSD menu).

2) When OSD menu is in off status, press this button to select scenario mode.

4. Auto Adjust button / Exit:

1) When OSD menu is in active status, this button will act as EXIT-KEY (EXIT OSD menu).

2) When OSD menu is in off status, press this button for 2 seconds to activate the AutoAdjustment function. The Auto Adjustment function is used to set the HPos, VPos, Clock and Focus.


5. < / >

Press < or > to select the desired function. Press < or > to change the settings of the current function.

6. MENU / ENTER:


Activate OSD menu when OSD is OFF or activate/de-activate adjustment function when OSD is ON.

eColor Management (OSD)

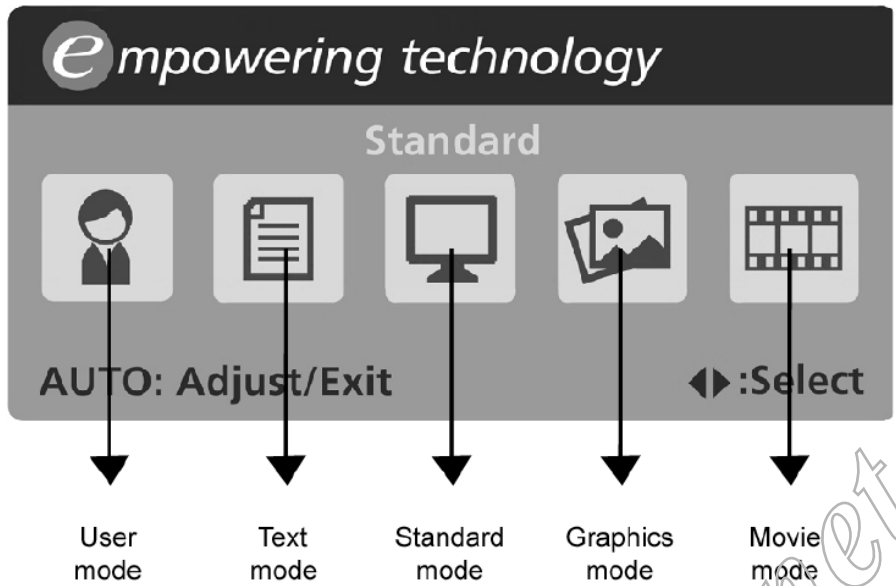

- Operation instructions

Acer eColor Management


- Step 1: Press "  Key " to open the Acer eColor Management OSD and access the scenario modes
- Step 2: Press "<" or ">" to select the mode
- Step 3: Press " Auto Key " to confirm the mode and run Auto Adjust

- Features and Benefits

Mode	Features	Benefits
Standard	Default settings	Reflects native display capability
Text	Optimal balance of brightness and contrast prevents eyestrain	The most comfortable way to read onscreen text
Graphics	Enhances colors and emphasizes fine detail	Pictures and photographs appear in vibrant colors with sharp detail
Movie	Displays scenes in clearest detail	Presents great visuals, even in unsuitably-lit environments
User	User defined	Settings can be fine-tuned to suit any situation

How to Adjust a Setting

1. Press the MENU-button to activate the OSD window.
 2. Press < or > to select the desired function.
 3. Press the MENU-button to select the function that you want to adjust.
 4. Press < or > to change the settings of the current function.
 5. To exit and save, select the exit function. If you want to adjust any other function, repeat steps 2-4.
- P/X Series OSD behave
When user press "MENU" button on front bezel

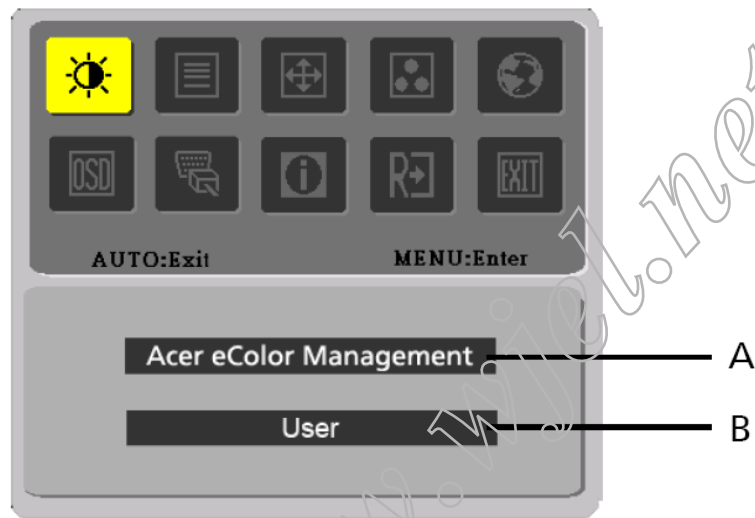

- A. Acer eColor Management
If selected to "Acer eColor Management" item, will appear the Acer eColor" OSD.
- B. USER
If selected to "USER" item, will appear the Standard OSD



I. Only Analog Input Model








II. Only Dual Input Model








Adjusting the picture









The descriptions for function control LEDs


 






A. Acer eColor Management

Main Menu icon	Sub Menu icon	Sub Menu item	Description
	N/A	User mode	User defined. Settings can be fine-tuned to suit any situation
	N/A	Text mode	Optimal balance of brightness and contrast prevent eyestrain. The most comfortable way to read onscreen text
	N/A	Standard mode	Default Setting. Reflects native display capability
	N/A	Graphic mode	Enhances colors and emphasize fine detail
	N/A	Movie mode	Displays scenes in clearest detail. Pictures and photographs appear in vibrant colors with sharp detail!

B. USER

Main Menu icon	Sub Menu icon	Sub Menu item	Description
		Contrast	Adjust the contrast between the foreground and background of the screen image
		Brightness	Adjust the background brightness of the screen image
		ACM	ACM (Adaptive Contrast Management)A CM ON/OFF Switch, default "OFF"
		Focus	Adjust picture Focus (available in analog mode only)
		Clock	Adjust picture Clock (available in analog mode only)

Main Menu Icon	Sub Menu Icon	Sub Menu Item	Description
		H. Position	Adjust the horizontal position. (available in Analog mode only)
		V. Position	Adjust the vertical position. (available in Analog mode only)
	N/A	Warm	Set the color temperature to warm white.
	N/A	Cool	Set the color temperature to cool white.
		User /Red	Adjusts Red/Green/Blue intensity.
		User /Green	
	User /Blue		
	N/A	English	Multi-language selection.
	N/A	繁體中文	
	N/A	Deutsch	
	N/A	Francais	
	N/A	Espanol	
	N/A	Italiano	
	N/A	简体中文	
	N/A	日本語	
	N/A	Suomi	EMEA version OSD only
	N/A	Nederlands	
	N/A	Рысскнн	

Main Menu Icon	Sub Menu Icon	Sub Menu Item	Description
		H. Position	Adjust the horizontal position of the OSD.
		V. Position	Adjust the vertical position of the OSD.
		OSD Timeout	Adjust the OSD timeout.
	N/A	Analog	Select input signal from analog (D-Sub)
	N/A	Digital (only Dual-Input Model)	Select input signal from digital (DVI) (only Dual-Input Model)
	N/A	DDC/CI	Turn ON/OFF DDC/CI support
	N/A	Information	Show the resolution, H/V frequency and input port of current input timing.
	N/A	Reset	Clear each old status of Auto-configuration and set the color temperature to Cool.
	N/A	Exit	Save user adjustment and OSD disappear.

OSD Message

a. Outline



b. The Description For OSD Message

Item	Description
Auto Config Please Wait	When Analog signal input, if User Press Hot-Key "Auto", will show this message, and the monitor do the auto config function.
Input Not Supported	When the Hsync Frequency, Vsync Frequency or Resolution is out of the monitor support range, will show this message. This message will be flying.
Cable Not Connected	Analog-Only Model: When the video cable is not connected, will show this message. This message will be flying.
No Signal	Analog-Only Model: When the video cable is connected, but there is no active signal input, will show this message, then enter power saving.

Logo

When the monitor is power on, the LOGO will be showed in the center, and disappear slowly.



How To Optimize The DOS-Mode

Plug And Play

Plug & Play DDC2B Feature

This monitor is equipped with VESA DDC2B capabilities according to the VESA DDC STANDARD. It allows the monitor to inform the host system of its identity and, depending on the level of DDC used, communicate additional information about its display capabilities.

The DDC2B is a bi-directional data channel based on the I²C protocol. The host can request EDID information over the DDC2B channel.

This monitor will appear to be non-functional if there is no video input signal. In order for this monitor to operate properly, there must be a video input signal.

This monitor meets the Green monitor standards as set by the Video Electronics Standards Association (VESA) and/or the United States Environmental Protection Agency (EPA) and The Swedish Confederation Employees (NUTEK). This feature is designed to conserve electrical energy by reducing power consumption when there is no video-input signal present. When there is no video input signals this monitor, following a time-out period, will automatically switch to an OFF mode. This reduces the monitor's internal power supply consumption. After the video input signal is restored, full power is restored and the display is automatically redrawn. The appearance is similar to a "Screen Saver" feature except the display is completely off. Pressing a key on the keyboard, or clicking the mouse restores the display.

Using The Right Power Cord

The accessory power cord for the Northern American region is the wallet plug with NEMA 5-15 style and is UL listed and CSA labeled. The voltage rating for the power cord shall be 125 volts AC.

Supplied with units intended for connection to power outlet of personal computer: Please use a cord set consisting of a minimum No. 18 AWG, type SJT or SVT three conductors flexible cord. One end terminates with a grounding type attachment plug, rated 10A, 250V, and CEE-22 male configuration. The other end terminates with a molded-on type connector body, rated 10A, 250V, having standard CEE-22 female configuration.

Please note that power supply cord needs to use VDE 0602, 0625, 0821 approval power cord in European counties.

This chapter contains step-by-step procedures on how to disassemble the monitor for maintenance.

Disassembly Procedure

1. Remove the cover hinge marked in red. (Fig 1)

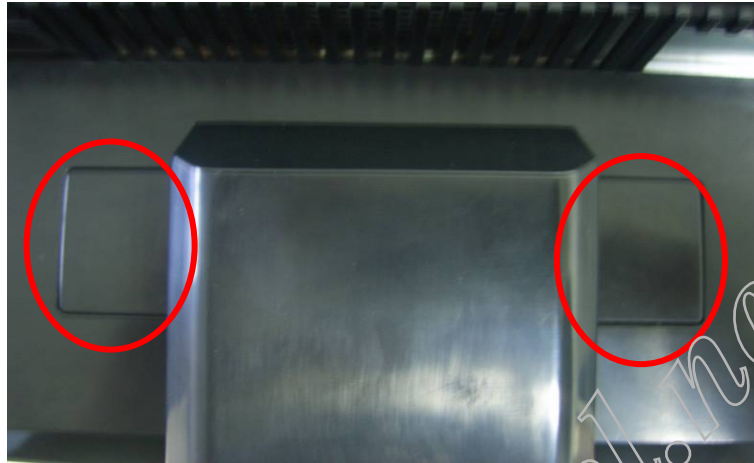


Fig 1

2. Remove the screws to release base stand . (Fig 2)

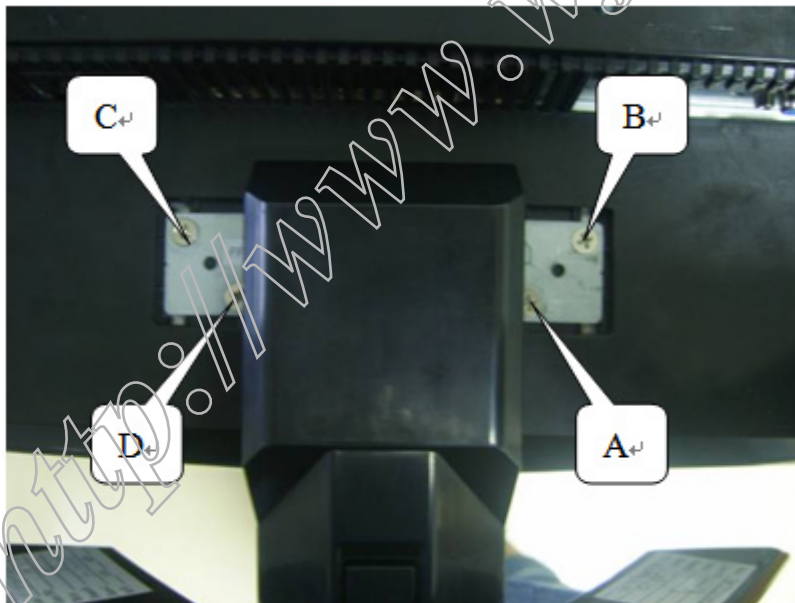


Fig 2

3. Remove the back cover and regard the hook. (Fig 3-4)



Fig 3



Fig 4

4. Remove the bezel. (Fig 6)



Fig 5

5. Remove the keyboard. (Fig 6)



Fig 6

6. Remove the screws to remove the panel. (Fig 7-10)



Fig 7

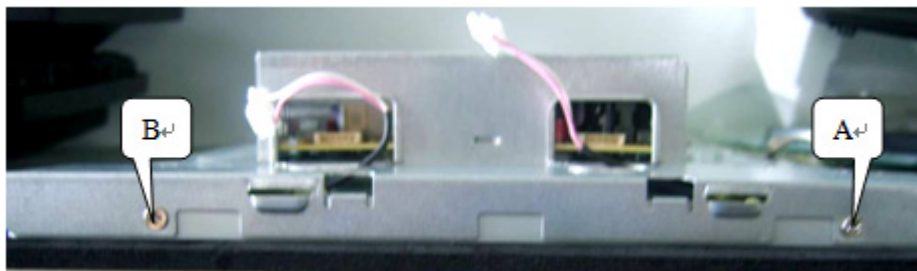


Fig 8



Fig 9



Fig 10

7. Remove the screw as following indicate to remove the main board and power board. (Fig 11-13)

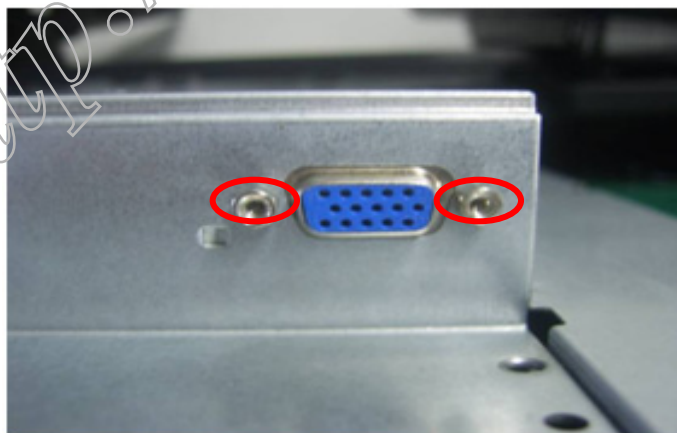


Fig 11

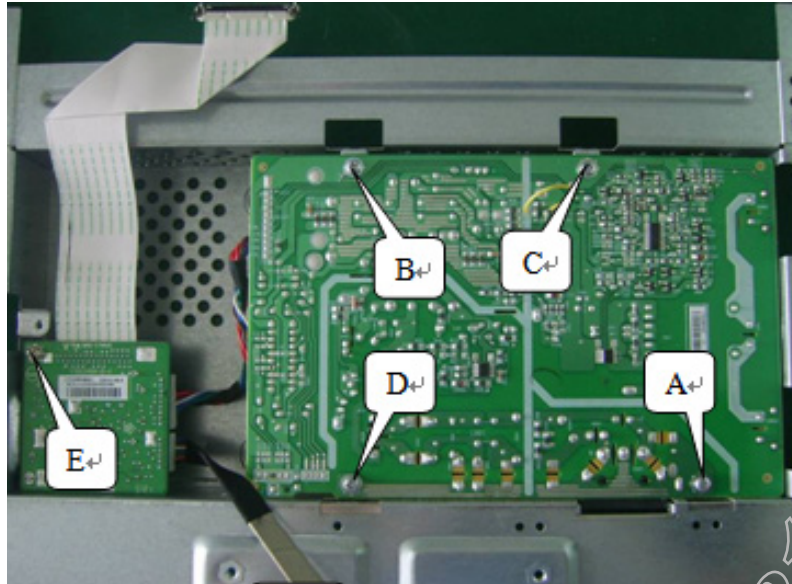


Fig 12


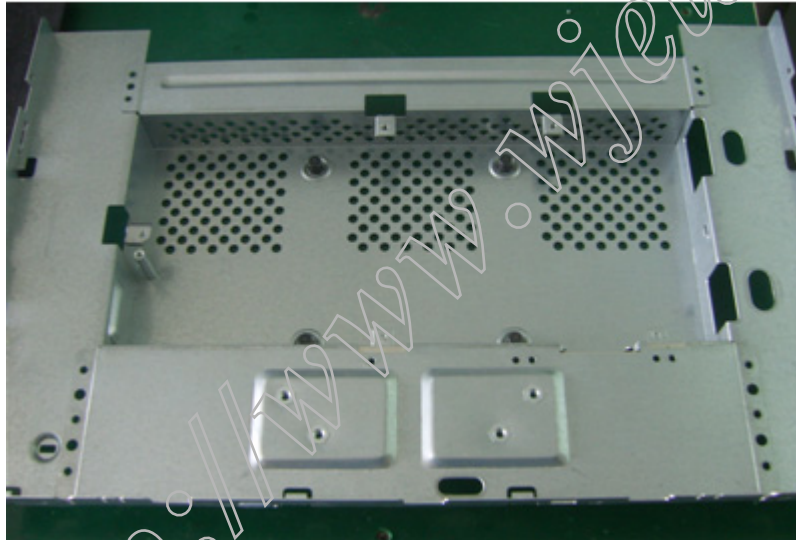



Fig 13

This chapter provides troubleshooting information for the X173W:


1. No Power

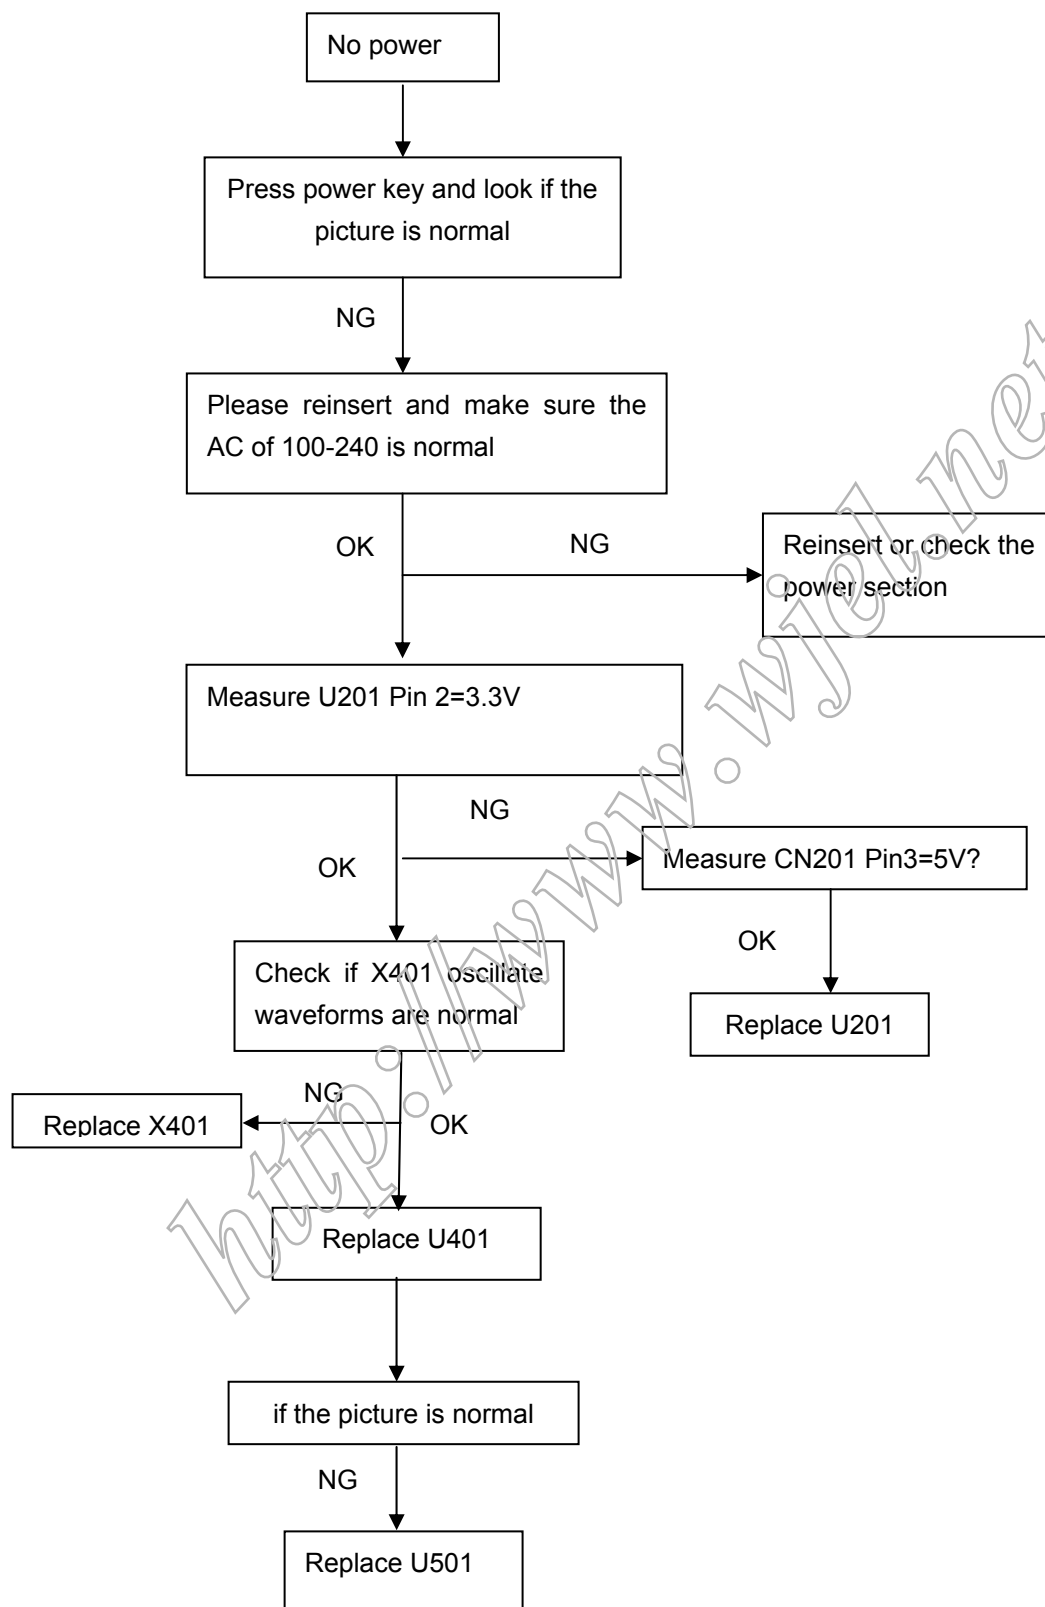


2. No Picture

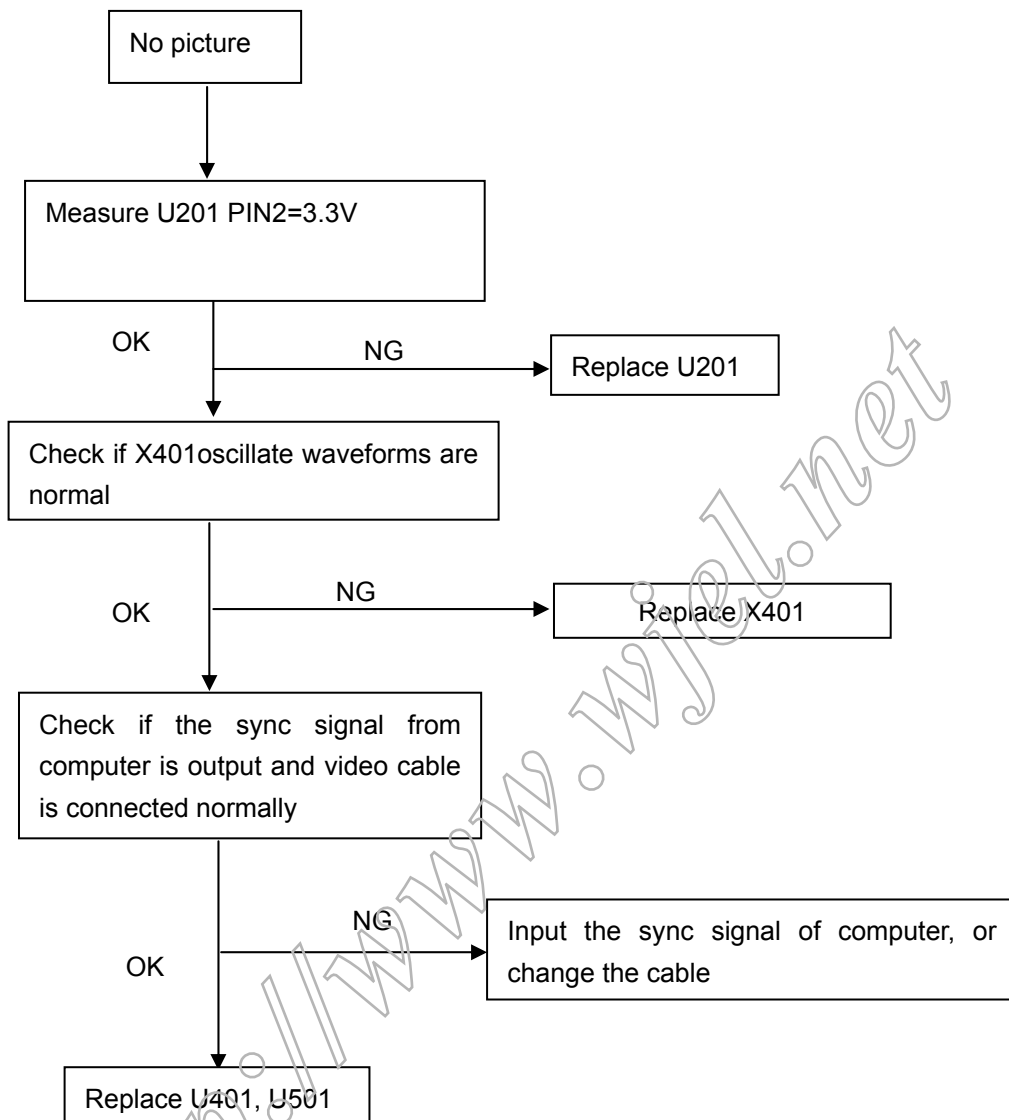


3. Panel Power Circuit

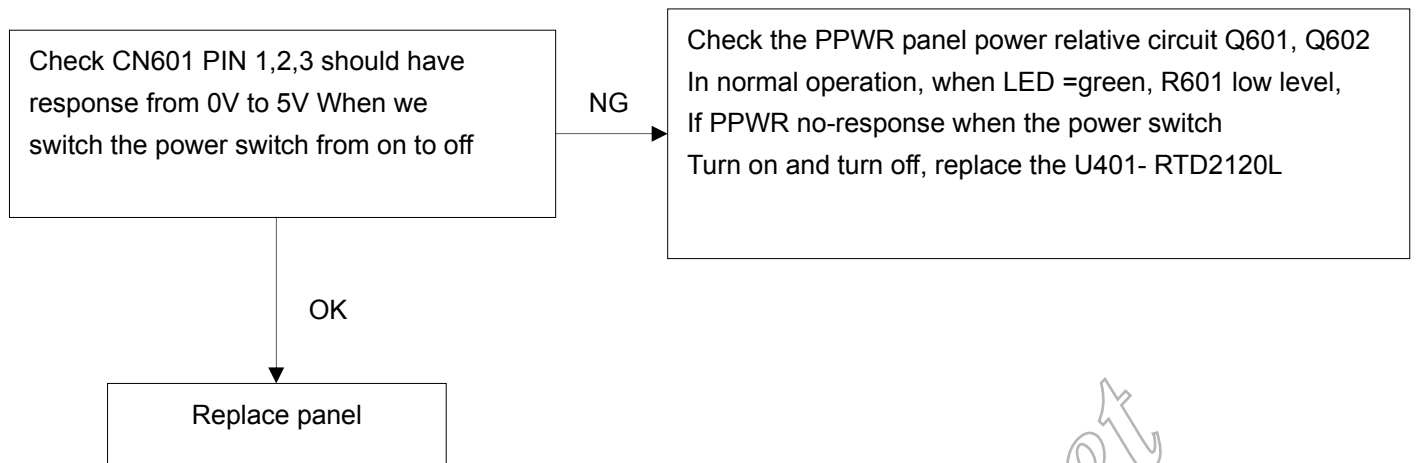

4. Keypad Board

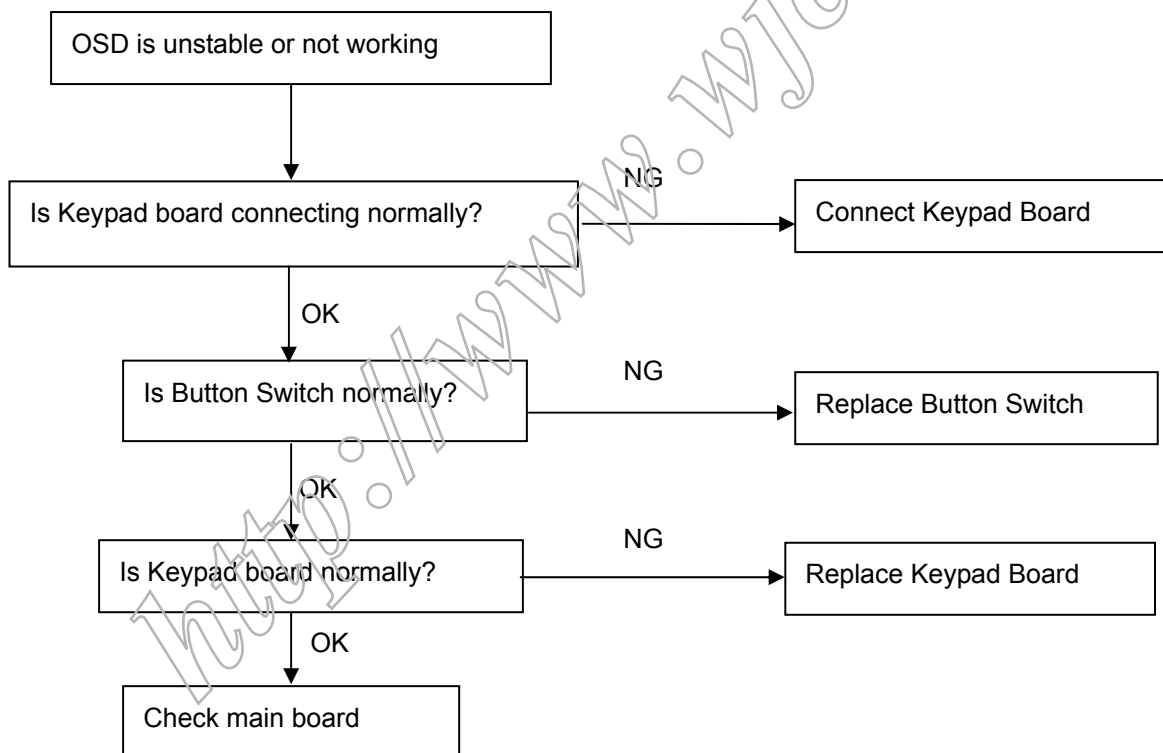


5. No Backlight

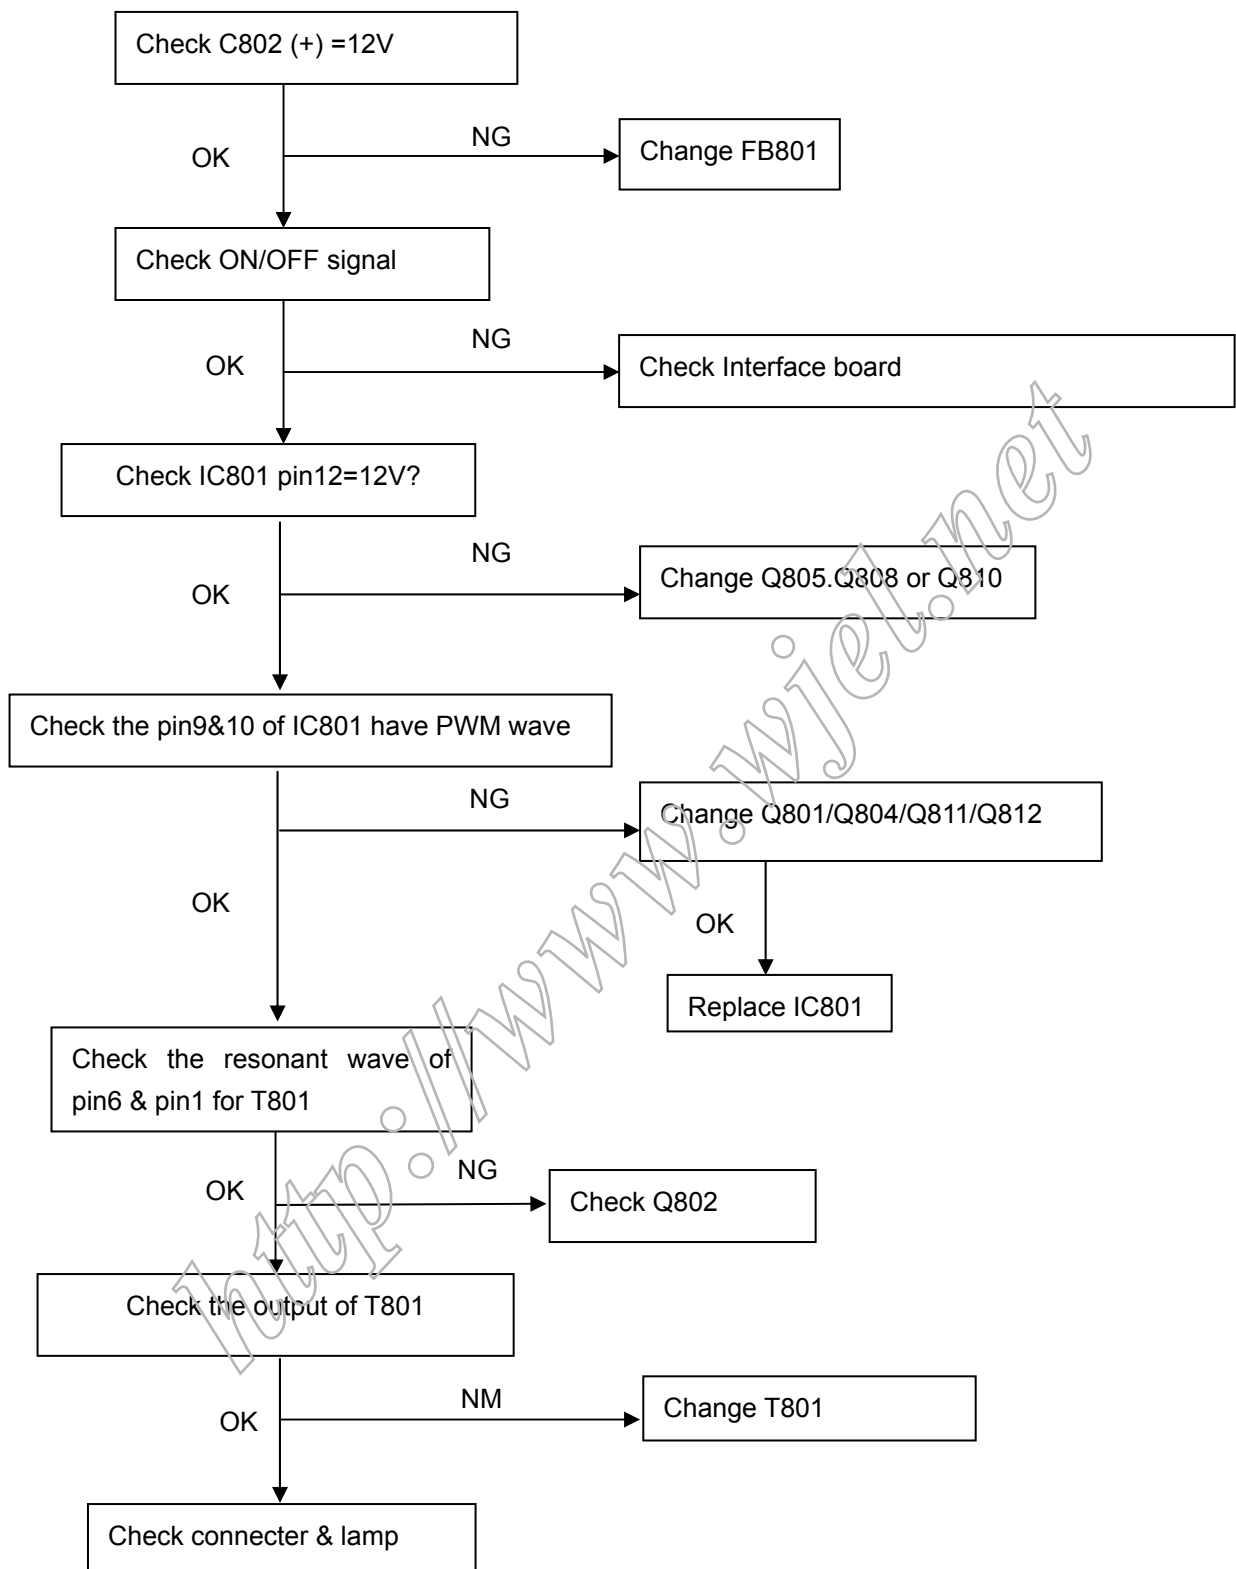


The following figure shows the connector locations on the monitor:

CONNECTOR PIN ASSIGNMENT

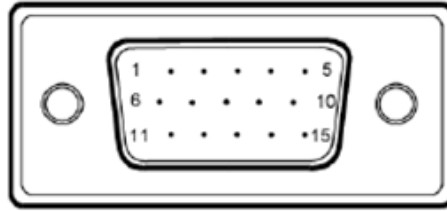

PIN NO.	DESCRIPTION	PIN NO.	DESCRIPTION
1.	Red	9.	+5V
2.	Green	10.	Logic Ground
3.	Blue	11.	Monitor Ground
4.	Monitor Ground	12.	DDC-Serial Data
5.	DDC-return	13.	H-Sync
6.	R-Ground	14.	V-Sync
7.	G-Ground	15.	DDC-Serial Clock
8.	B-Ground		

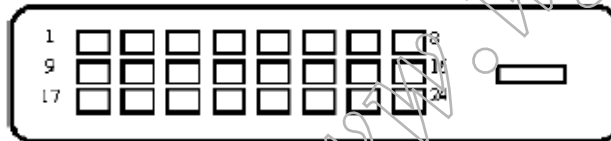

24-Pin Color Display Signal Cable

PIN	Meaning	PIN	Meaning
1.	TMDS Data2-	13.	TMDS Data3+
2.	TMDS Data2+	14.	+5V Power
3.	TMDS Data 2/4 Shield	15.	GND(return for +5V hsync.vsync)
4.	TMDS Data4-	16.	Hot Plug Detect
5.	TMDS Data4+	17.	TMDS Data0-
6.	DDC Clock	18.	TMDS Data0+
7.	DDC Data	19.	TMDS Data 0/5 Shield
8.	Analogue Vertical Sync	20.	TMDS Data5-
9.	TMDS Data1-	21.	TMDS Data5+
10.	TMDS Data1+	22.	TMDS Clock Shield
11.	TMDS Data 1/3 Shield	23.	TMDS Clock+
12.	TMDS Data3-	24.	DDC TMDS Clock-


This chapter gives you the FRU (Field Replaceable Unit) listing in global configurations of X173W. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).

NOTE: Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel (<http://aicsl.acer.com.tw/spl/>). For whatever reasons a part number change is made, it will not be noted in the printed Service Guide. For ACER AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code from those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

NOTE: To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how to dispose it properly, or follow the rules set by your regional Acer office on how to return it.




<http://www.wjel.net>

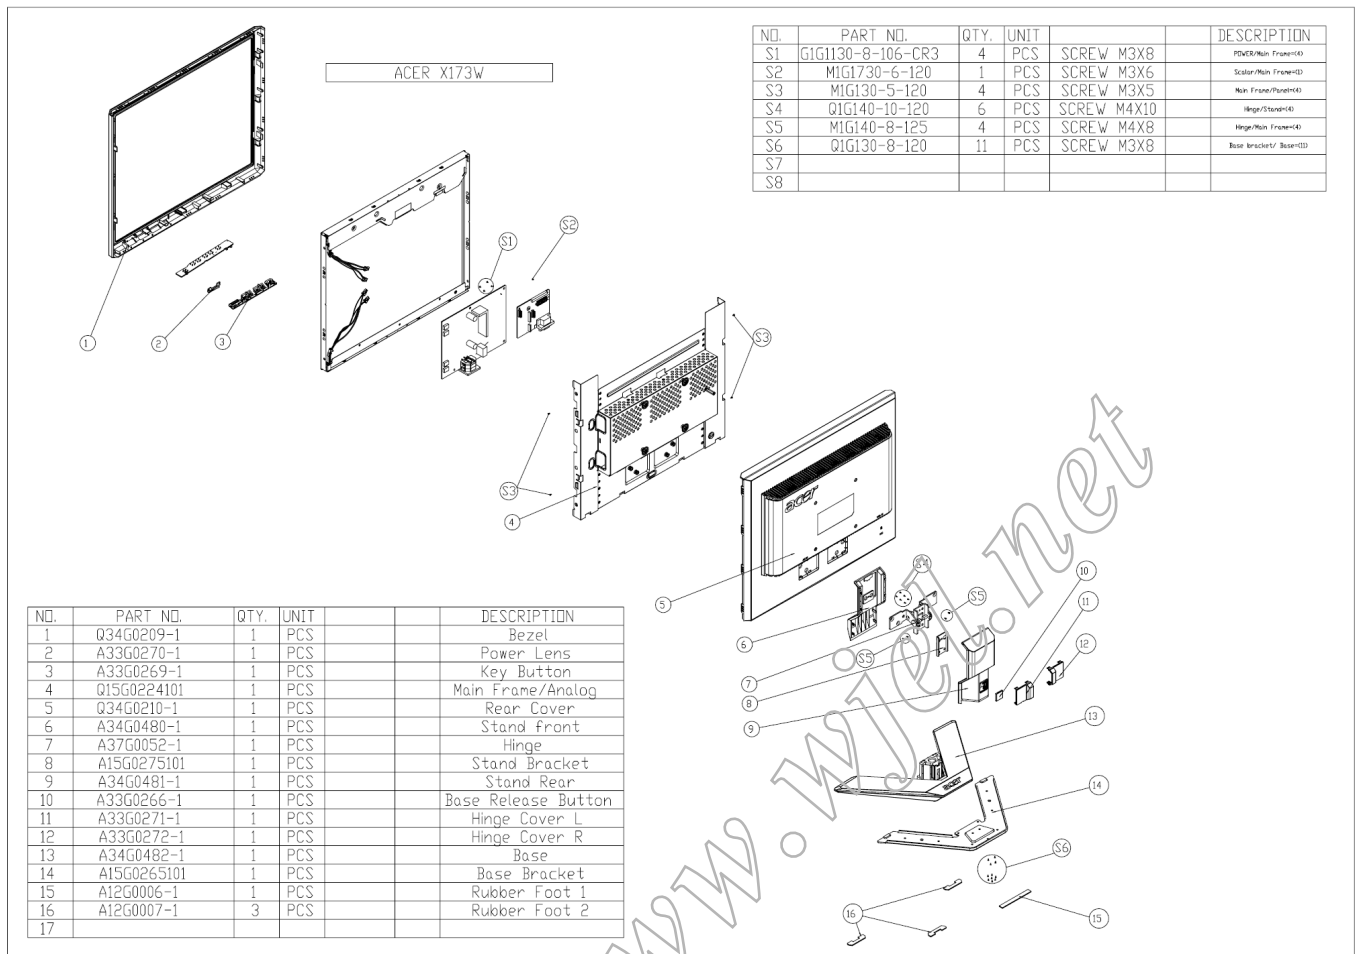Exploded Diagram (Model: X173W)




Part List

Above picture show the description of the following component.

Item	Picture	Description
1		Base
2		shield
3		Key board
4		Panel

5

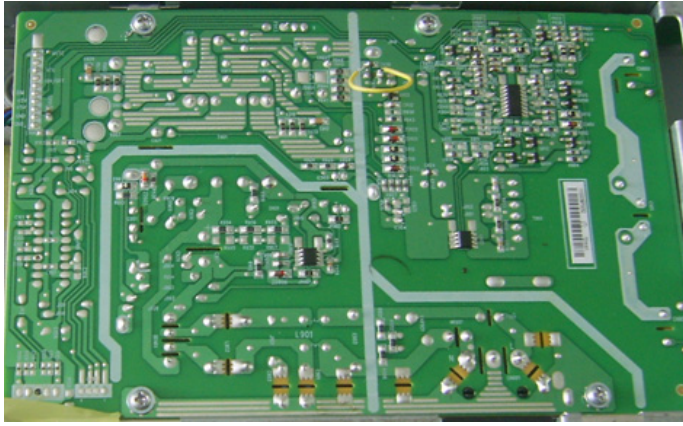

Power Board






6






Main Board

<http://www.wjel.net>


Main Board

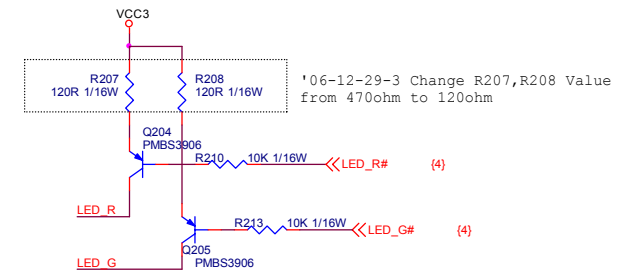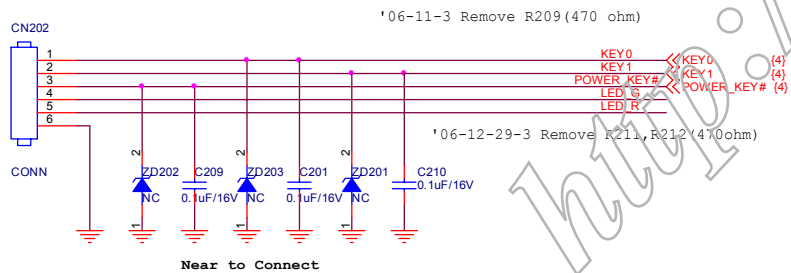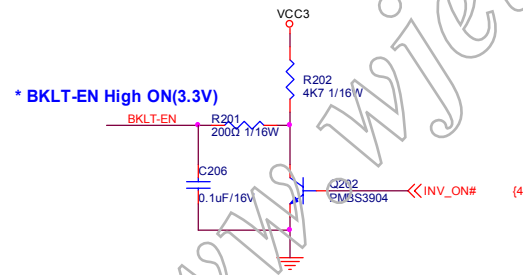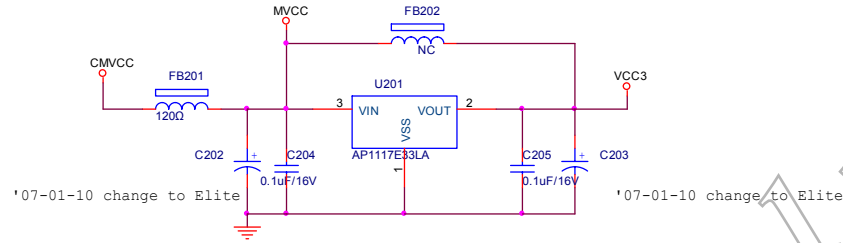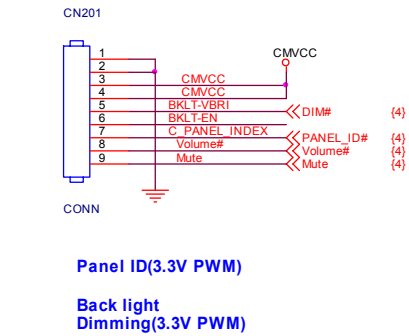


TPV (Top Victory Electronics Co., Ltd.)	OEM MODEL	X173	Size	B
经隔瓜铜版 G2498-1-K-AC-1-070707	TPV MODEL	T77SRDDNHABN	Rev	1
Key Component 02.POWER	PCB NAME	715G2498-1-K-AC	称	
Date Monday, July 09, 2007	Sheet	2 of 6		

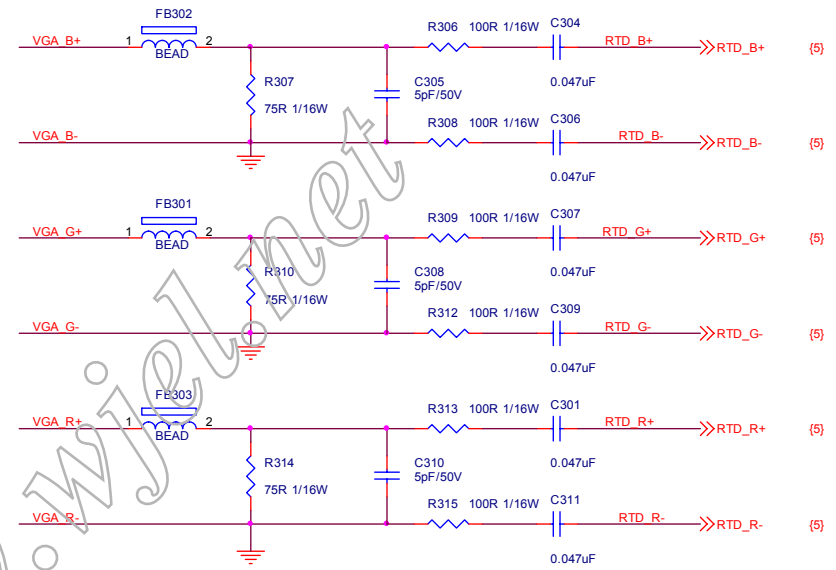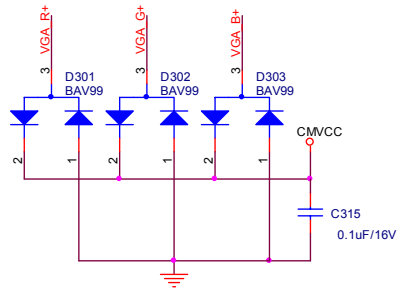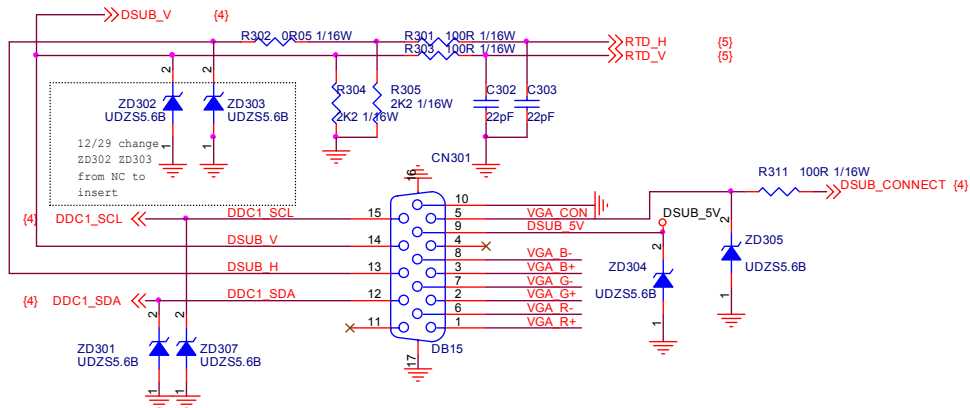

TPV (Top Victory Electronics Co., Ltd.)	OEM MODEL	X173	Size	B
話隔瓜網銀	TPV MODEL	T77SRDDNHSABN	Rev	1
Key Component	03.input	PCB NAME	715G2498-D-K	稼働
Date	Monday, July 09, 2007	Sheet	3 of 6	

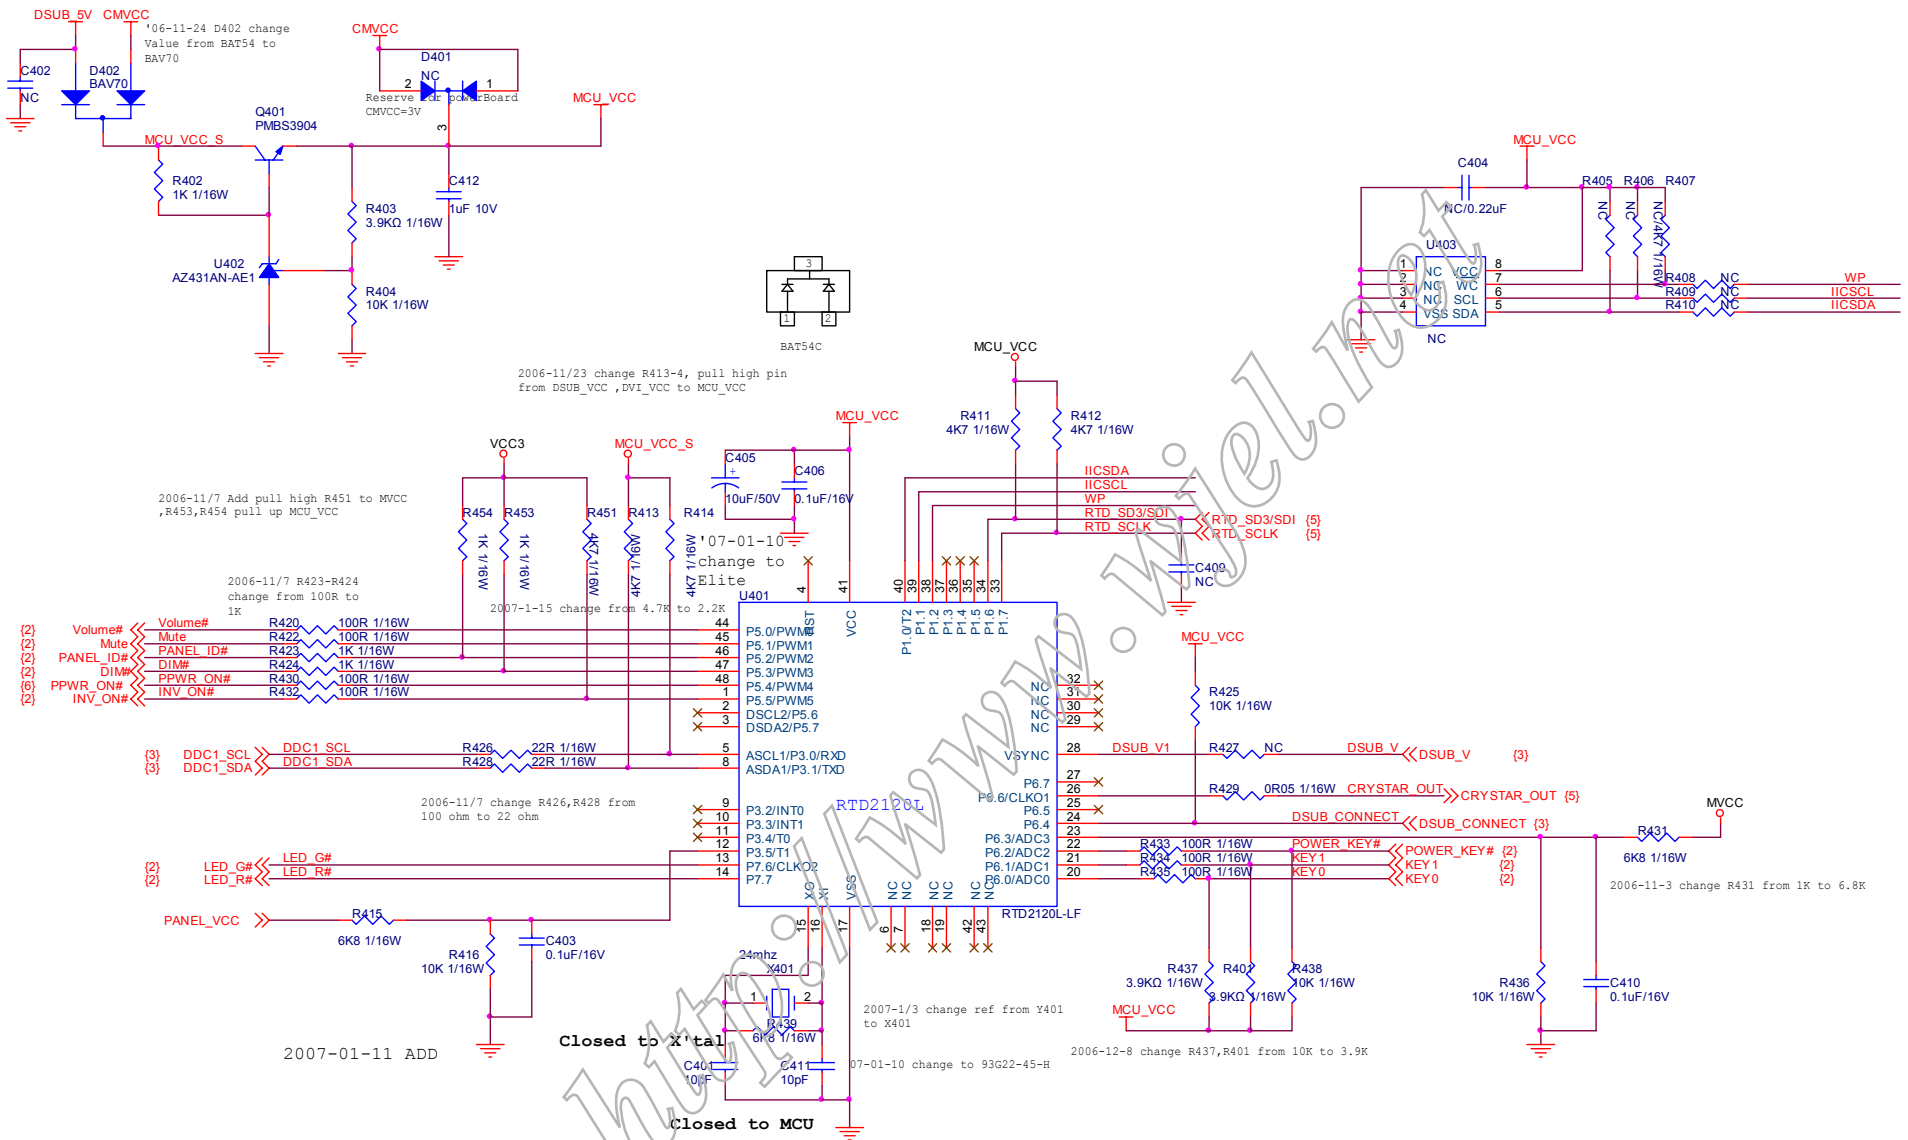


TPV (Top Victory Electronics Co., Ltd.)	OEM MODEL	X173	Size	B
銘爾瓜維	G2498-1-K-AC-1-070707	TPV MODEL	T77SRDDNHSABN	Rev
Key Component	04.MCU/RTD2120L	PCB NAME	715G2498-1-K-AC	Rev
Date	Monday, July 09, 2007	Sheet	4 of 6	修參

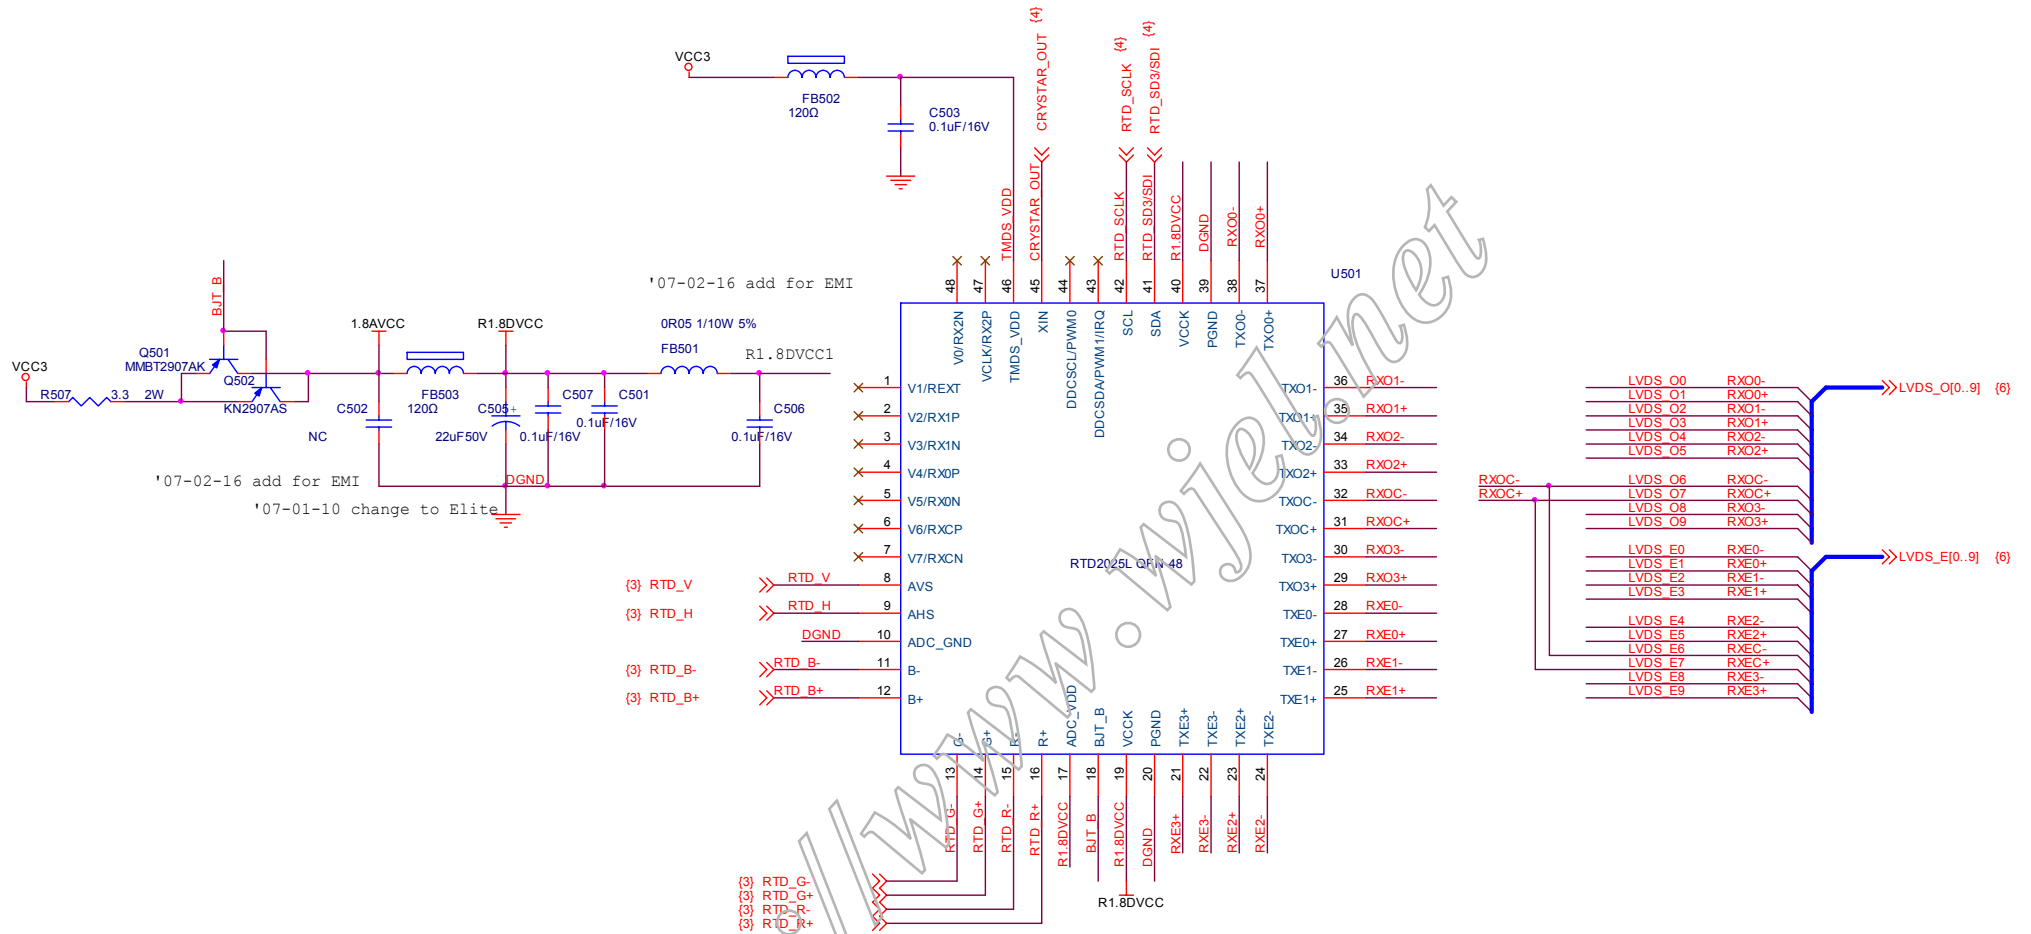


TPV (Top Victory Electronics Co., Ltd.)	OEM MODEL	X173	Size	B
結構圖	G2498-1-K-AC-1-070707	TPV MODEL	T77SRDDNHSABN	Rev
Key Component	05.RTD2525L	PCB NAME	715G2498-1-K-AC	稱號
Date	Monday, July 09, 2007	Sheet	5 of 6	

LVDS Panel (FFC Type)

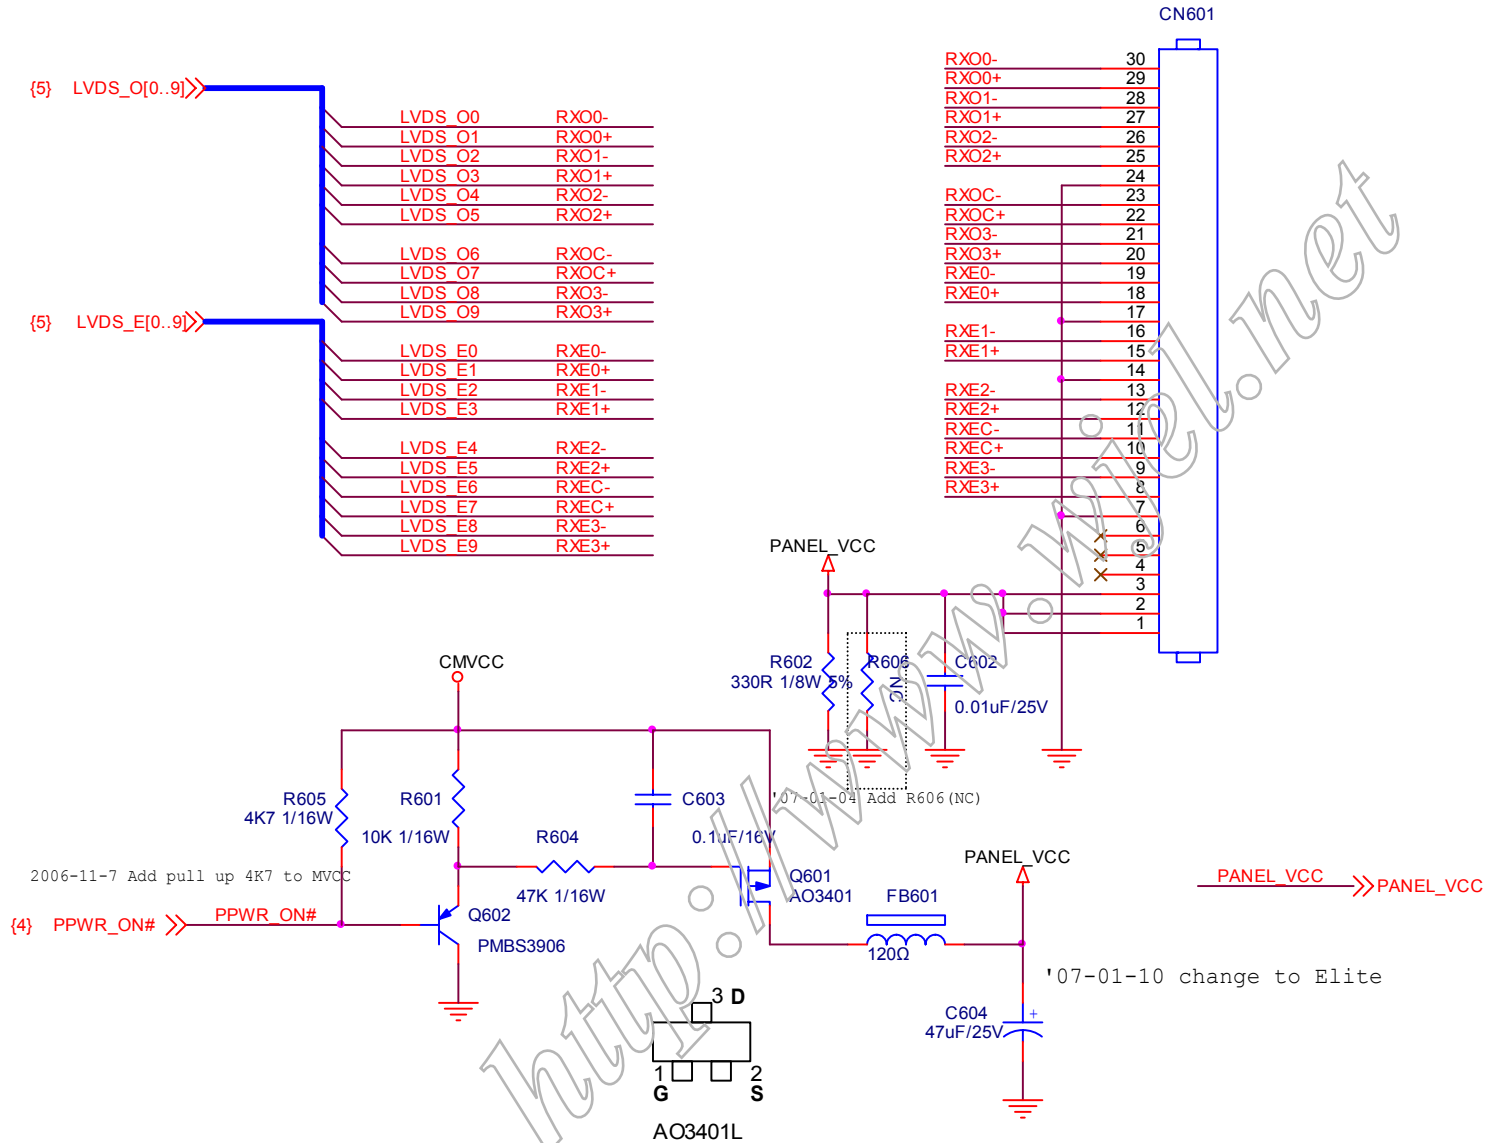


TPV (Top Victory Electronics Co., Ltd.)		OEM MODEL	X173	Size	A
結隔瓜網腹	G2498-1-K-AC-1-070707	TPV MODEL	T77SRDDNHSABN	Rev	1
Key Component	06.OUTPUT	PCB NAME	715G2498-1-K-AC	称爹	
Date	Monday, July 09, 2007	Sheet	6 of 6		

Power board

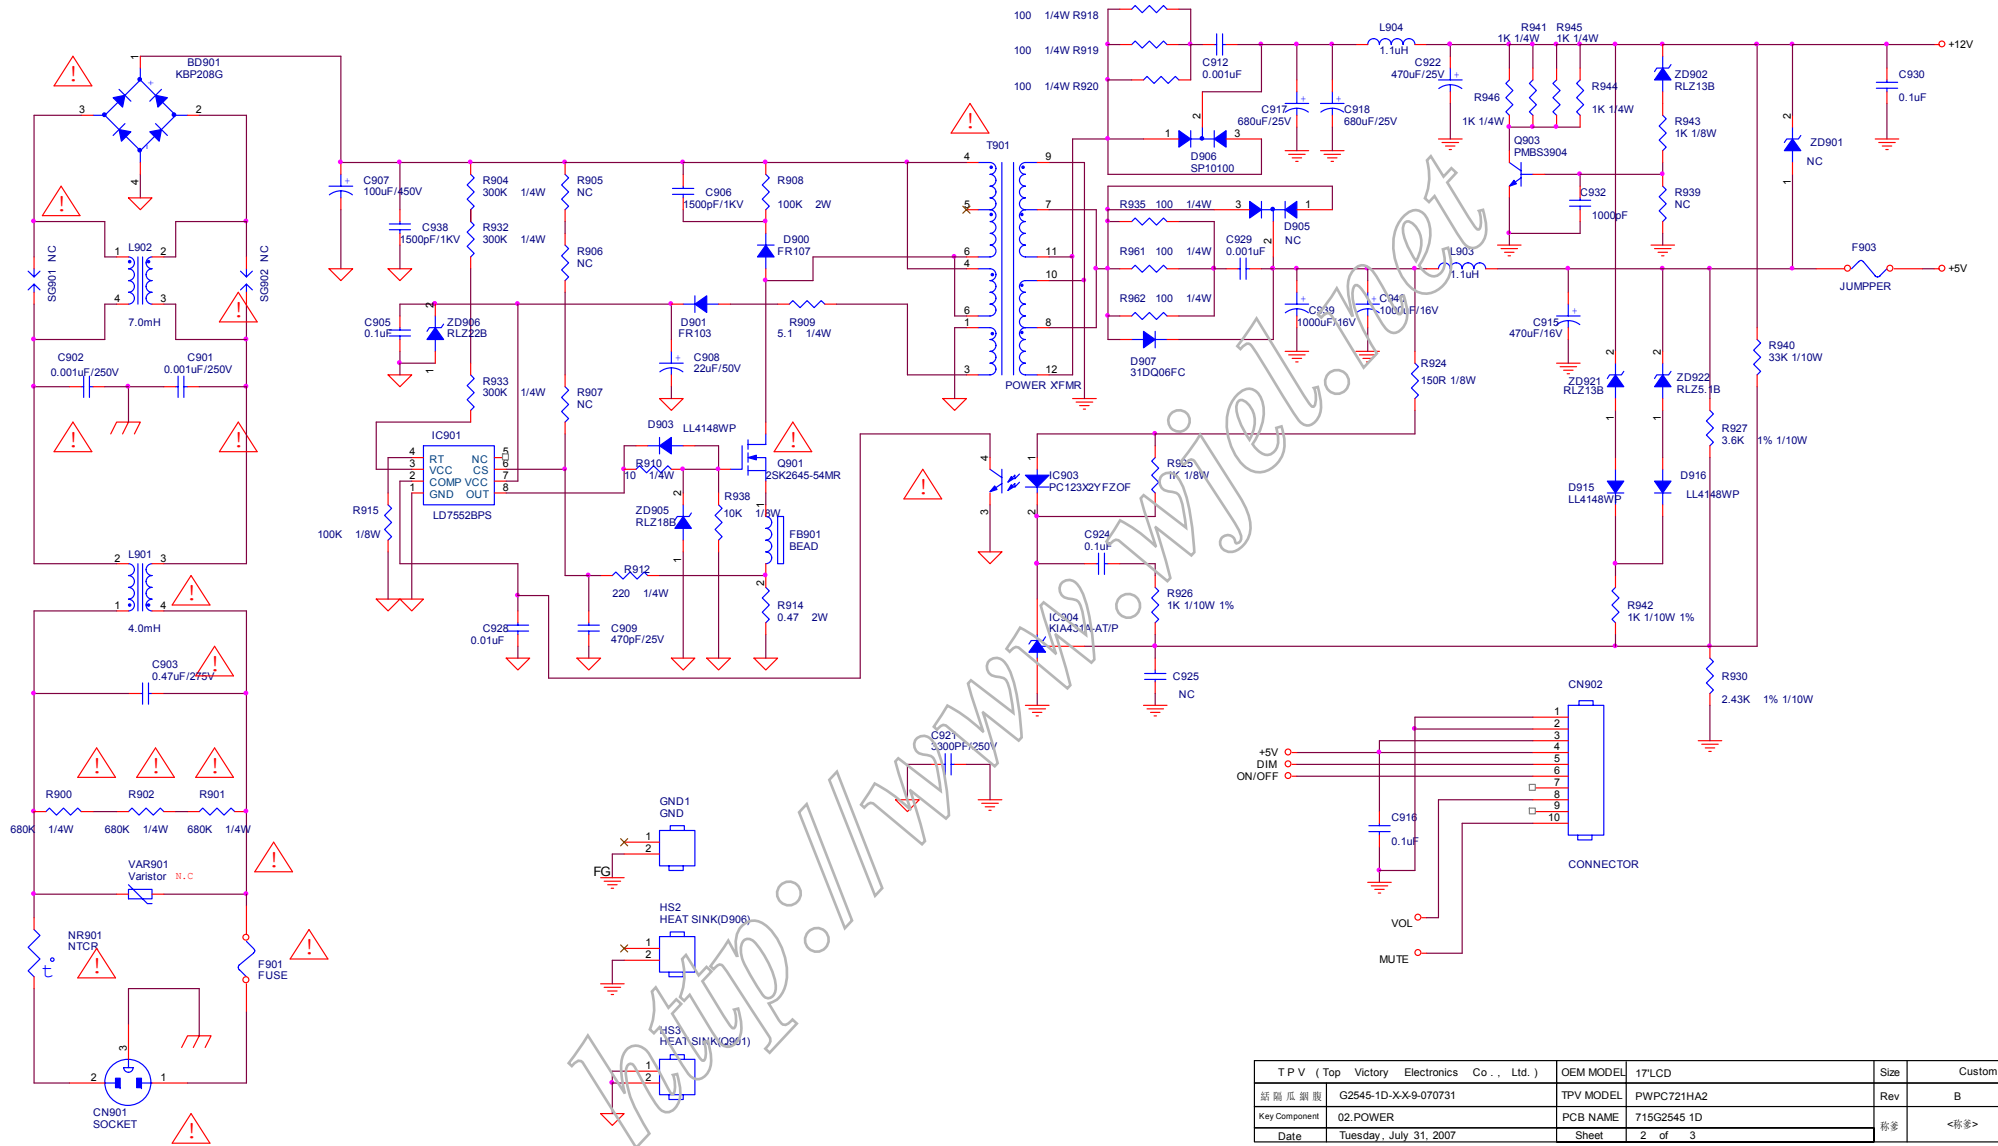

TPV (Top Victory Electronics Co., Ltd.)	OEM MODEL	17LCD	Size	Custom
話語瓜製版	G2545-1D-X-X-9-070731	TPV MODEL	PWPCT21HA2	Rev
Key Component	02-POWER	PCB NAME	715G2545 1D	修委
Date	Tuesday, July 31, 2007	Sheet	2 of 3	<修委>

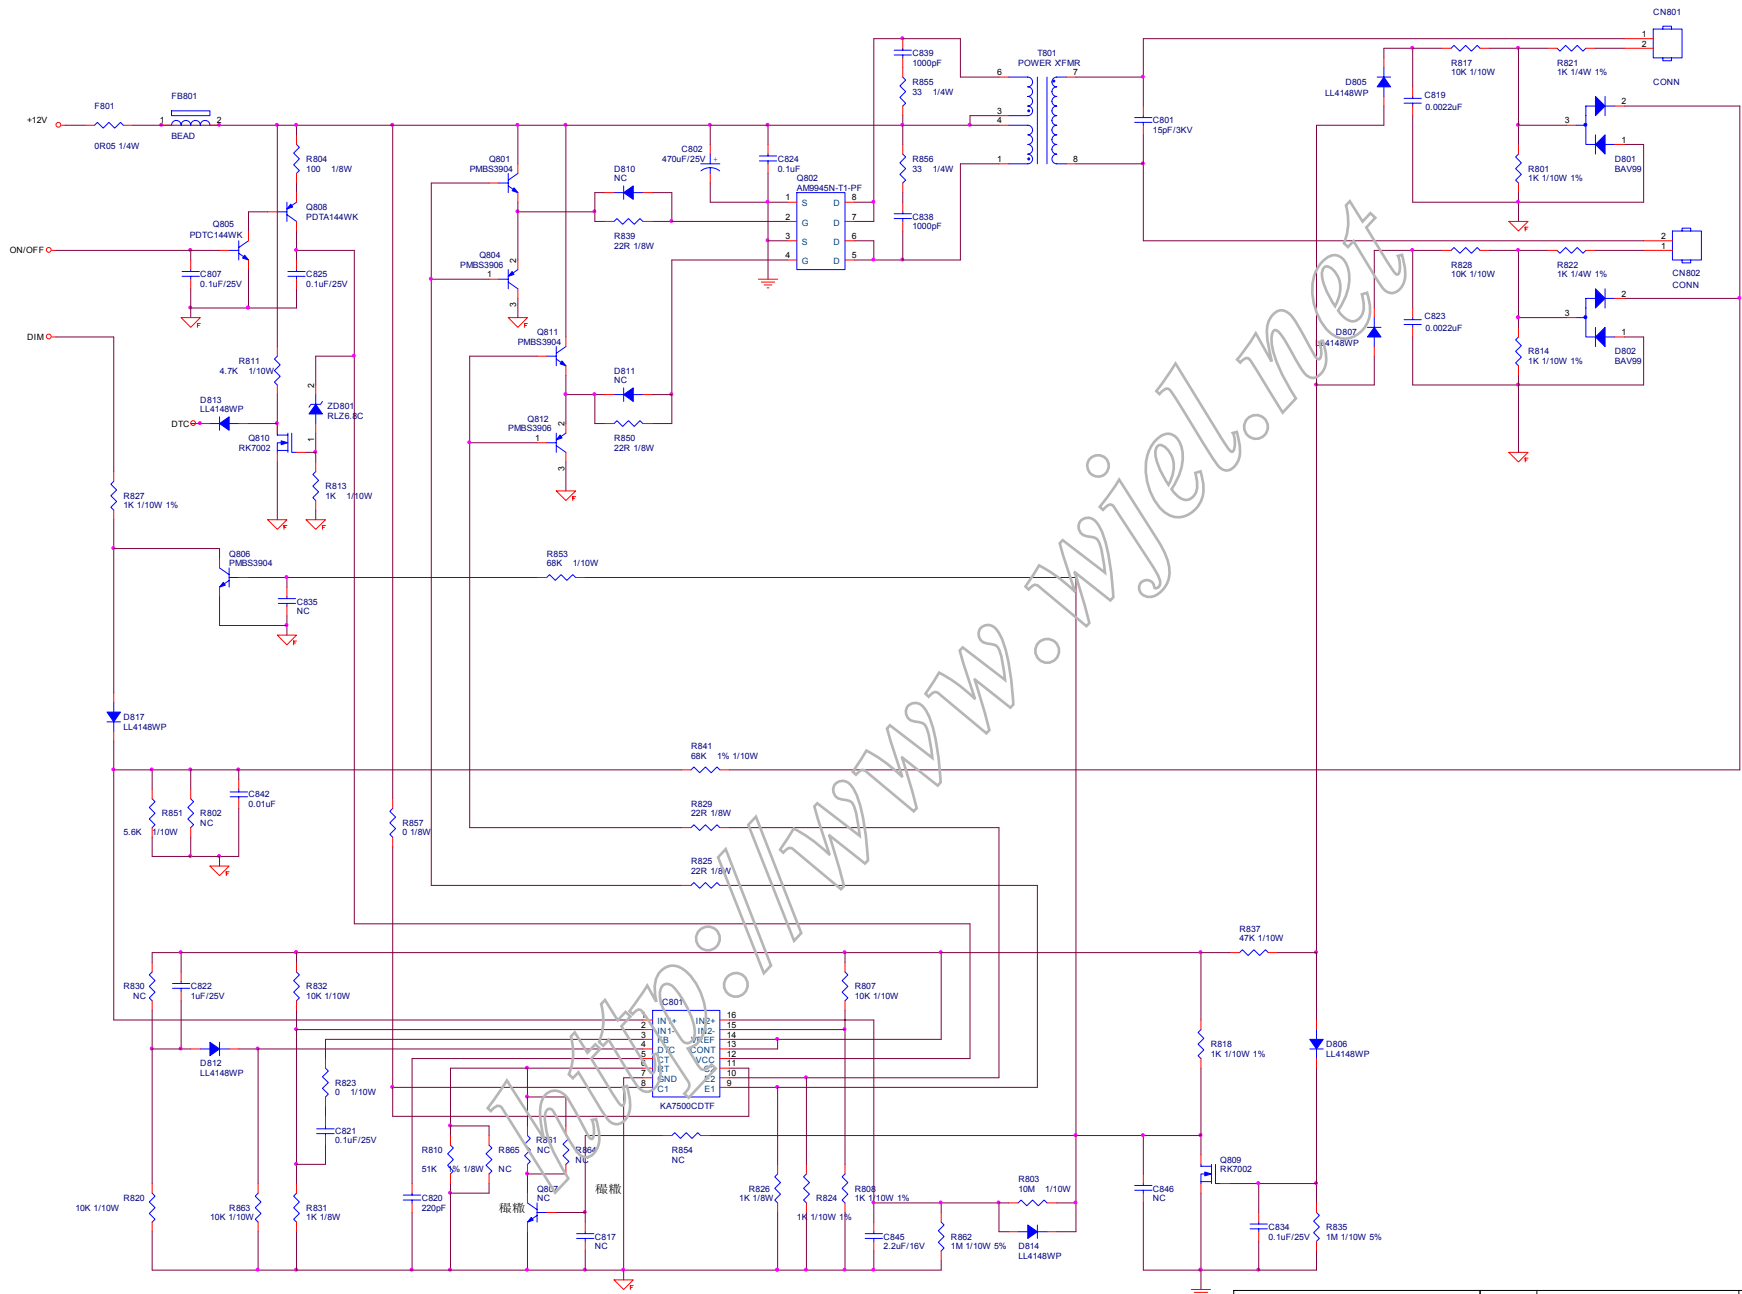

T P V (Top Victory Electronics Co., Ltd.)	OEM MODEL	17LCD	Size	Custom
基爾瓜 圖號	G2545-1D-X-9-070731	TPV MODEL	PWPC721HA2	Rev
Key Component	3.INVERTER	PCB NAME	715G2545 1D	B
Date	Tuesday, July 31, 2007	Sheet	3 of 3	修版 <修版>