

Aspire 1410/1680 Series

Service Guide

Revision History

Please refer to the table below for the updates made on Aspire 1410/1680 service guide.

Date	Chapter	Updates

Copyright

Copyright © 2004 by Acer Incorporated. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Acer Incorporated.

Disclaimer

The information in this guide is subject to change without notice.

Acer Incorporated makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties of merchantability or fitness for any particular purpose. Any Acer Incorporated software described in this manual is sold or licensed "as is". Should the programs prove defective following their purchase, the buyer (and not Acer Incorporated, its distributor, or its dealer) assumes the entire cost of all necessary servicing, repair, and any incidental or consequential damages resulting from any defect in the software.

Intel is a registered trademark of Intel Corporation.

Pentium and Pentium II/III are trademarks of Intel Corporation.

Other brand and product names are trademarks and/or registered trademarks of their respective holders.

Conventions

The following conventions are used in this manual:

Screen messages	Denotes actual messages that appear on screen.
NOTE	Gives bits and pieces of additional information related to the current topic.
WARNING	Alerts you to any damage that might result from doing or not doing specific actions.
CAUTION	Gives precautionary measures to avoid possible hardware or software problems.
IMPORTANT	Reminds you to do specific actions relevant to the accomplishment of procedures.

Preface

Before using this information and the product it supports, please read the following general information.

1. This Service Guide provides you with all technical information relating to the BASIC CONFIGURATION decided for Acer "global" product offering. To better fit local market requirements and enhance product competitiveness, your regional office MAY have decided to extend the functionality of a machine (e.g. add-on card, modem, or extra memory capability). These LOCALIZED FEATURES will NOT be covered in this generic service guide. In such cases, please contact your regional offices or the responsible personnel/channel to provide you with further technical details.
2. Please note WHEN ORDERING FRU PARTS, that you should check the most up-to-date information available on your regional web or channel. If, for whatever reason, a part number change is made, it will not be noted in the printed Service Guide. For ACER AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code to those given in the FRU list of this printed Service Guide. You MUST use the list provided by your regional Acer office to order FRU parts for repair and service of customer machines.

Kestrel / Extensa /ZL1 Series Model Comparison Table

Shipping priority	No. 5	No. 6	No. 4	No. 3	No. 1 on Jul.20th	No. 2	End of August				
Quanta Named	ZL1		ZL1A		ZL1C		ZL1E	???	ZL1G		
Project Name	Kestrel-P-M11P64	Kestrel-P-UMA	Kestrel-M11P64	Kestrel-UMA	Kestrel-A-M11P64	Kestrel-A-UMA	Kestrel-E-UMA	Kestrel-A-UMA	Kestrel-A-M11P64	Kestrel-A-UMA	
Platform naming	TM4500	TM4500	TM4000	TM4000	AS1680	AS1680	TM2300	AS1410	Extensa3000	Extensa3000	
M/B	VERSION A1	VERSION A2	VERSION A3	VERSION A4	VERSION A5	VERSION A4	VERSION A6	???	VERSION A5	VERSION A4	
Chipset	855GME	855GME	855GME	855GME	855GME	855GME	852GM	855GME	855GME	855GME	
CPU	Banias 1.5 Dothan 1.5G Dothan 1.6G Dothan 1.7G	Banias 1.5 Dothan 1.5G Dothan 1.6G Dothan 1.7G	Banias 1.5 Dothan 1.5G Dothan 1.6G	Banias 1.5 Dothan 1.5G Dothan 1.6G	Banias 1.5 Dothan 1.5G Dothan 1.6G	Banias 1.5 Dothan 1.5G Dothan 1.6G	Banias 1.5 Dothan 1.5G Dothan 1.6G	Celeron M 320 Celeron M 330 Celeron M 340 Celeron M 350 Celeron M 360	Celeron M 320 Celeron M 330 Celeron M 340	Dothan 1.5G	Dothan 1.5G
LCD	15" XGA 15" SXGA+ 15.4" WXGA	15" XGA 15" SXGA+ 15.4" WXGA	14.1" XGA 15" XGA 15.4" WXGA	14.1" XGA 15" XGA 15.4" WXGA	14.1" XGA 15.4" WXGA 15" XGA	14.1" XGA 15.4" WXGA 15" XGA	14.1" XGA 15" XGA 15.4" WXGA	14.1" XGA 15" XGA 15.4" WXGA	15" XGA WXGA SXGA+(tender)	15.4" XGA 15" XGA 15.4" WXGA	15" XGA WXGA SXGA+(tender)
VGA	ATI 9700 with 64MB	UMA	ATI 9700 with 64MB	UMA	ATI 9700 with 64MB	UMA	UMA	UMA	ATI 9700 with 64MB	UMA	
Console display	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
Arcade windows mode	NO	NO	NO	NO	YES	YES	NO	YES	NO	NO	
Optical	Combo DVD-SuperMulti DVD-Dual	Combo DVD-SuperMulti DVD-Dual	Combo DVD-Dual DVD-SuperMulti	Combo DVD-Dual DVD-SuperMulti	Combo DVD-SuperMulti DVD-Dual	Combo DVD-SuperMulti DVD-Dual	Combo DVD-Dual DVD-SuperMulti	Combo SuperMulti Dual	DVD- DVD- Dual	Combo 4X DVD-Dual	Combo 4X DVD-Dual
Hot swapple	2nd HDD, 2nd battery, weight saver	2nd HDD, 2nd battery, weight saver	NO	NO	NO	NO	NO	NO	NO	NO	
HDD	40GB / 60GB / 80GB	40GB / 60GB / 80GB	30/40/60/80GB	30/40/60/80GB	30/40/60/80GB	30/40/60/80GB	30/40/60/80GB	30/40/60/80GB	30/40/60/80GB	30/40/60/80GB	
wireless	Intel 802.11b/g Intel 802.11a/b/g	Intel 802.11b/g Intel 802.11a/b/g	Intel 802.11b/g 3rd party 802.11a/b/g	Intel 802.11b/g 3rd party 802.11a/b/g	Intel 802.11b/g 3rd party 802.11a/b/g	Intel 802.11b/g 3rd party 802.11a/b/g	Ambit 802.11b/g	Foxconn 802.11b/g(first priority) Intel 802.11b/g	Intel 802.11b/g 3rd party 802.11a/b/g	Intel 802.11b/g 3rd party 802.11a/b/g	
WNC Bluetooth	YES	YES	NO	NO	YES	YES	NO	YES	NO	NO	
Battery Life	5hrs(8 cells)	5hrs(8 cells)	2.5hrs(4-cells)/5hrs(8 cells)	2.5hrs(4-cells)/5hrs(8 cells)	2.5hrs(4-cells)/5hrs(8 cells)	2.5hrs(4-cells)/5hrs(8 cells)	2hrs(4-cells)	2hrs(4-cells)/5hrs(8 cells)	2.5hrs(4-cells)/5hrs(8 cells)	2.5hrs(4-cells)/5hrs(8 cells)	
Battery cell	8 cells	8 cells	8 cells	8 cells	8 cells	8 cells	4 cells	8cells	8 cells	8 cells	
Port replicator	EasyPort 3	EasyPort 3	NO	NO	NO	NO	NO	NO	NO	NO	
LAN	10/100/1000	10/100/1000	10/100/1000	10/100/1000	10/100/1000	10/100/1000	10/100	10/100	10/100/1000	10/100/1000	
Card reader	MMC/MS/SD	MMC/MS/SD	NO	NO	MMC/MS/SD	NO	NO	NO	MMC/MS/SD	NO	
Smart card	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
DASP	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
Keyboard	New Ergo	New Ergo	New Ergo	New Ergo	normal	normal	New Ergo	normal	normal	normal	
Subwoofer	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
SPDIF	NO	NO	NO	NO	NO	NO	NO	NO	NO	NO	
OS	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	XPPRO & XPHOME with SP2	
Driver support	W2K & NT limit support	W2K & NT limit support	W2K limit support	W2K limit support	NO	NO	W2K limit support	NO	NO	NO	
Disk to Disk	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES	
NB manager 2	YES	YES	YES	YES	NO	NO	YES	NO	NO	NO	
weight	2.86kgs	2.86kgs	2.86kgs	2.86kgs	2.86kgs	2.86kgs	2.86kgs	2.86kgs	2.86kgs	2.86kgs	
IO Port	Three USB 2.0 ports/ IEEE 1394 port/ Ethernet (RJ-45) port/ Modem (RJ-11) port/ External display (VGA) port/ S- Video/TV-out port/ Microphone/line-in jack /Headphones/speaker/line-out port /Infrared (FIR) port/ PC Card slot (one Type II)/ 3-in-1 card reader (MS/MMC/SD)/ 100-pin port replicator connector/ DC-in jack for AC adaptor	Three USB 2.0 ports/ IEEE 1394 port/ Ethernet (RJ-45) port/ Modem (RJ-11) port/ External display (VGA) port/ S- video/TV-out port/ Microphone/line-in jack/ Headphones/speaker/line-out port/ Infrared (FIR) port/ PC Card slot (one Type II)/ DC-in jack for AC adaptor	Three USB 2.0 ports/ IEEE 1394 port/ Ethernet (RJ-45) port/ Modem (RJ-11) port/ External display (VGA) port/ S- video/TV-out port/ Microphone/line-in jack/ Headphones/speaker/line-out port/ Infrared (FIR) port/ PC Card slot (one Type II)/ DC-in jack for AC adaptor	Three USB 2.0 ports/ IEEE 1394 port/ Ethernet (RJ-45) port/ Modem (RJ-11) port/ External display (VGA) port/ S- video/TV-out port/ Microphone/line-in jack/ Headphones/speaker/line-out port/ Infrared (FIR) port/ PC Card slot (one Type II)/ DC-in jack for AC adaptor	Three USB 2.0 ports/ IEEE 1394 port/ Ethernet (RJ-45) port/ Modem (RJ-11) port/ S-video/TV-out port (NTSC/PAL)/ External display (VGA) port/ Microphone/line-in jack/ Headphones/speaker/line-out port/ Infrared (FIR) port/ PC Card slot (one Type II)/ DC-in jack for AC adaptor	Three USB 2.0 ports/ IEEE 1394 port/ Ethernet (RJ-45) port/ Modem (RJ-11) port/ S-video/TV-out port (NTSC/PAL)/ External display (VGA) port/ Microphone/line-in jack/ Headphones/speaker/line-out port/ Infrared (FIR) port/ PC Card slot (one Type II)/ DC-in jack for AC adaptor					
dimension	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	360 (W) x 273 (D) x 27/32 (H) mm	

Table of Contents

Chapter 1	System Introduction	1
	Features	1
	System Block Diagram	3
	Board Layout	4
	Top View	4
	Bottom View	5
	An Aspire Tour	7
	Front View	7
	Closed Front View	8
	Left View	9
	Right View	10
	Rear Panel	11
	Bottom Panel	12
	Indicators	13
	Using the Keyboard	15
	Lock Keys	15
	Embedded Numeric Keypad	16
	Windows Keys	17
	Hot Keys	18
	Special Key	20
	Launch Keys	21
	Touchpad	23
	Touchpad Basics	23
	Hardware Specifications and Configurations	25
Chapter 2	System Utilities	36
	BIOS Setup Utility	36
	Navigating the BIOS Utility	37
	Information	38
	Main	39
	Advanced	41
	Security	43
	Boot	47
	Exit	48
	BIOS Flash Utility	49
Chapter 3	Machine Disassembly and Replacement	50
	General Information	51
	Before You Begin	51
	Disassembly Procedure Flowchart	53
	Removing the Battery Pack	55
	Removing the HDD Module/the Memory and the Wireless LAN Card/the Thermal Module and the CPU/ODD Module and LCD Module	56
	Removing the HDD Module	56
	Removing the Memory and the Wireless LAN Card	56
	Removing the Thermal Module and CPU	56
	Removing the ODD Module	58
	Removing the LCD Module	58
	Disassembling the Main Unit	60
	Separate the Main Unit Into the Upper and the Lower Case Assembly	60
	Disassembling the Upper Case Assembly	60
	Disassembling the Lower Case Assembly	61

Table of Contents

Disassembling the LCD Module	64
Disassembling the External Modules	66
Disassembling the Optical Drive Module	66
Chapter 4 Troubleshooting	68
System Check Procedures	69
External Diskette Drive Check	69
External CD-ROM Drive Check	69
Keyboard or Auxiliary Input Device Check	69
Memory check	70
Power System Check	70
Touchpad Check	72
Power-On Self-Test (POST) Error Message	73
Index of Error Messages	74
POST Code	77
Index of Symptom-to-FRU Error Message	78
Intermittent Problems	81
Undetermined Problems	82
Use NAPP CD to Build Master Hard Disc Drive	83
CD to Disk Recovery	83
Disk to Disk Recovery	86
Chapter 5 Jumper and Connector Locations	90
Top View	90
Bottom View	92
Chapter 6 FRU (Field Replaceable Unit) List	94
Exploded Diagram	95
Appendix A Model Definition and Configuration	108
Model Name Definition	108
Appendix B Test Compatible Components	110
Microsoft Windows XP Environment Test	111
Appendix C Online Support Information	116
Index	118

System Introduction

Features

Below is a brief summary of the computer's many feature:

Performance

- Intel® Pentium M® processor 705, 715, 725, 735, 745, 755 or Intel® Celeron M® processor 320,330
- Intel® 855GME or 852 GM chipset (manufacturing option)
- 256/512 MB of DDR333 SDRAM standard, upgradeable to 2048 MB with dual soDimm modules
- 30 GB and above high-capacity, Enhanced-IDE hard disk
- Advanced Configuration Power Interface (ACPI) power management system.
- Internal removable optical drive (AcerMedia bay)
- Li-ion main battery pack

Display

- The TFT LCD panel providing a large viewing area for maximum efficiency and ease-of-use:
 - ▶ 14.1" XGA (1024x768) resolution
 - ▶ 15.0" XGA (1024x768) or SXGA+ (1400x1050) resolution
 - ▶ 15.4" WXGA (1200x800) or WSXGA+ (1680x1050) resolution
- ATI MOBILITY™ RADEON™ 9700 with 64MB of video memory (manufacturing option)
- 3D graphics support
- Simultaneous display on LCD and CRT monitor, and other display devices like projector support
- "Automatic LCD dim" feature that automatically decides the best settings for your display and conserves power
- Dual independent display

Multimedia

- High-speed drive: DVD/CD-RW Combo, DVD-Dual or DVD-Super Multi
- 16-bit high-fidelity AC'97 stereo audio
- Built-in microphone and dual speakers

Connectivity

- Built-in 56Kbps fax/data modem
- Integrated 10/100/1000 Mbps Fast Ethernet connection (manufacturing option)
- Fast infrared wireless communication (manufacturing option)
- Three Universal Serial Bus (USB) 2.0 ports
- IEEE 1394 port (manufacturing option)
- InVilink™ 802.11b/g dual-band Wireless LAN (manufacturing option)
- Bluetooth® (manufacturing option)

-
- SD/MMC/MS memory card reader (manufacturing option)

Human-centric design and ergonomics

- Rugged, yet extremely portable design
- Stylish appearance
- Full-size keyboard with four programmable launch keys
- Ergonomically-centered touchpad pointing device
- Internet 4-way scroll button

Keyboard and Pointing Device

- 88/89-key Windows keyboard
- Ergonomically-centered touchpad pointing device with scroll function


Expansion

- One Type II CardBus PC Card slot
- Upgradeable memory modules

I/O Ports


- One Type II PC Card slot
- One RJ-11 phone jack (V.92, 56Kbps modem)
- One RJ-45 network jack
- One DC-in jack (AC adapter)
- One external monitor port
- One speaker/headphone-out jack (3.5mm mini jack)
- One audio line-in jack (3.5mm mini jack)
- One microphone-in jack (3.5mm mini jack)
- One Infrared (FIR) port (manufacturing option)
- One IEEE 1394 port (manufacturing option)
- One S-video TV-out port (manufacturing option)
- Three USB 2.0 ports
- 3-in-1 (MS/MMC/SD) memory card reader (manufacturing option)

System Block Diagram

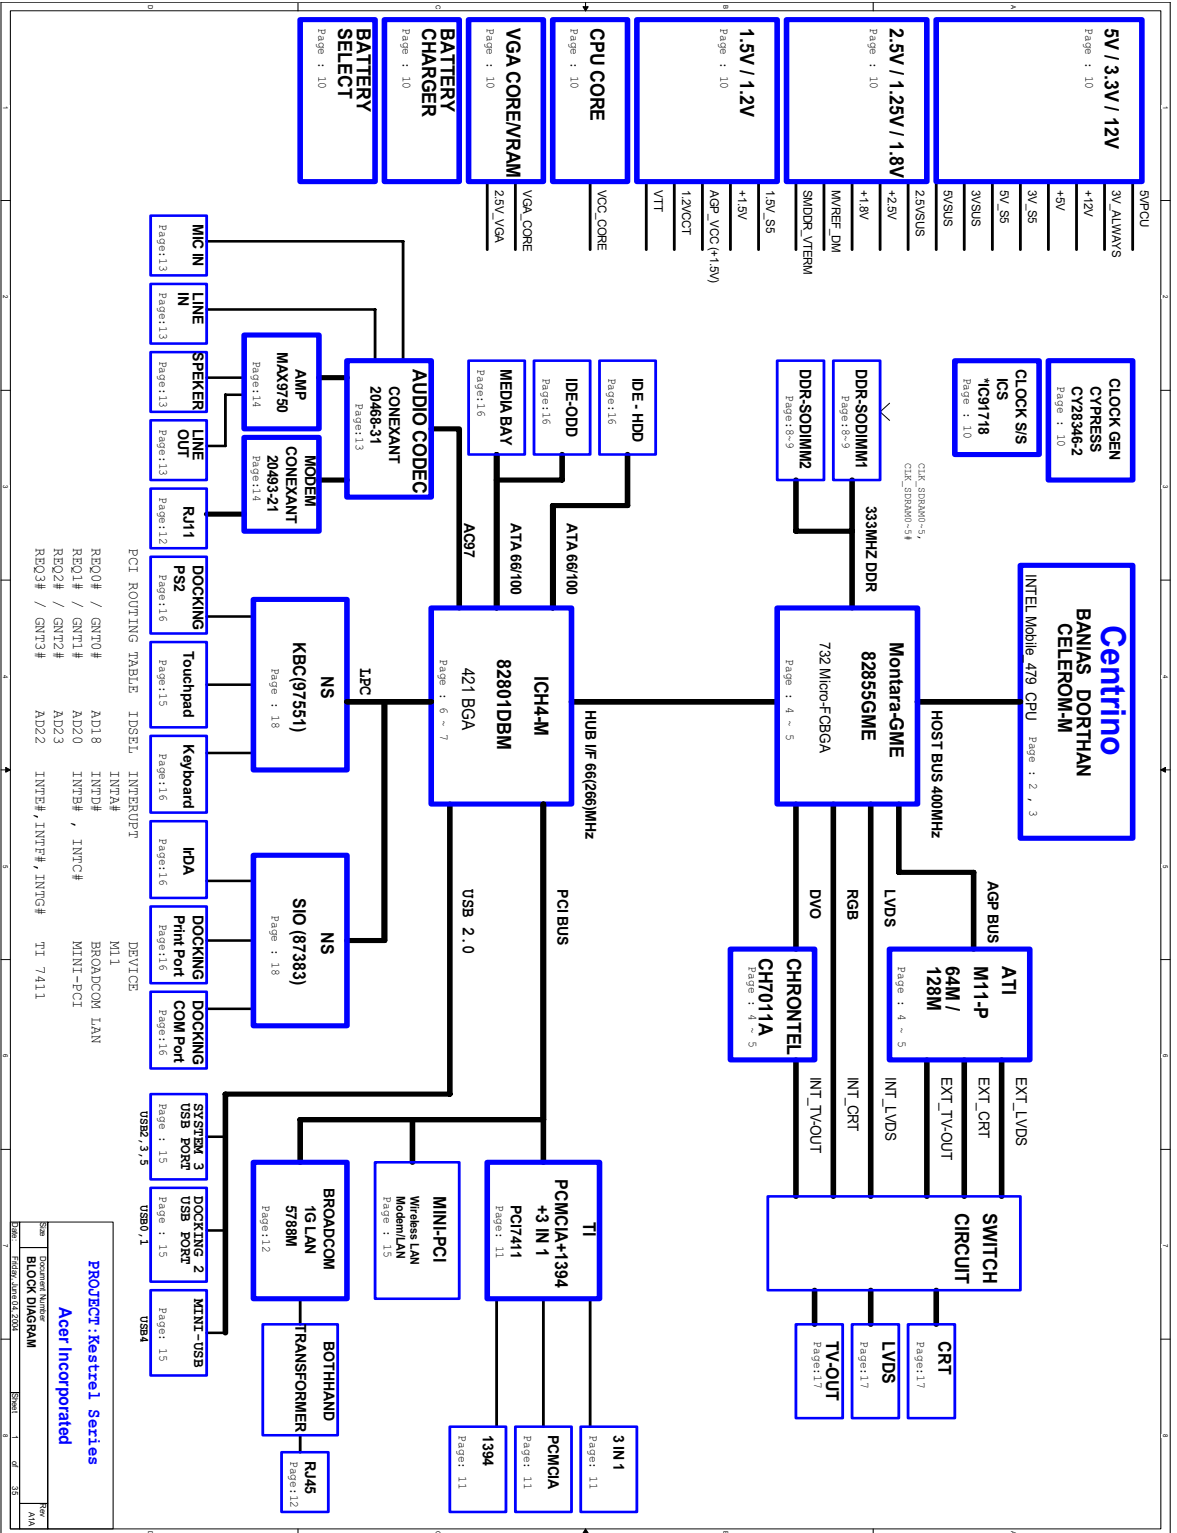


Board Layout

Top View

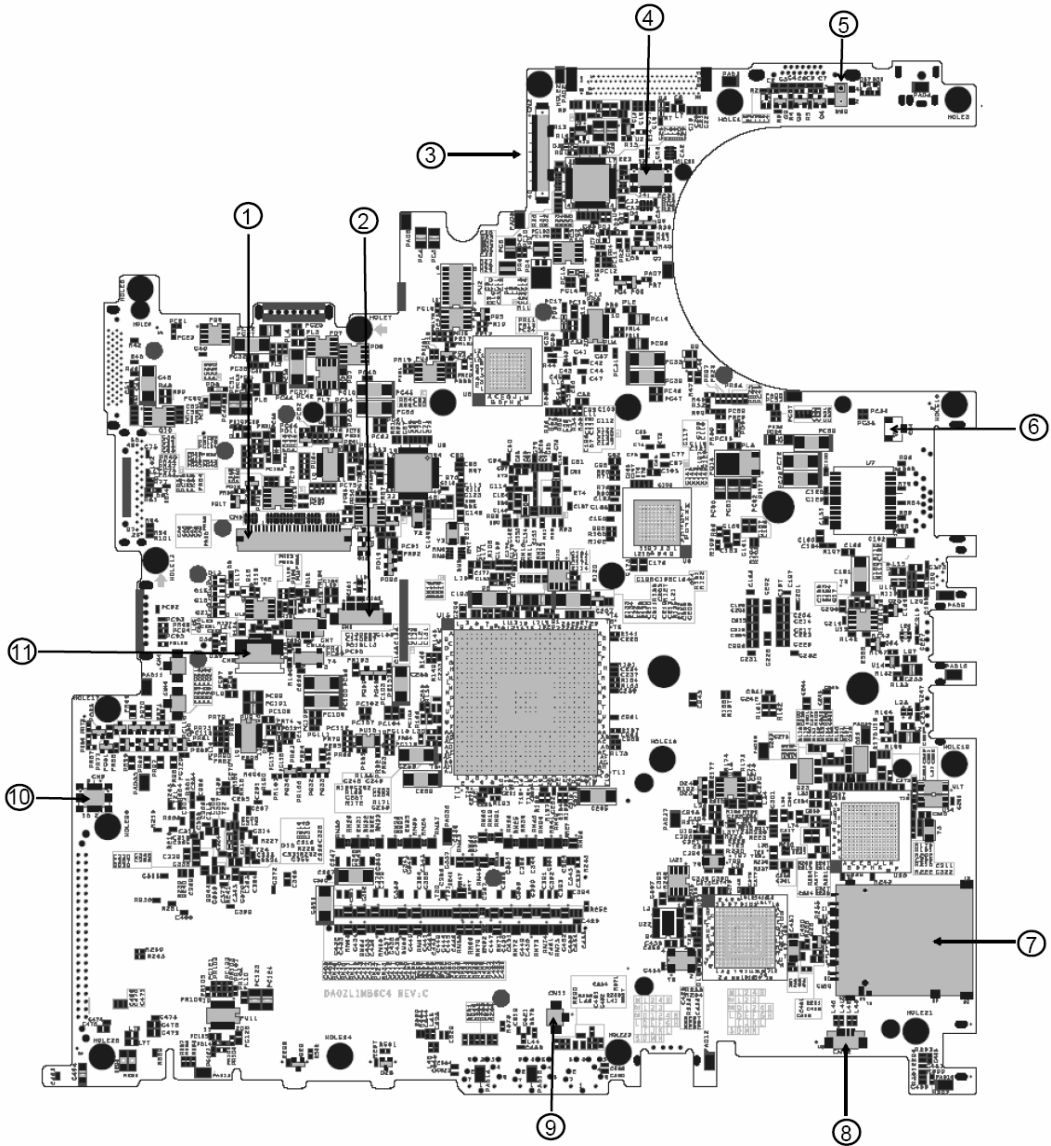

- | | | | |
|---|---------------------------|----|-------------------------------|
| 1 | Keyboard Connector | 7 | 3 in 1 Connector |
| 2 | Bluetooth Board Connector | 8 | Speaker Connector |
| 3 | LCD Cable Connector | 9 | Internal Microphone Connector |
| 4 | LED Board Connector | 10 | Modem Board Connector |
| 5 | Lid Switch | 11 | Touchpad Board Connector |
| 6 | Modem Cable Connector | | |

Bottom View

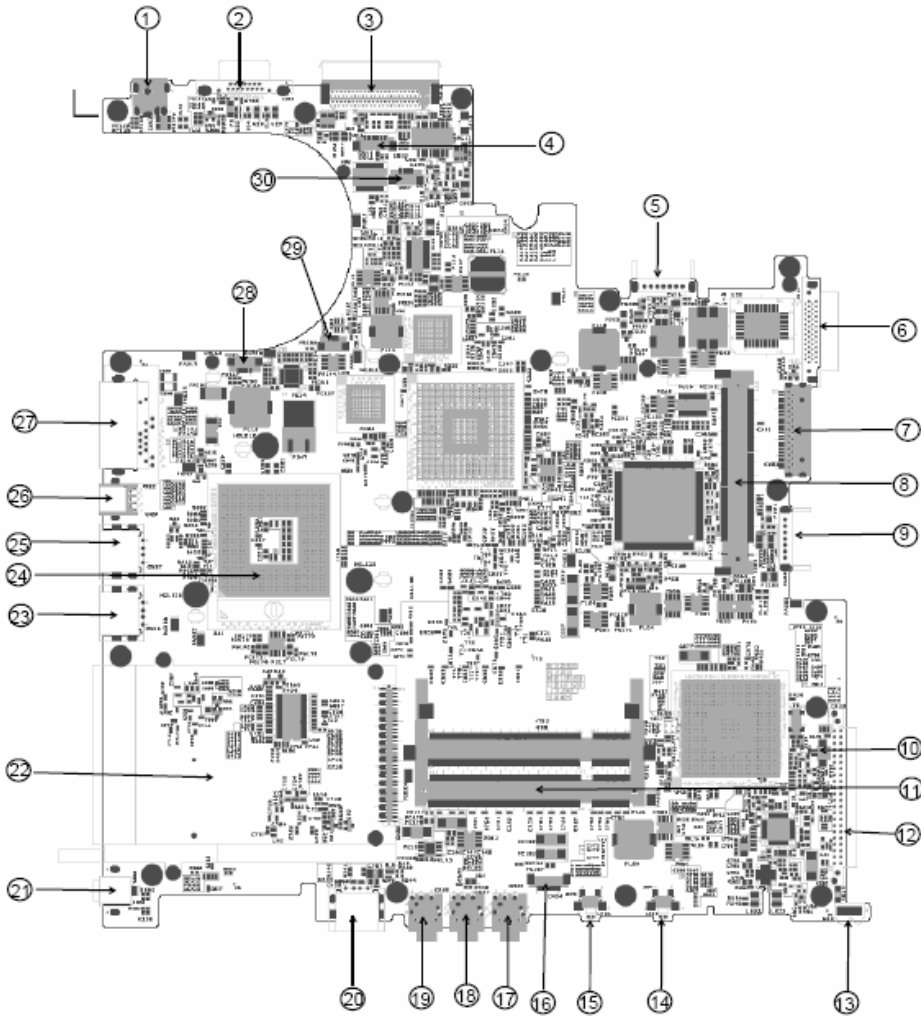

- | | | | |
|----|--------------------------|----|-------------------------|
| 1 | Power Jack | 16 | Audio Cable Connector |
| 2 | CRT | 17 | Line-in Connector |
| 3 | Docking | 18 | Headphone Out Connector |
| 4 | Audio Cable Connector | 19 | Microphone-in Connector |
| 5 | Main Battery Connector | 20 | USB Connector |
| 6 | ODD Connector | 21 | IEEE 1394 Connector |
| 7 | Media Bay Connector | 22 | PCMCIA |
| 8 | Mini PCI Slot | 23 | USB Connector |
| 9 | Second Battery Connector | 24 | CPU Socket |
| 10 | RTC Battery Connector | 25 | USB Connector |
| 11 | DDR DIMM Connector | 26 | S-Video |
| 12 | HDD Connector | 27 | RJ45 and RJ11 Connector |

13	IR	28	LAN Cable Connector
14	Bluetooth Switch	29	FAN Connector
15	Wireless Switch	30	LAN Cable Connector

An Aspire Tour


After knowing your computer features, let us show you around your new Aspire computer.

Front View



#	Icon	Item	Description
1		Display screen	Also called LCD (liquid-crystal display), displays computer output.
2		Microphone	Internal microphone for sound recording.
3		Keyboard	Inputs data into your computer.
4		Palmrest	Comfortable support area for our hands when you use the computer.
5		Click buttons (Left, center and right)	The left and right buttons function like the left and right mouse buttons; the center button serves as a 4-way scroll button.
6		Touchpad	Touch-sensitive pointing device which functions like a computer mouse. Turns on the computer power.
7		Status indicators	Light-Emitting Diodes (LEDs) that turn on and off to show the status of the computer's function and components.
8		Launch keys	Buttons for launching frequently used programs.
9		Power button	Turns the computer on and off.


Closed Front View

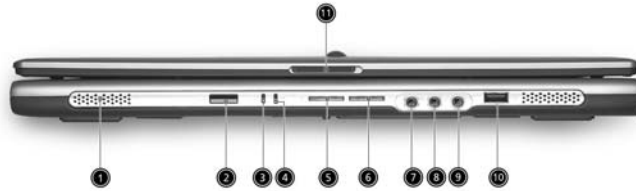

#	Icon	Item	Description
1		Speakers	Left and right speakers deliver stereo audio output.
2		Infrared port	Interfaces with infrared devices (e.g., infrared printer, IR-aware computer).
3		Power indicator	Lights when the computer is on.
4		Battery indicator	Lights when the battery is being charged
5		Bluetooth® communications	Indicates that (optional) Bluetooth is enabled.
6		Wireless communication	Indicates status of wireless LAN communication.
7		Line-in/Mic-in jack	Accepts audio line-in devices (e.g., audio CD player, stereo walkman).
8		Line-in/Mic-in jack	Accepts audio line-in devices (e.g., audio CD player, stereo walkman).
9		Speaker/Line-Out/Headphone jack	Connects to audio line-out devices (e.g., speakers, headphones).
10		USB 2.0 port	Connects to Universal Serial Bus (USB) 2.0 devices (e.g., USB mouse, USB camera).
11		Latch	Locks and releases the lid.


NOTE: The Bluetooth and Wireless buttons and indicators only work on models with Bluetooth and Wireless features, respectively.




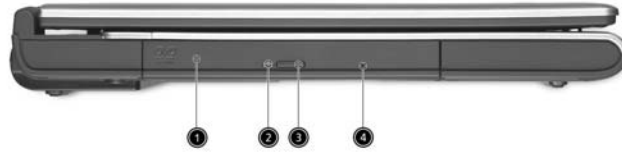



Left View

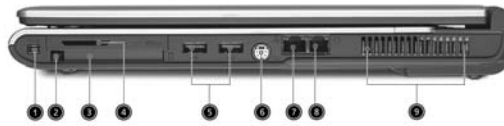
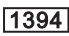
#	Icon	Item	Description
1		Optical drive	Internal optical drive; accepts CDs or DVDs depending on the optical drive type.
2		LED indicator	Lights up when the optical drive is active.
3		Optical drive eject button	Ejects the optical drive is active.
4		Emergency eject hole	Ejects the optical drive tray when the computer is turned off.




Right View



#	Icon	Item	Description
1		IEEE 1394 port (Manufacturing option)	Connects to IEEE 1394 devices.
2		PC Card slot eject button	Ejects the PC Card from the slot.
3		PC Card slot	Connects to one Type II CardBus PC Card.
4		3-in-1 card reader	Accepts MS, MMC and SD card. Note: The 3-in-1 card reader is a manufacturing option, subject to configuration. Only one card can operate at any given time.
5		Two USB 2.0 ports	Connects to Universal Serial Bus (USB) 2.0 devices (e.g., USB mouse, USB camera).
6		S-video port (Manufacturing option)	Connects to a television or display device with S-video input.
7		Network jack	Connect to an Ethernet 10/100-based network.
8		Modem jack	Connects to a phone line.
9		Ventilation slots	Enable the computer to stay cool, even after prolonged use.

Rear Panel



#	Icon	Item	Description
1		Power jace	Connects to an AC adapter.
2		External display port	Connects a display device (e.g., external monitor, LCD projector).
3		Security keylock	Connects to a Kensington-compatible computer security lock.

Bottom Panel






#	Item	Description
1	Cooling fan	Helps keep the computer cool. Note: Do not cover or obstruct the opening of the fan.
2	Battery lock	Locks the battery in place.
3	Memory compartment	Houses the computer's main memory.
4	Hard disk bay	Houses the computer's hard disk (secured by a screw).
6	Battery release latch	Unlatches the battery to remove the battery pack.
7	Battery bay	Houses the computer's battery pack.

Indicators



The computer has three easy-to-read status icons on the upper-right above the keyboard.



Icon	Function	Description
	Caps lock	Lights when Caps Lock is activated.
	Num lock	Lights when Num Lock is activated.
	Media Activity	Lights when the hard disk or optical drive is active.

In addition, there are two indicators at the front panel. Even when the cover is closed, the state or features can still be seen.



Icon	Function	Description
	Power	Lights when the computer is on.
	Battery indicator	Lights when the battery is being charged.



Using the Keyboard

The keyboard has full-sized keys and an embedded keypad, separate cursor keys, two Windows keys and twelve function keys.

Lock Keys

The keyboard has three lock keys which you can toggle on and off.



Lock Key	Description
Caps Lock	When Caps Lock is on, all alphabetic characters typed are in uppercase.
Num lock (Fn-F11)	When Num Lock is on, the embedded keypad is in numeric mode. The keys function as a calculator (complete with the arithmetic operators +, -, *, and /). Use this mode when you need to do a lot of numeric data entry. A better solution would be to connect an external keypad.
Scroll lock (Fn-F12)	When Scroll Lock is on, the screen moves one line up or down when you press  and  respectively. Scroll Lock does not work with some applications.

Embedded Numeric Keypad

The embedded numeric keypad functions like a desktop numeric keypad. It is indicated by small characters located on the upper right corner of the keycaps. To simplify the keyboard legend, cursor-control key symbols are not printed on the keys.












Desired Access	Num Lock On	Num Lock Off
Number keys on embedded keypad	Type numbers in a normal manner.	
Cursor-control keys on embedded keypad	Hold Shift while using cursor-control keys.	Hold Fn while using cursor-control keys.
Main keyboard keys	Hold Fn while typing letters on embedded keypad.	Type the letters in a normal manner.

Windows Keys

The keyboard has two keys that perform Windows-specific functions.



Key	Icon	Description
Windows key 		Pressed alone, this key has the same effect as clicking on the Windows Start button; it launches the Start menu. It can also be used with other keys to provide a variety of function:  + Tab (Activates next taskbar button)  + E (Explores My Computer)  + F1 (Opens Help and Support)  + F (Opens the Find: All Files dialog box)  + M (Minimizes all windows)  +  + M (Undoes the minimize all windows)  + R (Displays the Run... dialog box)
Application key		This key has the same effect as clicking the right mouse button; it opens the application's context menu.








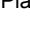
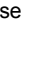

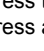
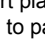
Hot Keys

The computer employs hot keys or key combinations to access most of the computer's controls like screen brightness, volume output and the BIOS utility.

To activate hot keys, press and hold the **Fn** key before pressing the other key in the hot key combination.



Hot Key	Icon	Function	Description
Fn-F1	?	Hot key help	Displays help on hot keys.
Fn-F2		Acer eSetting	Launches the Acer eSetting in the Acer eManager set by the Acer Empowering key.
Fn-F3		Acer ePowerManagement	Launches the Acer ePowerManagement in the Acer eManager set by the Acer Empowering key.
Fn-F4	Z ^z	Sleep	Puts the computer in Sleep mode.
Fn-F5		Display toggle	Switches display output between the display screen, external monitor (if connected) and both the display screen and external monitor.
Fn-F6		Screen blank	Turns the display screen backlight off to save power. Press any key to return.
Fn-F7		Touchpad toggle	Turns the internal touchpad on and off.
Fn-F8		Speaker toggle	Turns the speakers on and off.
Fn-F9		Volume up	Increases the speaker volume.

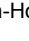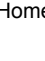Hot Key	Icon	Function	Description
Fn- 		Volume down	Decreases the speaker volume.
Fn- 		Brightness up	Increases the screen brightness.
Fn- 		Brightness down	Decreases the screen brightness
Fn-Home		Play/Pause	Press to start playing the audio track or video file. Press again to pause.
Fn-Pg Up		Stop	Press to stop playing the audio track or video file.
Fn-Pg Dn		Backwards	Press to skip backward to the previous track or video file and start playing.
Fn-End		Forward	Press to skip forward to the next track or video file.
Alt Gr-\$		US dollar	Types the US dollar sign.
Alt Gr-Euro		Euro	Types the Euro symbol.

Special Key

You can locate the Euro symbol and US dollar sign at the upper-center and/or bottom-right of your keyboard. To type:



The Euro symbol

1. Open a text editor or word processor.
2. Either directly press the **Euro** symbol at the bottom-right of the keyboard, or hold **Alt Gr** and then press the **Euro** symbol at the upper-center of the keyboard.

The US dollar sign

1. Open a text editor or word processor.
2. Either directly press the **dollar** sign at the bottom-right of the keyboard, or hold **Alt Gr** and then press the **dollar** sign at the upper-center of the keyboard.

NOTE: This function varies by the operating system version.

Launch Keys

Located at the upper-right above the keyboard are four buttons. These buttons are called launch keys. They are designated as the mail, Web browser, Empowering and programmable keys.



Press the Acer Empowering Key to run the Acer EManager. The mail and Web browser are default for Email and Internet programs, but can be reset by users. To set the mail, Web browser and programmable keys, run the acer Launch Manager.



Launch Key	Default application
Mail	Email application (user-programmable)
Web browser	Internet browser application (user programmable)
e	Acer eManager application (user-programmable)
P	User-programmable

In addition, there are two launch keys at the front panel. Even when the cover is closed, you can easily access the features of Wireless and Bluetooth®. However, the Wireless and Bluetooth keys cannot be set by users.



Description	Default application
Bluetooth® communications 	Lights to indicate the status of Bluetooth (optional) communications.
Wireless communications 	Lights to indicate the status of wireless LAN (optional) communications.

Touchpad

The built-in touchpad is a PS/2-compatible pointing device that senses movement on its surface. This means the cursor responds as you move your finger on the surface of the touchpad. The central location on the palmrest provides optimum comfort and support.



NOTE: If you are using an external USB or serial mouse, you can press **Fn-F7** to disable the touchpad.

Touchpad Basics

The following teaches you how to use the touchpad:



- ❑ Move your finger across the touchpad to move the cursor.
- ❑ Press the left (1) and right (3) buttons located on the edge of the touchpad to do selection and execution functions. These two buttons are similar to the left and right buttons on a mouse. Tapping on the touchpad produces similar results.
- ❑ Use the 4-way scroll (2) button (top/bottom/left/and right) to scroll.

Function	Left Button	Right Button	Scroll Button	Tap
Execute	Click twice quickly			Tap twice (at the same speed as double-clicking the mouse button)
Select	Click once			Tap once
Drag	Click and hold, then use finger to drag the cursor on the touchpad			Tap twice (at the same speed as double-clicking a mouse button) then hold finger to the touchpad on the second tap to drag the cursor
Access context menu		Click once		
Scroll			Click and hold the button in the desired direction (up/down/left/right)	

NOTE: Keep your fingers dry and clean when using the touchpad. Also keep the touchpad dry and clean. The touchpad is sensitive to finger movements. Hence, the lighter the touch, the better the response. Tapping too hard will not increase the touchpad's responsiveness.

Hardware Specifications and Configurations

Processor

Item	Specification
CPU type	Intel Celeron M processor at 1.3GHz~1.4GHZ for Aspire 1410 Intel Pentim M processor at 1.5GHz~1.6GHz (Dothan) for Aspire 1680
Core logic	Intel 855GME+ICH4
CPU package	Intel socketable 478pin Micro-BGA
CPU core voltage	1.308V (highest frequency mode) to 0.956V (low frequency mode) 0.748V (deeper sleep mode)

BIOS

Item	Specification
BIOS vendor	PhneoiX
BIOS Version	3A03
BIOS ROM type	SST 39SF040A, 512KX8 CMOS Boot Block Flash Memory (the difference with Flash ROM?)
BIOS ROM size	512KB
BIOS package	32-pin PLCC
Supported protocols	ACPI 1.0b, PC Card 95, SM BIOS 2.3, IEEE1284-ECP/EPP, PCI 2.2, PnP 1.0a, DMI 2.0, PS/2 keyboard and mouse, USB 2.0, VGA BIOS, CD-ROM bootable, IEEE 1394
BIOS password control	Set by setup manual

Second Level Cache

Item	Specification
Cache controller	Built-in CPU
Cache size	512K for Intel Celeron M processor at 1.3~1.4GHz-Aspire 1410 2MB for Intel Pentium M processor at 1.5~1.6GHz (Dothan)-Aspire 1680
1st level cache control	Always enabled
2st level cache control	Always enabled
Cache scheme control	Fixed in write-back

System Memory

Item	Specification
Memory controller	Intel 855GME built-in
Memory size	0MB (no on-board memory)
DIMM socket number	2 sockets
Supports memory size per socket	1024MB
Supports maximum memory size	2G (by two 1024MB SO-DIMM module)
Supports DIMM type	DDR Synchronous DRAM
Supports DIMM Speed	333 MHz
Supports DIMM voltage	2.5V and 1.25V
Supports DIMM package	200-pin soDIMM
Memory module combinations	You can install memory modules in any combinations as long as they match the above specifications.

Memory Combinations

Slot 1	Slot 2	Total Memory
0MB	128MB	128MB
0MB	256MB	256MB
0MB	512MB	512MB
0MB	1024MB	1024MB
128MB	128MB	256MB
128MB	256MB	384MB
128MB	512MB	640MB
128MB	1024MB	1152MB
256MB	128MB	384MB
256MB	256MB	512MB
256MB	512MB	768MB
256MB	1024MB	1280MB
512MB	128MB	640MB
512MB	256MB	768MB
512MB	512MB	1024MB
512MB	1024MB	1536MB
1024MB	0MB	1024MB
1024MB	128MB	1125MB
1024MB	256MB	1280MB
1024MB	512MB	1536MB
1024MB	1024MB	2048MB

NOTE: Above table lists some system memory configurations. You may combine DIMMs with various capacities to form other combinations. On above table, the configuration of slot 1 and slot 2 could be reversed.

LAN Interface

Item	Specification
Chipset	Broadcom BCM4401 (10/100M); BroadCom BCM5788M (1G)
Supports LAN protocol	10/100/1000Mbps
LAN connector type	RJ45
LAN connector location	Right panel
Features	Integrated 10/100 BASE-T transceiver Wake on LAN support compliant with ACPI 2.0 PCI v2.2

IR Interface

Item	Specification
Chipset	
Part name	VISHAY TFU6102F
Package	8-pin SMT type
Performance	4Mbit/s
Compliant	IrDA 1.1

Modem Interface

Item	Specification
Data modem data baud rate (bps)	56K
Supports modem protocol	V.90/V.92
Modem connector type	RJ11
Modem connector location	Right panel

Bluetooth Interface

Item	Specification
Chipset	Broadcom BCM2035
Data throughput	723 bps(full speed data rate)
Protocol	Bluetooth 1.1 (Upgradeable to Bluetooth 1.2 when SIG specification is ratified).
Interface	USB 1.1
Connector type	Mini-USB

Wireless Module 802.11b/g (optional device)

Item	Specification
Chipset	Intel
Data throughput	11~54 Mbps
Protocol	802.11b+g
Interface	Mini-PCI type II

Wireless Module 802.11a/b/g (optional device)

Item	Specification
Chipset	Intel
Data throughput	11~54 Mbps
Protocol	802.11 a+b+g
Interface	Mini-PCI type II

3-in-1 card reader

Item	Specification
Chipset	TI PC7411
Protocol	support Smart Media, Multi-Media Card and Security Digital

Hard Disk Drive Interface

Item	Specification			
Vendor & Model Name	HGST HTS424030M9AT00/ Toshiba Pluto MK3025GAS/	HGST HTS424040M9AT00/ Toshiba Pluto MK4025GAS/	HGST MORAGA IC25N060ATMR04-0 Toshiba Pluto MK6025GAS	HGST MORAGA IC25N080ATMR04-0 Toshiba Pluto MK8025GAS
Capacity (MB)	30000	40000	60000	80000
Bytes per sector	512	512	512	512
Data heads	2	2	3/4 (for Toshiba)	4

Hard Disk Drive Interface

Item	Specification			
Drive Format				
Disks	1	1	2	2
Spindle speed (RPM)	4200 RPM	4200 RPM	4200 RPM	4200 RPM
Performance Specifications				
Buffer size	2048KB/	2048KB	8192KB	8192KB
Interface	ATA/ATAPI-6; ATA-6	ATA/ATAPI-6; ATA-6	ATA/ATAPI-6; ATA-6	ATA/ATA-6; ATA-6
Max. media transfer rate (disk-buffer, Mbytes/s)	372	372	350	350
Data transfer rate (host-buffer, Mbytes/s)	100 MB/Sec. Ultra DMA mode-5	100 MB/Sec. Ultra DMA mode-5	100 MB/Sec. Ultra DMA mode-5	100 MB/Sec. Ultra DMA mode-5
DC Power Requirements				
Voltage tolerance	5V(DC) +/- 5%	5V(DC) +/- 5%	5V(DC) +/- 5%	5V(DC) +/- 5%

Combo Drive Interface

Item	Specification	
Vendor & model name	DVD/CDRW KME UIDA760 (24x24x8x24x) DVD/CDRW QSI SBW-242C (24x24x8x24x)	
Performance Specification	With CD Diskette	With DVD Diskette
Transfer rate (KB/sec)	Sustained: Max 3.6Mbytes/sec	Sustained: Max 10.8Mbytes/sec
Buffer Memory	2MB	
Interface	Enhanced IDE(ATAPI) compatible	
Applicable disc format	DVD: DVD-ROM, (DVD-5, DVD-9, DVD-10, DVD-18),DVD-R (read, single border), DVD-RW, DVD-RAM (2.6GB, 4.7GB) CD: CD-DA, CD-ROM, CD-ROM XA, CD-R, CD-RW Photo (Multisession) Video CD, CD-Extra, (CD+), CD-test	
Loading mechanism	Load: Manual Release: (a) Electrical Release (Release Button) (b) Release by ATAPI command (c) Emergency Release	
Power Requirement		
Input Voltage	5 V +/- 5 % (Operating)	

DVD-Dual Interface

Item	Specification	
Vendor & model name	DVD Dual HLDS GWA-4040N	
Performance Specification	With CD Diskette	With DVD Diskette
Transfer rate (KB/sec)	Sustained: Max 3.6Mbytes/sec	Sustained: Max 10.8Mbytes/sec
Buffer Memory	2MB	
Interface	Enhanced IDE(ATAPI) compatible	

DVD-Dual Interface

Item	Specification
Applicable disc format	Support disc formats 1. Reads data in each CD-ROM, CD-ROM XA, CD-1, Video CD, CD-Extra and CD-Text 2. Reads data in Photo CD (single and Multi-session) 3. Reads standard CD-DA 4. Reads and writes CD-R discs 5. Reads and writes CD-RW discs 6. Reads and writes in each dVD+R/RW (Ver. 1.1) 7. Reads data in each DVD-ROM and DVD-R (Ver. 2.0 for Authoring) 8. Reads and writes in each DVD-R (Ver. 2.0 for general), DVD-RW and DVD+R/RW (Ver1.1)
Loading mechanism	Load: Manual Release: (a) Electrical Release (Release Button) (b) Release by ATAPI command (c) Emergency Release
Power Requirement	
Input Voltage	5 V +/- 5 % (Operating)

Audio Interface

Item	Specification
Audio Controller	Conexant CX20468-31
Audio onboard or optional	Built-in
Mono or Stereo	Stereo
Resolution	18 bit stereo Digital to analog converter 18 bit stereo Analog to Digital converter
Compatibility	AC97
Mixed sound source	Line-in, CD
Voice channel	8/16-bit, mono/stereo
Sampling rate	44,1 KHz (48K byte for AC97 interface)
Internal microphone	Yes
Internal speaker / Quantity	Yes/2

Audio Jack

Item	Specification
Number of audio jack	Internal: 2 External:3
Rated input	1W
Connector type	Internal: two 1W speakers External: Headphone out, microphone in and line-in

Video Interface

Item	Specification
Chipset	ATI Mobility RADEON 9700
Package	MBGA 708 pin
Interface	AGP8X
Supports ZV (Zoomed Video) port	Yes

Video Memory

Item	Specification
Chipset	Intel 855GME/ATI M11P (ATI Mobility RADEON 9700)
Memory size	UMA 16/32/64MB, discrete 64MB
Interface	DDR

USB Port

Item	Specification
Chipset	ICH4-M
USB Compliancy Level	2.0
OHCI	USB 1.1 and USB 2.0 Host controller
Number of USB port	3
Location	two on the right side; one on the front side
Serial port function control	Enable/Disable by BIOS Setup

IEEE 1394 Port

Item	Specification
Chipset	TI PC7411
Number of IEEE 1394 port	1
Location	Right side
Connector type	IEEE 1394

PCMCIA Port

Item	Specification
PCMCIA controller	TI PC7411
Supports card type	Type-II
Number of slots	One type-II
Access location	Right panel
Supports ZV (Zoomed Video) port	No ZV support
Supports 32 bit CardBus	Yes

System Board Major Chips

Item	Controller
Core logic	Intel 855GME+ICH4
VGA	ATI Mobility RADEON 9700
LAN	BroadCom BCM4401 (10/100M); BCM5788M(1G)
IEEE 1394	TI PC7411
USB 2.0	ICH4-M
Super I/O controller	NS 87383
MODEM	Conexant CX20468-31
Bluetooth	Broadcom BCM2035
Wireless 802.11 b	Intel

System Board Major Chips

Item	Controller
Wireless 802.11 b+g	Intel
PCMCIA	TI PC7411
Audio	Conexant RD01-D620
3-in-1 card reader	TI PC7411

Keyboard

Item	Specification
Keyboard controller	NS PC97551
Total number of keypads	88-/89-key
Windows logo key	Yes
Internal & external keyboard work simultaneously	1. Plug USB keyboard to the USB port directly: Yes 2. Use port replicator then plug a USB/PS 2 keyboard to the USB port/PS 2 port on the port replicator: Yes

Battery

Item	Specification
Vendor & model name	Sanyo 4UR18650F-2-QC140 Panasonic CGR-B/8B5AE Simplo 916-3020
Battery Type	Li-ion
Pack capacity	4400 mAh
Number of battery cell	8
Package configuration	4 cells in series, 2 series in parallel
Normal voltage	14.4V
Charge voltage	16.8+/-0.2v

LCD 14.1 inch for Aspire 1410

Item	Specification		
Vendor & model name	AU B141XG05	CMO N141XB-L01	QDI QD141XLH12
Screen Diagonal (mm)	357(14.1inch)	14inch	360(14.1inch)
Active Area (mm)	285.7(H)x214.3(V)	285.7(H)x214.3(V)	285.7(H)x214.3(V)
Display resolution (pixels)	XGA (1024x768)	XGA (1024x768)	XGA (1024x768)
Pixel Pitch	0.279(H)x0.279(H) mm	0.279(H)x0.279(H) mm	0.279(H)x0.279(H) mm
Pixel Arrangement	RGB vertical stripe	RGB vertical stripe	RGB vertical stripe
Display Mode	Normally white	Normally white	Normally white
Typical White Luminance (cd/m ²) also called Brightness	150	130(min)/160(typ)	120
Luminance Uniformity	1.2(5 points) 1.5(13 points)	not show	1.45(5 points) 2(13 points)
Contrast Ratio	250 (min)/ 300 (typ)	300(min)/450(typ)	300(min)
Response Time (Optical Rise Time/Fall Time)msec	15/10	6/17(typ) 10/25(max)	12.5/22.5
Nominal Input Voltage VDD	+3.3V	not show	+3.3V

LCD 14.1 inch for Aspire 1410

Item	Specification		
Typical Power Consumption (watt)	5.3	4.03 (for backlight unit)	N/A
Weight	400g (w/o inverter)	420g	460g
Physical Size(mm)	299(W)x228(H)x5.5 (D)	299(W)x228(H)x5.2 (D)	299(W)x228(H)x6.2 (D)
Electrical Interface	R/G/B Data, 3Sync, Signals, Clock (4 pairs LVDS)	1 channel LVDS	1 channel LVDS
Support Color	Native 262K colours	262K colours	262K colours
Viewing Angle (degree) Horizontal: Right/Left Vertical: Upper/Lower	45/45 15/35	45/45 15/35	40/40 10/30
Temperature Range(° C) Operating Storage (shipping)	0 to +50 -20 to +60	0 to +50 -20 to +60	0 to +50 -25 to +60

LCD 15 inch

Item	Specification		
Vendor & model name	AU: B150XG01	QDI QD15XL06-01	Hannstar HSD150PX14-A07
Screen Diagonal (mm)	381	15.0 inches	15.0 inches
Active Area (mm)	304.1x228.1	304.1x228.1	304.1x228.1
Display resolution (pixels)	1024x768 XGA	1024x768 XGA	1024x768 XGA
Pixel Pitch	0.297x0.297	0.099x0.297	0.297x0.297
Pixel Arrangement	R.G.B. Vertical Stripe	R.G.B. Vertical Stripe	R.G.B. Vertical Stripe
Display Mode	Normally White	Normally White	Normally White
Typical White Luminance (cd/m ²) also called Brightness	180 (5 point average) 150 (5 point average)	160	150
Luminance Uniformity	N/A	N/A	70
Contrast Ratio	300	300	250
Response Time (Optical Rise Time/Fall Time)msec	24/11 15/35	8/17	10/25
Nominal Input Voltage VDD	+3.3V Typ.	+3.3V	3.3V
Typical Power Consumption (watt)	5.6/5.7	3.96	N/A
Weight	550	570	600
Physical Size(mm)	317.3x242.0x6.0	317.3x242.0x5.9	317.3x242.0x6.5
Electrical Interface	1 channel LVDS	1 channel LVDS	1 channel LVDS
Support Color	262K colors (RGB 6-bit data driver)	262,144	262,144
Viewing Angle (degree) Horizontal: Right/Left Vertical: Upper/Lower	40/40 10/30	45/45 15/35	40/40 20/40
Temperature Range(° C) Operating Storage (shipping)	0 to +50 -20 to +60	0 to +50 -25 to +60	0 to +50 -20 to +60

LCD 15 inch and 15.4 inch

Item	Specification		
Vendor & model name	SAMSUNG LTN150XB-L03	Hitachi TX38D81VC1CAB	LCD 15.4" WXGA QDI
Screen Diagonal (mm)		15.0 inches, 381	390.1
Active Area (mm)	304.1x228.1	304.1x228.1	331.2x207.0
Display resolution (pixels)	1024x768 XGA	1024x768 XGA	1280x800 WXGA
Pixel Pitch	0.297x0.297	0.297x0.297	0.2588x0.2588
Pixel Arrangement	R.G.B. Vertical Stripe	R.G.B. Vertical Stripe	R.G.B. Vertical Stripe
Display Mode	Normally White	Transmissive & normally White	Normally White
Typical White Luminance (cd/m ²) also called Brightness	160	170	185
Luminance Uniformity	N/A	40	1.4 (5pts)
Contrast Ratio	200	200	400
Response Time (Optical Rise Time/Fall Time)msec	10/30(typ)	30/30	5/20
Nominal Input Voltage VDD	+3.3V	+3.3V	+3.3V Typ.
Typical Power Consumption (watt)	4.6 for backlight unit only	N/A	4.38
Weight	585	580	585
Physical Size(mm)	317.3x242.1x6.0	317.3x242.1x6.0	344x222.0x6.35 max
Electrical Interface	1 channel LVDS	1 channel LVDS	1 channel LVDS
Support Color	262K	262K	262K colors (RGB 6-bit data driver)
Viewing Angle (degree) Horizontal: Right/Left Vertical: Upper/Lower	45/45 25/45	40/40 20/40	15/35 45/45
Temperature Range(° C) Operating Storage (shipping)	N/A	0 to +40 -20 to +60	0 to +50 -25 to +60

LCD Inverter

Item	Specification
Vendor & model name	SUMIDA TWS-449-147
Brightness conditions	Vadj=3.3V
Input voltage (V)	8~20
Input current (mA)	350 (max)
Output voltage (V, rms)	1600 (no load)
Output current (mA, rms)	5.6~5.4
Output voltage frequency (k Hz)	55~58K Hz

AC Adaptor

Item	Specification
Input rating	90V AC to 264V AC, 47Hz to 63Hz

AC Adaptor

Item	Specification
Maximum input AC current	3.42A
Inrush current	220A@115VAC 220A@230VAC
Efficiency	82% min. @115VAC input full load

System Power Management

ACPI mode	Power Management
Mech. Off (G3)	All devices in the system are turned off completely.
Soft Off (G2/S5)	OS initiated shutdown. All devices in the system are turned off completely.
Working (G0/S0)	Individual devices such as the CPU and hard disc may be power managed in this state.
Suspend to RAM (S3)	CPU set power down VGA Suspend PCMCIA Suspend Audio Power Down Hard Disk Power Down CD-ROM Power Down Super I/O Low Power mode
Save to Disk (S4)	Hibernation Mode Also called Hibernate state. System saves all system states and data onto the disc prior to power off the whole system.

System Utilities

BIOS Setup Utility

The BIOS Setup Utility is a hardware configuration program built into your computer's BIOS (Basic Input/Output System).

Your computer is already properly configured and optimized, and you do not need to run this utility. However, if you encounter configuration problems, you may need to run Setup. Please also refer to Chapter 4 Troubleshooting when problem arises.

To activate the BIOS Utility, press **F2** during POST (when "Press <F2> to enter Setup" message is prompted on the bottom of screen).

Press **F2** to enter setup. The default parameter of F12 Boot Menu is set to "disabled". If you want to change boot device without entering BIOS Setup Utility, please set the parameter to "enabled".

Press <F12> during POST to enter multi-boot menu. In this menu, user can change boot device without entering BIOS SETUP Utility.

PhoenixBIOS Setup Utility					
Info.	Main	Advanced	Security	Boot	Exit
CPU Type: Intel (R) Pentium (R) M processor 1.70Ghz CPU Speed: 1700 MHz HDD1 Model Name: IC25N080ATMR04-0 HDD1 Serial Number: MPAA01Q2G0746A HDD2 Model Name: HDD2 Serial Number: ATAPI Device: MATSHITADVD-RAM UJ-825S System BIOS Ver: 3A01 VGA BIOS Ver: Montara-GME3360 KBC Ver: PQ1A24 Serial Number 1234567890123456789012 Asset Tag Number: 1234567890 Product Aspire1680 Manufacturer Name: Acer UUID: xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx					
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults		
Esc Exit	←→ Select Menu	Enter Select	▶ Sub-Menu	F10 Save and Exit	

Navigating the BIOS Utility

There are six menu options: Info., Main, System Devices, Security, Boot, and Exit.

Follow these instructions:

- ❑ To choose a menu, use the cursor left/right keys (← →).
- ❑ To choose a parameter, use the cursor up/down keys (↑ ↓).
- ❑ To change the value of a parameter, press F8 or F6.
- ❑ A plus sign (+) indicates the item has sub-items. Press ENTER to expand this item.
- ❑ Press ESC while you are in any of the menu options to go to the Exit menu.
- ❑ In any menu, you can load default settings by pressing F8. You can also press F6 to save any changes made and exit the BIOS Setup Utility.

NOTE: You can change the value of a parameter if it is enclosed in square brackets. Navigation keys for a particular menu are shown on the bottom of the screen. Help for parameters are found in the Item Specific Help part of the screen. Read this carefully when making changes to parameter values. Please note that system information vary in models.

Information

PhoenixBIOS Setup Utility

Info.
Main
Advanced
Security
Boot
Exit

```

CPU Type:           Intel (R) Pentium (R) M processor 1.70Ghz
CPU Speed:          1700 MHz

HDD1 Model Name:    IC25N080ATMR04-0
HDD1 Serial Number: MPAA01Q2G0746A
HDD2 Model Name:
HDD2 Serial Number:
ATAPI Device:       MATSHITADVD-RAM UJ-825S
System BIOS Ver:    3A01
VGA BIOS Ver:       Montara-GME3360
KBC Ver:            PQ1A24
Serial Number       1234567890123456789012
Asset Tag Number:   1234567890
Product             Aspire1680
Manufacturer Name:  Acer
UUID:              xxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxxx
                    
```

F1 Help
↑↓ Select Item
F5/F6 Change Values
F9 Setup Defaults
Esc Exit
←→ Select Menu
Enter Select ▶ Sub-Menu
F10 Save and Exit

NOTE: The system information is subject to different models.

Parameter	Description
Floppy Disk Drive	Shows floppy drive type information only when this model has floppy disk drive.
HDD Model Name	This field shows the model name of HDD installed on primary IDE master.
HDD Serial Number	This field displays the serial number of HDD installed on primary IDE master.
ATAPI Model Name	This field displays the model name of devices installed on secondary IDE master. The hard disk drive or optical drive model name is automatically detected by the system.
ATAPI Serial Number	This field shows the serial number of devices installed on secondary IDE master.
Serial Number	This field displays the serial number of this unit.
UUID Number	This will be visible only when an internal LAN device is presenting. UUID=32bytes

Main

The Main screen displays a summary of your computer hardware information, and also includes basic setup parameters. It allows the user to specify standard IBM PC AT system parameters.

PhoenixBIOS Setup Utility					
Info.	Main	Advanced	Security	Boot	Exit
					Item Specific Help
System Time:	[05:34:07]				<Tab>, <Shift-Tab>, or <Enter> selects field.
System Date:	[07/23/2004]				
System Memory:	640 KB	Shows system base memory size			
Extended Memory:	238MB	Shows extended memory size			
Video Memory	[16MB]	VGA memory size			
Quiet Boot:	[Enabled]				
Power on Display:	[Auto]				
Network boot:	[Enabled]				
F12 Boot Menu:	[Disabled]				
D2D recovery:	[Enabled]				
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults		
Esc Exit	←→ Select Menu	Enter Select	▶ Sub-Menu	F10 Save and Exit	

NOTE: The screen above is for reference only. Actual values may differ.

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Format/Option
System Time	Sets the system time. The hours are displayed with 24-hour format.	Format: HH:MM:SS (hour:minute:second) System Time
System Date	Sets the system date.	Format MM/DD/YYYY (month/day/year) System Date
System Memory	This field reports the memory size of the system. Memory size is fixed to 640MB	
Extended Memory	This field reports the memory size of the extended memory in the system. Extended Memory size=Total memory size-1MB	
VGA Memory	Shows the VGA memory size. VGA Memory size=64/128MB	
Fast Boot	Determines if Customer Logo will be displayed or not; shows Summary Screen is disabled or enabled. Enabled: Customer Logo is displayed, and Summary Screen is disabled. Disabled: Customer Logo is not displayed, and Summary Screen is enabled.	Option: Enabled or Disabled
Power on display	Auto: During power process, the system will detect if any display device is connected on external video port. If any external display device is connected, the power on display will be in CRT (or projector) only mode. Otherwise it will be in LCD only mode. Both: Simultaneously enable both the integrated LCD screen and the system's external video port (for an external CRT or projector).	Option: Auto or Both
LCD Auto Dim	Determines if the system will automatically dim the LCD brightness in order to save power when AC is not present. The system will support an automatic dimming of the LCD backlight when the AC power is NOT available (running on battery power).	Option: Enabled or Disabled
Network Boot	Enables, disables the system boot from LAN (remote server).	Option: Enabled or Disabled
F12 Boot Menu	Enables, disables Boot Menu during POST.	Option: Disabled or Enabled
D2D Recovery	Enables, disables D2D Recovery function. The function allows the user to create a hidden partition on hard disc drive to store operation system and restore the system to factory defaults.	Option: Enabled or Disabled

NOTE: The sub-items under each device will not be shown if the device control is set to disable or auto. This is because the user is not allowed to control the settings in these cases.

Advanced

The Advanced menu screen contains parameters involving your hardware devices. It also provides advanced settings of the system.

PhoenixBIOS Setup Utility		
Info.	Main	Advanced
Internal Touchpad: [Both] Infrared Port (FIR): [Enabled]		Item Specific Help Configure Infrared Port using options: [Disable] No configuration [Enabled] User configuration [Auto] BIOS or OS chooses configuration (OS Controlled) Displayed when controlled by OS
F1 Help	↑↓ Select Item	F5/F6 Change Values
Esc Exit	←→ Select Menu	Enter Select ▶ Sub-Menu
		F9 Setup Defaults
		F10 Save and Exit

The table below describes the parameters in the screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Options
Infrared Port	Enables, disables or auto detects the infrared port.	Disabled /Disabled/Auto
Parallel Port	Enables, disables or auto detects the parallel port.	Enabled /Disabled/Auto
Mode	Sets the operation mode of the parallel port.	ECP , EPP, Output only or Bi-directional
Base I/O address	Sets the I/O address of the parallel port.	378 /278
Interrupt	Sets the interrupt request of the parallel port.	IRQ7 /IRQ5
DMA channel	Sets a DMA channel for the printer to operate in ECP mode. This parameter is enabled only if Mode is set to ECP.	DMA3 /DMA1

Parameter	Description	Options
Legacy USB Support	Enables, disables USB interface devices support. (Enable for use with a non-USB aware Operating System such as DOS or UNIX).	Option: Disabled or Enabled
Hard Disk Recovery	Enables or disables Hard Disk to Hard Disk system Recovery by pressing Fn+F10 key during POST.	Option: Disabled or Enabled

Security

The Security screen contains parameters that help safeguard and protect your computer from unauthorized use.

PhoenixBIOS Setup Utility															
Info.	Main	Advanced	Security	Boot	Exit										
					Item Specific Help										
Supervisor Password Is:		Clear		<p>When shown as [Locked], the hard drive password currently can not be changed or disabled.</p> <p>To change or disable it, turn off the system and enter Setup immediately after turning it back on.</p> <p>Press [Enter] to input, change, or disable hard drive passwords.</p>											
User Password Is:		Clear													
Primary HardDisk Security:		Clear													
HDD Master ID:		43883445													
Set Supervisor Password		[Enter]													
Set User Passord		[Enter]													
Set HDD Password		[Enter]													
Password on Boot		[Disabled]													
<table border="0"> <tr> <td>F1 Help</td> <td>↑↓ Select Item</td> <td>F5/F6 Change Values</td> <td>F9 Setup Defaults</td> </tr> <tr> <td>Esc Exit</td> <td>←→ Select Menu</td> <td>Enter Select ▶ Sub-Menu</td> <td>F10 Save and Exit</td> </tr> </table>						F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults	Esc Exit	←→ Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit		
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults												
Esc Exit	←→ Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit												

The table below describes the parameters in this screen. Settings in **boldface** are the default and suggested parameter settings.

Parameter	Description	Option
User Password is	Shows the setting of the user password.	Clear or Set
Supervisor Password is	Shows the setting of the Supervisor password	Clear or Set
Set User Password	Press Enter to set the user password. When user password is set, this password protects the BIOS Setup Utility from unauthorized access. The user can enter Setup menu only and does not have right to change the value of parameters.	
Set Supervisor Password	Press Enter to set the supervisor password. When set, this password protects the BIOS Setup Utility from unauthorized access. The user can not either enter the Setup menu nor change the value of parameters.	
Primary Harddisk Security	This feature is available to user when Supervisor password is set. Password can be written on HDD only when Supervisor password or user password is set and password on HDD is set to enabled. Supervisor Password is written to HDD only when Supervisor password is being set. User password is written to HDD when both passwords are set. When both Supervisor and user password are present, both passwords can unlock the HDD.	Disabled or Enabled
Password on Boot	Defines whether a password is required or not while the events defined in this group happened. The following sub-options are all requires the Supervisor password for changes and should be grayed out if the user password was used to enter setup.	Disabled or Enabled

NOTE: When you are prompted to enter a password, you have three tries before the system halts. Don't forget your password. If you forget your password, you may have to return your notebook computer to your dealer to reset it.

Setting a Password

Follow these steps as you set the user or the supervisor password:

- Use the **↑** and **↓** keys to highlight the Set Supervisor Password parameter and press the **ENTER** key. The Set Supervisor Password box appears:

Set Supervisor Password

Enter New Password []

Confirm New Password []

- Type a password in the "Enter New Password" field. The password length can not exceeds 8 alphanumeric characters (A-Z, a-z, 0-9, not case sensitive). Retype the password in the "Confirm New Password" field.

IMPORTANT: Be very careful when typing your password because the characters do not appear on the screen.

3. Press **ENTER**.
After setting the password, the computer sets the User Password parameter to “Set”.
4. If desired, you can opt to enable the Password on boot parameter.
5. When you are done, press **F10** to save the changes and exit the BIOS Setup Utility.

Removing a Password

Follow these steps:

1. Use the **↑** and **↓** keys to highlight the Set Supervisor Password parameter and press the **ENTER** key. The Set Password box appears:

Set Supervisor Password		
Enter current password	[]
Enter New Password	[]
Confirm New Password	[]

2. Type the current password in the Enter Current Password field and press **ENTER**.
3. Press **ENTER** twice **without** typing anything in the Enter New Password and Confirm New Password fields. The computer then sets the Supervisor Password parameter to “Clear”.
4. When you have changed the settings, press **F10** to save the changes and exit the BIOS Setup Utility.


Changing a Password

1. Use the **↑** and **↓** keys to highlight the Set Supervisor Password parameter and press the **ENTER** key. The Set Password box appears:

Set Supervisor Password		
Enter current password	[]
Enter New Password	[]
Confirm New Password	[]


2. Type the current password in the Enter Current Password field and press **ENTER**.
3. Type a password in the Enter New Password field. Retype the password in the Confirm New Password field.
4. Press **ENTER**. After setting the password, the computer sets the User Password parameter to “Set”.
5. If desired, you can enable the Password on boot parameter.
6. When you are done, press **F10** to save the changes and exit the BIOS Setup Utility.

If the verification is OK, the screen will display as following.

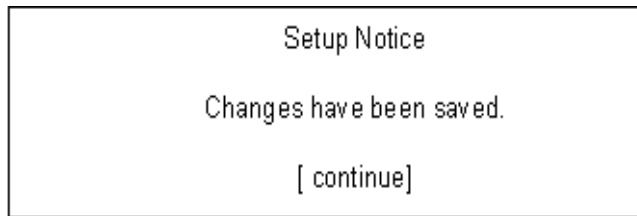


The password setting is complete after the user presses .

If the current password entered does not match the actual current password, the screen will show you the Setup Warning.

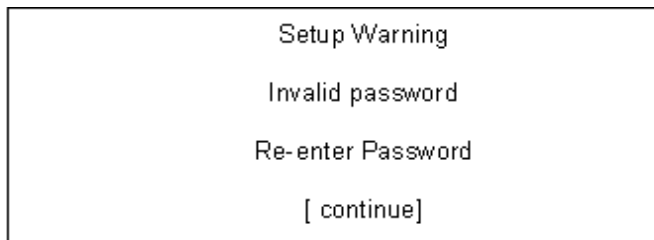

If the new password and confirm new password strings do not match, the screen will display the following message.

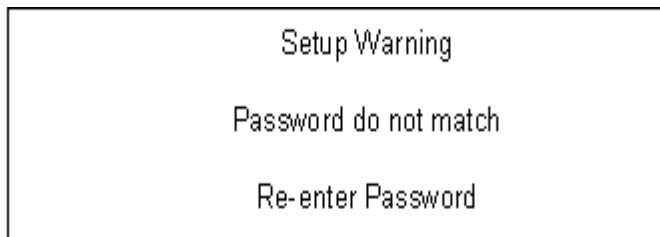

Boot

This menu allows the user to decide the order of boot devices to load the operating system. Bootable devices includes the distette drive in module bay, the onboard hard disk drive and the CD-ROM in module bay.

PhoenixBIOS Setup Utility					
Info.	Main	Advanced	Security	Boot	Exit
CD-ROM/DVD Drive Floppy Devices +Hard Drive Network Boot				Item Specific Help	
				+ and - indicate device categories. Use <Enter> to expand/collapses. Boot order is top-down using only the top device in each category. Use <F6> and <F5> to move highlighted item up and down.	
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults		
Esc Exit	←→ Select Menu	Enter Select ▶ Sub-Menu	F10 Save and Exit		

Exit

The Exit screen contains parameters that help safeguard and protect your computer from unauthorized use.

PhoenixBIOS Setup Utility					
Info.	Main	Advanced	Security	Boot	Exit
Exit Saving Changes Exit Discarding Changes Load Setup Defaults Discard Changes Save Changes					Item Specific Help
					Exit System Setup and save your changes to CMOS.
F1 Help	↑↓ Select Item	F5/F6 Change Values	F9 Setup Defaults		
Esc Exit	←→ Select Menu	Enter Select	▶ Sub-Menu	F10 Save and Exit	

The table below describes the parameters in this screen.

Parameter	Description
Exit Saving Changes	Exit System Setup and save your changes to CMOS.
Exit Discarding Changes	Exit utility without saving setup data to CMOS.
Load Setup Default	Load default values for all SETUP item.
Discard Changes	Load previous values from CMOS for all SETUP items.
Save Changes	Save Setup Data to CMOS.

BIOS Flash Utility

The BIOS flash memory update is required for the following conditions:

- New versions of system programs
- New features or options
- Restore a BIOS when it becomes corrupted.

Use the Phlash utility to update the system BIOS flash ROM.

NOTE: If you do not have a crisis recovery diskette at hand, then you should create a **Crisis Recovery Diskette** before you use the Phlash utility.

NOTE: Do not install memory-related drivers (XMS, EMS, DPMS) when you use the Phlash.

NOTE: Please use the AC adaptor power supply when you run the Phlash utility. If the battery pack does not contain enough power to finish BIOS flash, you may not boot the system because the BIOS is not completely loaded.

Follow the steps below to run the Phlash.

1. Prepare a bootable diskette.
2. Copy the Phlash utilities to the bootable diskette.
3. Then boot the system from the bootable diskette. The Phlash utility has auto-execution function.

Machine Disassembly and Replacement

This chapter contains step-by-step procedures on how to disassemble the notebook computer for maintenance and troubleshooting.

To disassemble the computer, you need the following tools:

- Wrist grounding strap and conductive mat for preventing electrostatic discharge
- Small Philips screw driver
- Philips screwdriver
- Plastic flat head screw driver
- Tweezers

NOTE: The screws for the different components vary in size. During the disassembly process, group the screws with the corresponding components to avoid mismatch when putting back the components. When you remove the stripe cover, please be careful not to scrape the cover.


General Information

Before You Begin

Before proceeding with the disassembly procedure, make sure that you do the following:

1. Turn off the power to the system and all peripherals.
2. Unplug the AC adapter and all power and signal cables from the system.
3. Remove the battery pack.

NOTE: The screws used to secure bottom case and upper case are more than one type. Please group same type of screw together as you disassemble the system for service purpose. The image below is for your reference. Please pay attention to the explanation below.

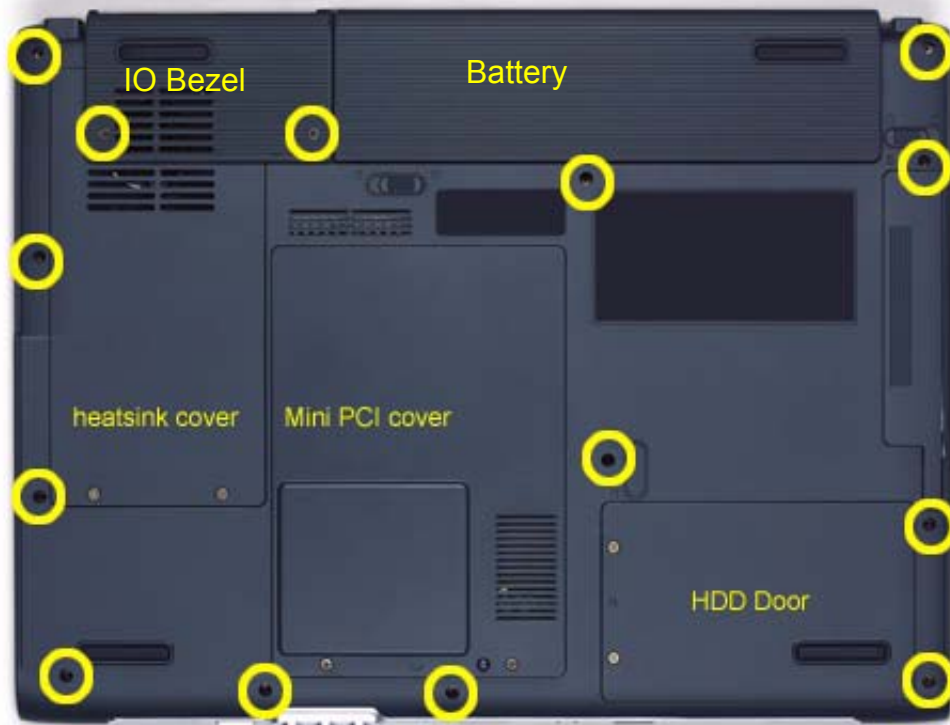



The screws that secure heatsink cover, Mini PCI cover and HDD cover are with the covers. There is no need to worry about mix them up. However, please notice that you have to group the screws on the following locations together. There are twenty screws holding the bottom case to upper case but some screws are inside the system. You may have to remove the HDD, the heatsink cover to see these screws. Mini PCI cover here also called RAM/Wireless cover.

Screw Type	Location	Quantity
M2.5*6	Bottom case and IO bezel (highlight with yellow circle)	14
M2.5*6	Remove the IO bezel then you will see.	2
M2.5*6	Remove the heatsink cover then you will see.	1
M2.5*6	Remove the HDD cover then you will see.	1
M2.5*3	Detach the HDD module then you will see.	1
M2.5*3	Remove the battery then you will see.	1

Disassembly Procedure Flowchart

The flowchart on the succeeding page gives you a graphic representation on the entire disassembly sequence and instructs you on the components that need to be removed during servicing. For example, if you want to remove the system board, you must first remove the keyboard, then disassemble the inside assembly frame in that order.

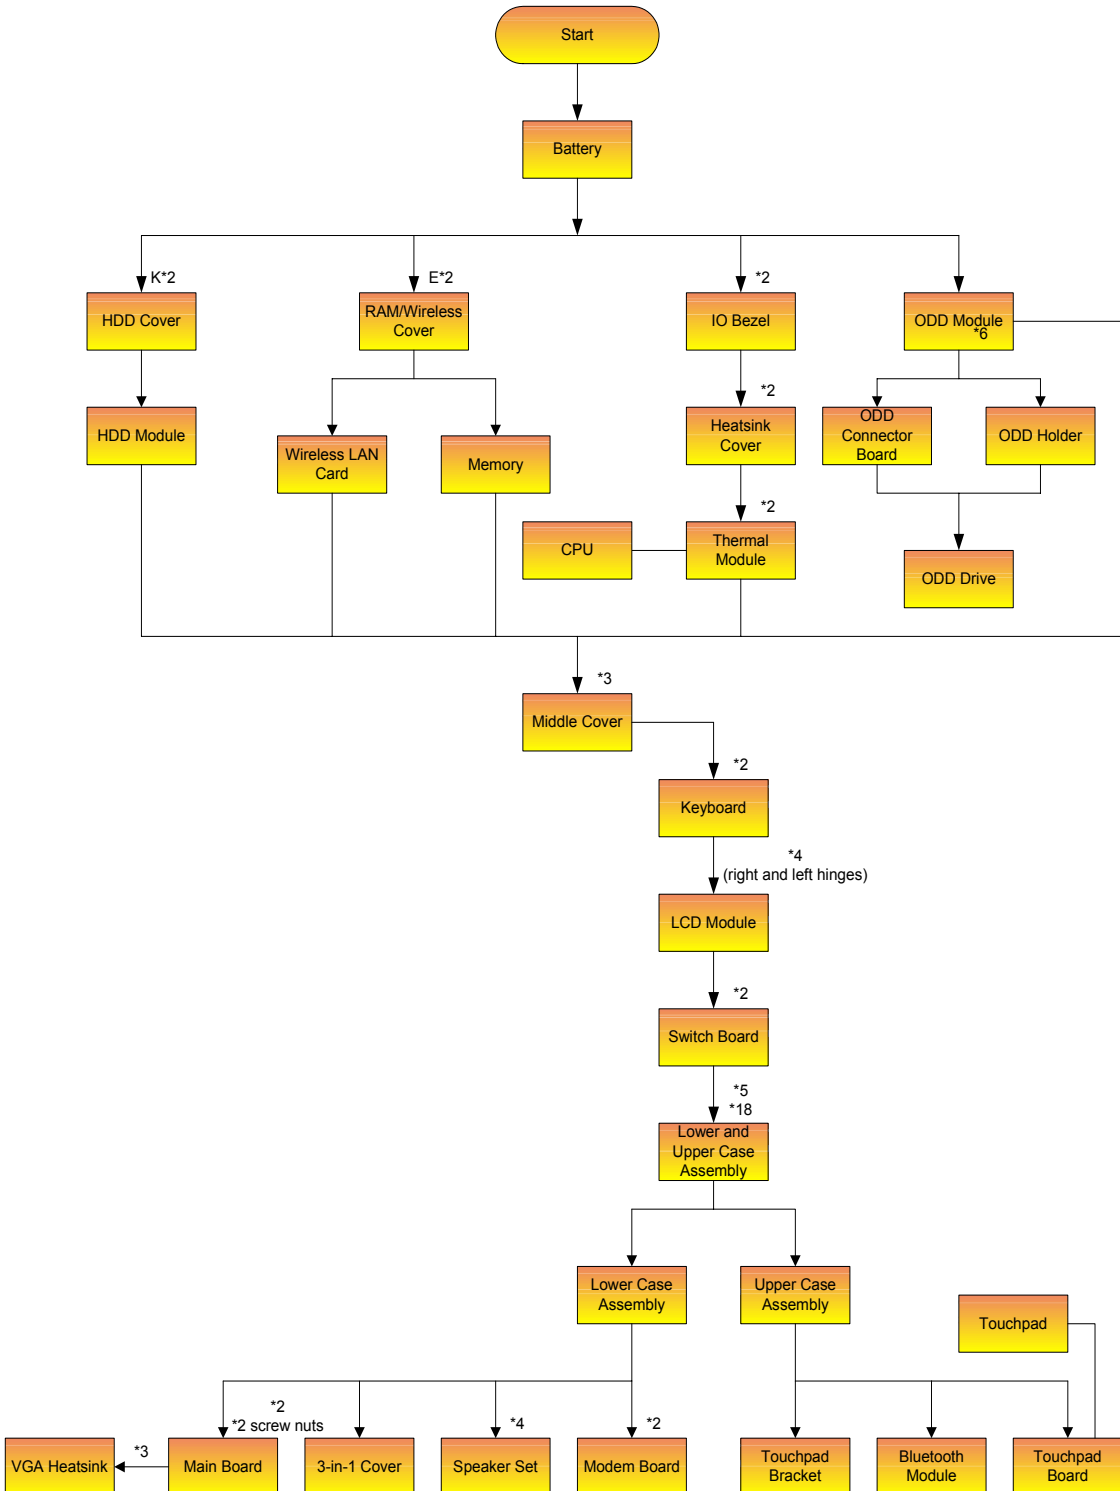

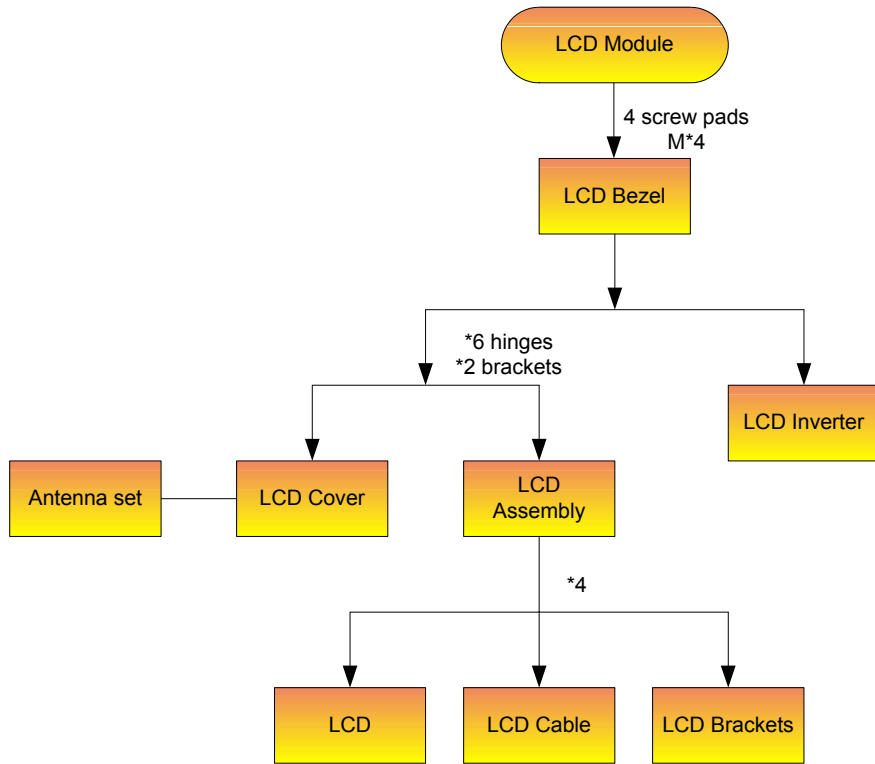

Screw List

Item	Description	
	SCREW M2.0X3.0-I-NI-NYLOK	86.A03V7.012
	SCREW I2.5*3M-BNIH(M2.5L3)	86.T25V7.012
	SCREW M2.5*4L-BZN-NYLOK	86.A03V7.006
	SCREW M2.0X5-I-NI-NYLOK	86.T23V7.006
	SCREW MM25060IL69	86.A08V7.004
	SCREW M2.0*5-I(NI)(NYLOK)	86.T23V7.010
	SCREW M2.0X2.5-I-NI-NYLOK	86.A03V7.007
	SCREW I2*3M-NIHY (M2L3)	86.T25V7.008
	SCREW M1.7*3.0-I (BK)	86.T50V7.001
	SCREW I3*3.5M-NIH(M3L3.5)	86.A03V7.011

Removing the Battery Pack

1. Unlock the battery lock.
2. Slide the battery latch as shown then remove the battery pack.



Removing the HDD Module/the Memory and the Wireless LAN Card/ the Thermal Module and the CPU/ODD Module and LCD Module


Removing the HDD Module

1. Remove the two screws holding the HDD cover.
2. Remove the HDD cover.
3. Detach the HDD module then remove it.



Removing the Memory and the Wireless LAN Card

1. Remove the two screws that secure the RAM/Wireless cover.
2. Remove the RAM/Wireless cover.

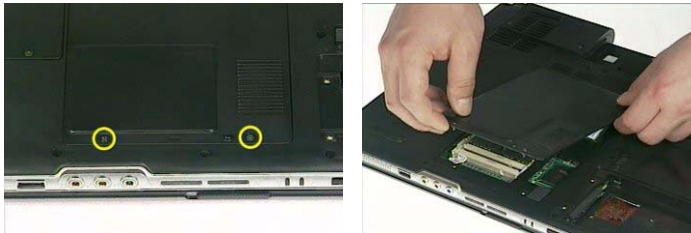


3. Pop up the memory then remove it.
4. Disconnect the auxiliary and the main wireless antennae.
5. Pop the wireless LAN card then remove it.




Removing the Thermal Module and CPU

1. Remove the two screws holding the IO bezel.


2. Then remove the IO bezel.
3. Remove the two screws that secure the heatsink cover.

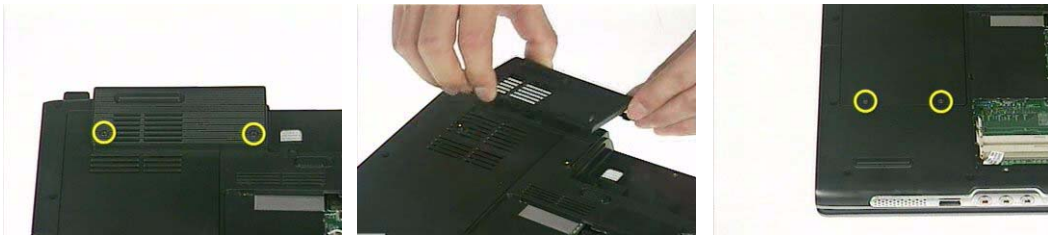


4. Remove the heatsink cover from the main unit.
5. Disconnect the fan cable.

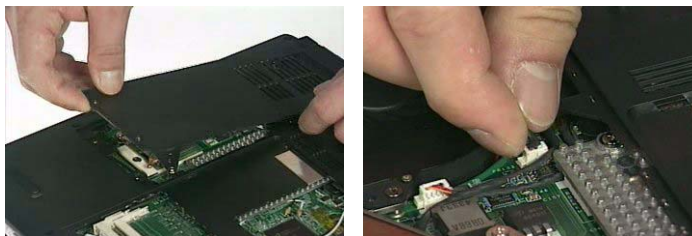



6. Remove the four screws that secure the thermal module.
7. Pull the thermal module outwards then remove it.

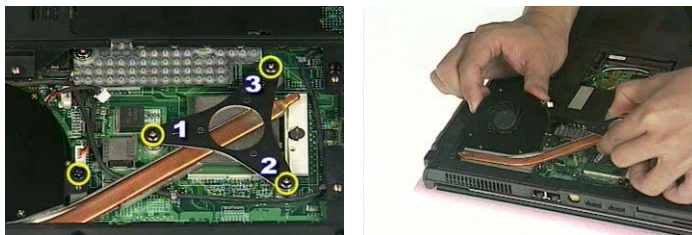

NOTE: The edge of the thermal module as shown is very sharp. Be very careful as you remove the thermal module.

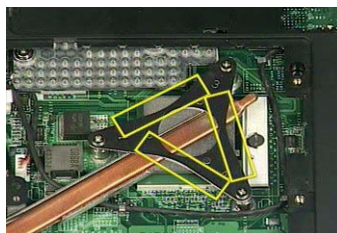


8. Use a flat-bladed screwdriver to release the CPU lock.
9. Remove the CPU from the socket carefully.

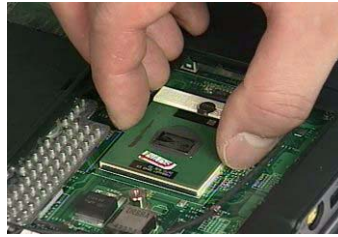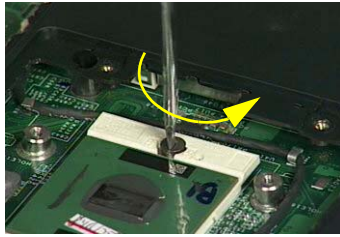

Removing the ODD Module

1. Release the ODD latch.
2. Remove the ODD module from the main unit.

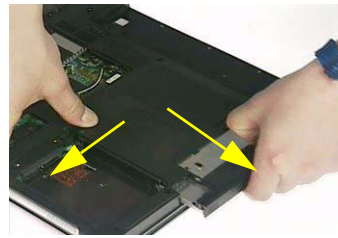


Removing the LCD Module

1. Remove the three screws holding the keyboard cover.
2. Open the LCD module as the picture shown then detach the keyboard cover from the main unit.



3. Remove the two screws that secure the keyboard as shown.
4. Turn over the keyboard as shown and disconnect the keyboard cable then remove the keyboard.
5. Pull out the antenna set with a tweezers then take out the antenna set from the main unit.

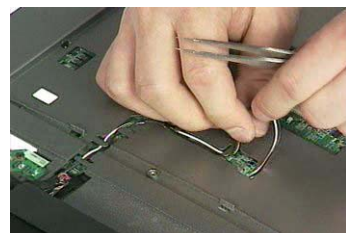

6. Disconnect the LCD coaxial cable.
7. Remove the four screws holding the right and the left hinge. Two on each side.

8. Then detach the LCD module from the main unit.




Disassembling the Main Unit

Separate the Main Unit Into the Upper and the Lower Case Assembly


1. Remove the two screws holding the switch board.
2. Remove the switch board.
3. Disconnect the touchpad FFC from the main board.



4. Disconnect the bluetooth cable.
5. Remove the five screws that secure the upper case.
6. Remove the eighteen screws on the bottom as shown.

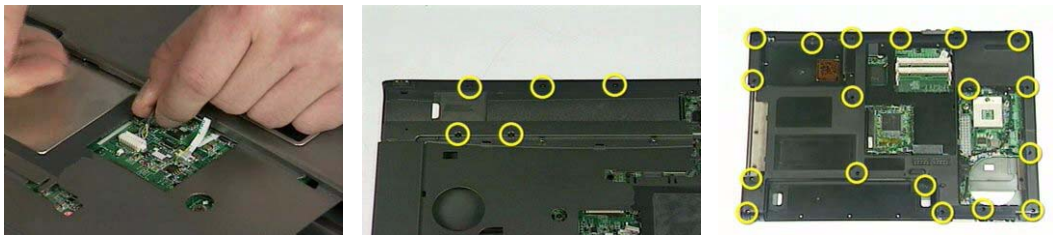


7. Detach the upper case assembly and place it next to the lower case assembly.
8. Disconnect the microphone cable then remove the upper case assembly.

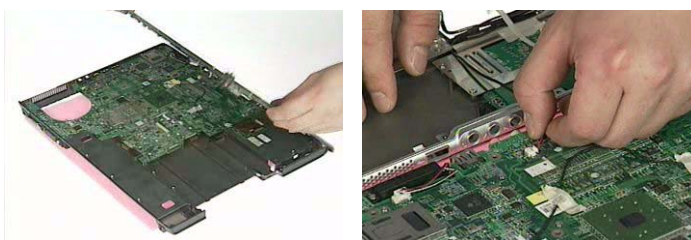

Disassembling the Upper Case Assembly


1. Disconnect the touchpad board to touchpad FFC.
2. Disconnect the touchpad board to main board FFC.
3. Then detach the touchpad board to main board FFC from the touchpad board.

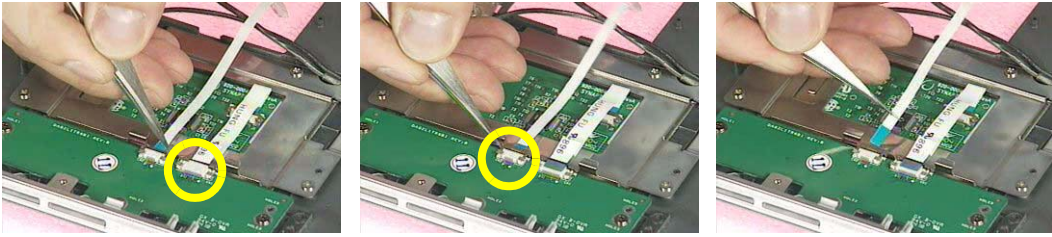

4. Remove the three screws that secure the touchpad board.
5. Remove the touchpad board from the upper case.
6. Disconnect the touchpad board to touchpad FFC.



7. Remove the touchpad board to touchpad FFC from the upper case assembly.
8. Remove the four screws holding the touchpad bracket.
9. Detach the touchpad bracket from the upper case assembly.

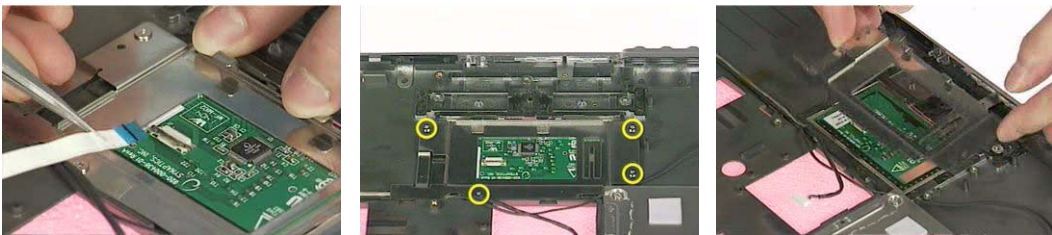


10. Remove the touchpad from the upper case.
11. Remove the two screws that secure the bluetooth module.
12. Disconnect the bluetooth module then remove it.




Disassembling the Lower Case Assembly

1. Disconnect the MDC cable from the modem board.
2. Detach the MDC cable from the main board.
3. Remove the two screws holding the modem board.

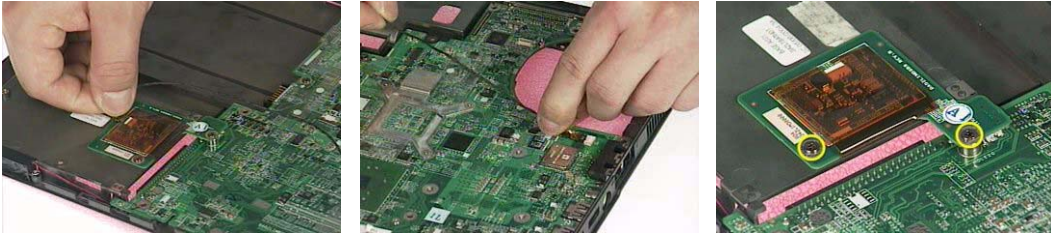

4. Remove the modem board from the lower case.
5. Disconnect the speaker cable from the main board.
6. Remove the two screws that secure the main board.

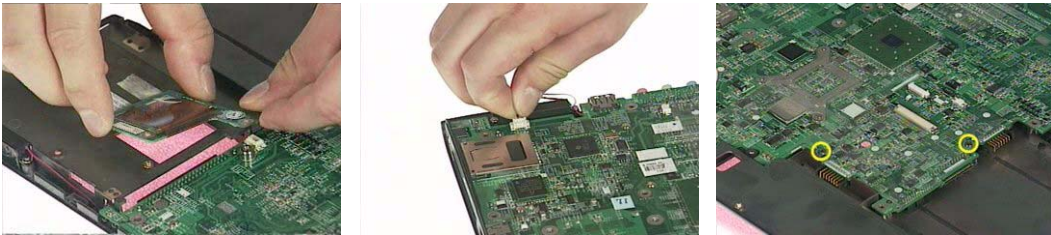

7. Remove the two screw nuts as shown.
8. Then you can detach the main board from the upper case.
9. Remove the three screws that secure the VGA heatsink.



10. Remove the VGA heatsink from the main board as shown.
11. Remove the three in one cover from the lower case.
12. Remove the two screws that secure the speaker set on one side.



13. Then remove another two screws holding the speaker set on the other side.
14. Then take out the speaker set from the lower case.





Disassembling the LCD Module

1. Remove the four screw caps as shown.
2. Remove the four screws holding the LCD bezel.
3. Then detach the LCD bezel from the LCD module.



4. Disconnect the inverter board then remove it.
5. Remove the three screws holding the right hinge.
6. Then remove the three screws that secure the left hinge.

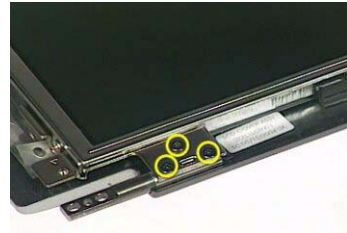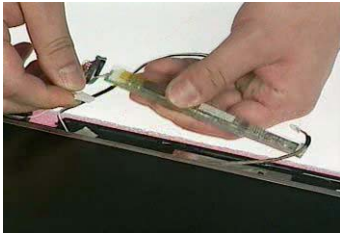

7. Remove one screw that secure the LCD bracket.
8. Remove another screw holding the LCD bracket on the other side.
9. Then detach the LCD panel from the LCD cover carefully.



10. Remove the two screws holding the right bracket.
11. Then remove the right bracket.
12. Remove another two screws that tighten the left bracket.



- 13.** Remove the left bracket as the picture shows.
- 14.** Tear off the tape fastening the LCD cable.
- 15.** Tear off the the LCD cable fastening the LCD cable, then remove it..



Disassembling the External Modules


Disassembling the HDD Module

1. Remove the two screws holding the HDD bracket on one side.
2. Remove another two screws holding the HDD bracket on the other side.
3. Then take the hard disc drive out from the HDD bracket.




Disassembling the Optical Drive Module

1. Remove the four screws as the picture shows.
2. Remove the two screws that secure the optical disc drive and the ODD holder.

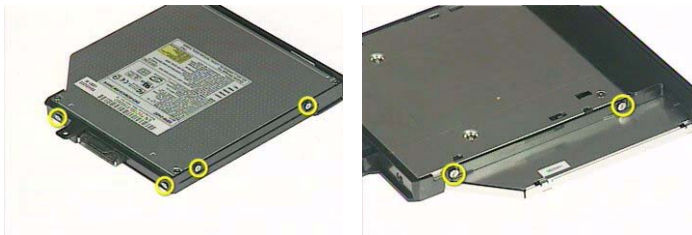

3. Push the ODD holder as shown.
4. Detach the ODD holder.
5. Disconnect the ODD connector board then remove it.

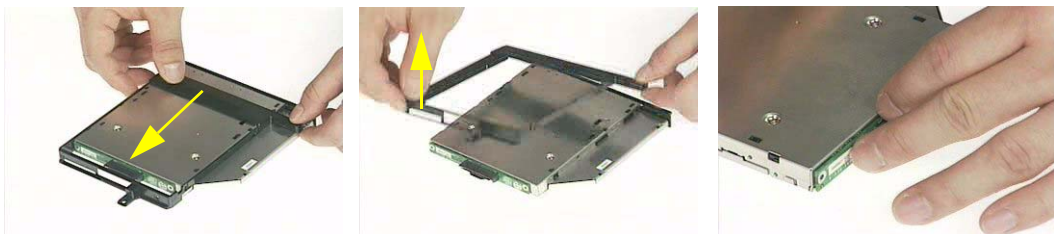

Troubleshooting

Use the following procedure as a guide for computer problems.

NOTE: The diagnostic tests are intended to test only Acer products. Non-Acer products, prototype cards, or modified options can give false errors and invalid system responses.

1. Obtain the failing symptoms in as much detail as possible.
2. Verify the symptoms by attempting to re-create the failure by running the diagnostic test or by repeating the same operation.
3. Use the following table with the verified symptom to determine which page to go to.

Symptoms (Verified)	Go To
Power failure. (The power indicator does not go on or stay on.)	"Power System Check" on page 70.
POST does not complete. No beep or error codes are indicated.	"Power-On Self-Test (POST) Error Message" on page 73 "Undetermined Problems" on page 82
POST detects an error and displayed messages on screen.	"Error Message List" on page 74
Other symptoms (i.e. LCD display problems or others).	"Power-On Self-Test (POST) Error Message" on page 73
Symptoms cannot be re-created (intermittent problems).	Use the customer-reported symptoms and go to "Power-On Self-Test (POST) Error Message" on page 73 "Intermittent Problems" on page 81 "Undetermined Problems" on page 82

System Check Procedures

External Diskette Drive Check

Do the following to isolate the problem to a controller, driver, or diskette. A write-enabled, diagnostic diskette is required.

NOTE: Make sure that the diskette does not have more than one label attached to it. Multiple labels can cause damage to the drive or cause the drive to fail.

Do the following to select the test device.

1. Boot from the diagnostics diskette and start the diagnostics program.
2. See if FDD Test is passed as the program runs to FDD Test.
3. Follow the instructions in the message window.

If an error occurs with the internal diskette drive, reconnect the diskette connector on the system board.

If the error still remains:

1. Reconnect the external diskette drive/DVD-ROM module.
2. Replace the external diskette drive/CD-ROM module.
3. Replace the main board.

External CD-ROM Drive Check

Do the following to isolate the problem to a controller, drive, or CD-ROM. Make sure that the CD-ROM does not have any label attached to it. The label can cause damage to the drive or can cause the drive to fail.

Do the following to select the test device:

1. Boot from the diagnostics diskette and start the diagnostics program.
2. See if CD-ROM Test is passed when the program runs to CD-ROM Test.
3. Follow the instructions in the message window.

If an error occurs, reconnect the connector on the System board. If the error still remains:

1. Reconnect the external diskette drive/CD-ROM module.
2. Replace the external diskette drive/CD-ROM module.
3. Replace the main board.

Keyboard or Auxiliary Input Device Check

Remove the external keyboard if the internal keyboard is to be tested.

If the internal keyboard does not work or an unexpected character appears, make sure that the flexible cable extending from the keyboard is correctly seated in the connector on the system board.

If the keyboard cable connection is correct, run the Keyboard Test.

If the tests detect a keyboard problem, do the following one at a time to correct the problem. Do not replace a non-defective FRU:

1. Reconnect the keyboard cables.
2. Replace the keyboard.
3. Replace the main board.

The following auxiliary input devices are supported by this computer:

- Numeric keypad
- External keyboard

If any of these devices do not work, reconnect the cable connector and repeat the failing operation.

Memory check

Memory errors might stop system operations, show error messages on the screen, or hang the system.

1. Boot from the diagnostics diskette and start the doagmpstotics program (please refer to main board).
2. Go to the diagnostic memory in the test items.
3. Press F2 in the test items.
4. Follow the instructions in the message window.

NOTE: Make sure that the DIMM is fully installed into the connector. A loose connection can cause an error.

Power System Check

To verify the symptom of the problem, power on the computer using each of the following power sources:


1. Remove the battery pack.
2. Connect the power adapter and check that power is supplied.
3. Disconnect the power adapter and install the charged battery pack; then check that power is supplied by the battery pack.

If you suspect a power problem, see the appropriate power supply check in the following list:

- “Check the Power Adapter” on page 71
- “Check the Battery Pack” on page 72

Check the Power Adapter

Unplug the power adapter cable from the computer and measure the output voltage at the plug of the power adapter cable. See the following figure



Pin 1: +19 to +20.5V
Pin 2: 0V, Ground

1. If the voltage is not correct, replace the power adapter.
2. If the voltage is within the range, do the following:
 - Replace the System board.
 - If the problem is not corrected, see “Undetermined Problems” on page 82.
 - If the voltage is not correct, go to the next step.

NOTE: An audible noise from the power adapter does not always indicate a defect.

3. If the power-on indicator does not light up, check the power cord of the power adapter for correct continuity and installation.
4. If the operational charge does not work, see “Check the Battery Pack” on page 72.

Check the Battery Pack


To check the battery pack, do the following:

From Software:

1. Check out the Power Management in control Panel
2. In Power Meter, confirm that if the parameters shown in the screen for Current Power Source and Total Battery Power Remaining are correct.
3. Repeat the steps 1 and 2, for both battery and adapter.
4. This helps you identify first the problem is on recharging or discharging.

From Hardware:

1. Power off the computer.
2. Remove the battery pack and measure the voltage between battery terminals 1(+) and 6(ground). See the following figure

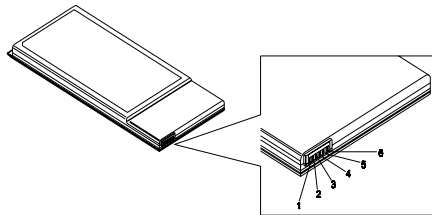

3. If the voltage is still less than 7.5 Vdc after recharging, replace the battery.

To check the battery charge operation, use a discharged battery pack or a battery pack that has less than 50% of the total power remaining when installed in the computer.

If the battery status indicator does not light up, remove the battery pack and let it return to room temperature. Re-install the battery pack.

If the charge indicator still does not light up, replace the battery pack. If the charge indicator still does not light up, replace the DC/DC charger board.

Touchpad Check

If the touchpad doesn't work, do the following actions one at a time to correct the problem. Do not replace a non-defective FRU:

1. Reconnect the touchpad cables.
2. Replace the touchpad.
3. Replace the system board.

After you use the touchpad, the pointer drifts on the screen for a short time. This self-acting pointer movement can occur when a slight, steady pressure is applied to the touchpad pointer. This symptom is not a hardware problem. No service actions are necessary if the pointer movement stops in a short period of time.

Power-On Self-Test (POST) Error Message

The POST error message index lists the error message and their possible causes. The most likely cause is listed first.

NOTE: Perform the FRU replacement or actions in the sequence shown in FRU/Action column, if the FRU replacement does not solve the problem, put the original part back in the computer. Do not replace a non-defective FRU.

This index can also help you determine the next possible FRU to be replaced when servicing a computer.

If the symptom is not listed, see “Undetermined Problems” on page 82.

The following lists the error messages that the BIOS displays on the screen and the error symptoms classified by function.

NOTE: Most of the error messages occur during POST. Some of them display information about a hardware device, e.g., the amount of memory installed. Others may indicate a problem with a device, such as the way it has been configured.

NOTE: If the system fails after you make changes in the BIOS Setup Utility menus, reset the computer, enter Setup and install Setup defaults or correct the error.

Index of Error Messages

Error Code List

Error Codes	Error Messages
006	Equipment Configuration Error Causes: 1. CPU BIOS Update Code Mismatch 2. IDE Primary Channel Master Drive Error (The causes will be shown before "Equipment Configuration Error")
010	Memory Error at xxxx:xxxx:xxxxh (R:xxxxh, W:xxxxh)
070	Real Time Clock Error
071	CMOS Battery Bad
072	CMOS Checksum Error
110	System disabled. Incorrect password is specified.
<No error code>	Battery critical LOW In this situation BIOS will issue 4 short beeps then shut down system, no message will show.
<No error code>	Thermal critical High In this situation BIOS will shut down system, not show message.

Error Message List

Error Messages	FRU/Action in Sequence
Failure Fixed Disk	Reconnect hard disk drive connector. "Load Default Settings" in BIOS Setup Utility. Hard disk drive System board
Stuck Key	see "Keyboard or Auxiliary Input Device Check" on page 69.
Keyboard error	see "Keyboard or Auxiliary Input Device Check" on page 69.
Keyboard Controller Failed	see "Keyboard or Auxiliary Input Device Check" on page 69.
Keyboard locked - Unlock key switch	Unlock external keyboard
Monitor type does not match CMOS - Run Setup	Run "Load Default Settings" in BIOS Setup Utility.
Shadow RAM Failed at offset: nnnn	BIOS ROM System board
System RAM Failed at offset: nnnn	DIMM System board
Extended RAM Failed at offset: nnnn	DIMM System board
System battery is dead - Replace and run Setup	Replace RTC battery and Run BIOS Setup Utility to reconfigure system time, then reboot system.
System CMOS checksum bad - Default configuration used	RTC battery Run BIOS Setup Utility to reconfigure system time, then reboot system.
System timer error	RTC battery Run BIOS Setup Utility to reconfigure system time, then reboot system. System board

Error Message List

Error Messages	FRU/Action in Sequence
Real time clock error	RTC battery Run BIOS Setup Utility to reconfigure system time, then reboot system. System board
Previous boot incomplete - Default configuration used	Run "Load Default Settings" in BIOS Setup Utility. RTC battery System board
Memory size found by POST differed from CMOS	Run "Load Default Settings" in BIOS Setup Utility. DIMM System board
Diskette drive A error	Check the drive is defined with the proper diskette type in BIOS Setup Utility See "External Diskette Drive Check" on page 69.
Incorrect Drive A type - run SETUP	Check the drive is defined with the proper diskette type in BIOS Setup Utility
System cache error - Cache disabled	System board
CPU ID:	System board
DMA Test Failed	DIMM System board
Software NMI Failed	DIMM System board
Fail-Safe Timer NMI Failed	DIMM System board
Device Address Conflict	Run "Load Default Settings" in BIOS Setup Utility. RTC battery System board
Allocation Error for device	Run "Load Default Settings" in BIOS Setup Utility. RTC battery System board
Failing Bits: nnnn	DIMM BIOS ROM System board
Fixed Disk n	None
Invalid System Configuration Data	BIOS ROM System board
I/O device IRQ conflict	Run "Load Default Settings" in BIOS Setup Utility. RTC battery System board
Operating system not found	Enter Setup and see if fixed disk and drive A: are properly identified. Diskette drive Hard disk drive System board

Error Message List

No beep Error Messages	FRU/Action in Sequence
No beep, power-on indicator turns off and LCD is blank.	Power source (battery pack and power adapter). See "Power System Check" on page 70. Ensure every connector is connected tightly and correctly. Reconnect the DIMM. LED board. System board.
No beep, power-on indicator turns on and LCD is blank.	Power source (battery pack and power adapter). See "Power System Check" on page 70. Reconnect the LCD connector Hard disk drive LCD inverter ID LCD cable LCD Inverter LCD System board
No beep, power-on indicator turns on and LCD is blank. But you can see POST on an external CRT.	Reconnect the LCD connectors. LCD inverter ID LCD cable LCD inverter LCD System board
No beep, power-on indicator turns on and a blinking cursor shown on LCD during POST.	Ensure every connector is connected tightly and correctly. System board
No beep during POST but system runs correctly.	Speaker System board

POST Code

Code	Beeps	For Boot Block in Flash ROM
E0h		Initialize the chipset
E1h		Initialize the bridge
E2h		Initialize the CPU
E3h		Initialize the system timer
E4h		Initialize system I/O
E5h		Check force recovery boot
E6h		Checksum BIOS ROM
E7h		Go to BIOS
E8h		Set Huge Segment
E9h		Initialize Multi Processor
EAh		Initialize OEM special code
EBh		Initialize PIC and DMA
ECh		Initialize Memory type
EDh		Initialize Memory size
EEh		Shadow Boot Block
EFh		System memory test
F0h		Initialize interrupt vectors
F1h		Initialize Run Time Clock
F2h		Initialize video
F3h		Initialize System Management Mode
F4h	1	Output one beep before boot
F5h		Boot to Mini DOS
F6h		Clear Huge Segment
F7h		Boot to Full DOS

Index of Symptom-to-FRU Error Message

LCD-Related Symptoms

Symptom / Error	Action in Sequence
LCD backlight doesn't work LCD is too dark LCD brightness cannot be adjusted LCD contrast cannot be adjusted	Enter BIOS Utility to execute "Load Setup Default Settings", then reboot system. Reconnect the LCD connectors. Keyboard (if contrast and brightness function key doesn't work). LCD inverter ID LCD cable LCD inverter LCD System board
Unreadable LCD screen Missing pels in characters Abnormal screen Wrong color displayed	Reconnect the LCD connector LCD inverter ID LCD cable LCD inverter LCD System board
LCD has extra horizontal or vertical lines displayed.	LCD inverter ID LCD inverter LCD cable LCD System board

Indicator-Related Symptoms

Symptom / Error	Action in Sequence
Indicator incorrectly remains off or on, but system runs correctly	Reconnect the inverter board Inverter board System board

Power-Related Symptoms

Symptom / Error	Action in Sequence
Power shuts down during operation	Power source (battery pack and power adapter). See "Power System Check" on page 70. Battery pack Power adapter Hard drive & battery connection board System board
The system doesn't power-on.	Power source (battery pack and power adapter). See "Power System Check" on page 70. Battery pack Power adapter Hard drive & battery connection board System board
The system doesn't power-off.	Power source (battery pack and power adapter). See "Power System Check" on page 70. Hold and press the power switch for more than 4 seconds. System board

Power-Related Symptoms

Symptom / Error	Action in Sequence
Battery can't be charged	See "Check the Battery Pack" on page 72. Battery pack System board

PCMCIA-Related Symptoms

Symptom / Error	Action in Sequence
System cannot detect the PC Card (PCMCIA)	PCMCIA slot assembly System board
PCMCIA slot pin is damaged.	PCMCIA slot assembly


Memory-Related Symptoms

Symptom / Error	Action in Sequence
Memory count (size) appears different from actual size.	Enter BIOS Setup Utility to execute "Load Default Settings, then reboot system. DIMM System board

Speaker-Related Symptoms

Symptom / Error	Action in Sequence
In Windows, multimedia programs, no sound comes from the computer.	Audio driver Speaker System board
Internal speakers make noise or emit no sound.	Speaker System board

Power Management-Related Symptoms

Symptom / Error	Action in Sequence
The system will not enter hibernation	Keyboard (if control is from the keyboard) Hard disk drive System board
The system doesn't enter hibernation mode and four short beeps every minute.	See "Hibernation Mode" on page 34. Press Fn+  and see if the computer enters hibernation mode. Touchpad Keyboard Hard disk connection board Hard disk drive System board
The system doesn't enter standby mode after closing the LCD	See "Hibernation Mode" on page 34. LCD cover switch System board
The system doesn't resume from hibernation mode.	See "Hibernation Mode" on page 34. Hard disk connection board Hard disk drive System board
The system doesn't resume from standby mode after opening the LCD.	See "Hibernation Mode" on page 34. LCD cover switch System board

Power Management-Related Symptoms

Symptom / Error	Action in Sequence
Battery fuel gauge in Windows doesn't go higher than 90%.	Remove battery pack and let it cool for 2 hours. Refresh battery (continue use battery until power off, then charge battery). Battery pack System board
System hangs intermittently.	Reconnect hard disk/CD-ROM drives. Hard disk connection board System board

Peripheral-Related Symptoms

Symptom / Error	Action in Sequence
System configuration does not match the installed devices.	Enter BIOS Setup Utility to execute "Load Default Settings", then reboot system. Reconnect hard disk/CD-ROM/diskette drives.
External display does not work correctly.	Press Fn+F5, LCD/CRT/Both display switching System board
USB does not work correctly	System board
Print problems.	Ensure the "Parallel Port" in the "Onboard Devices Configuration" of BIOS Setup Utility is set to Enabled. Onboard Devices Configuration Run printer self-test. Printer driver Printer cable Printer System Board
Serial or parallel port device problems.	Ensure the "Serial Port" in the Devices Configuration" of BIOS Setup Utility is set to Enabled. Device driver Device cable Device System board

Keyboard/Touchpad-Related Symptoms

Symptom / Error	Action in Sequence
Keyboard (one or more keys) does not work.	Reconnect the keyboard cable. Keyboard System board
Touchpad does not work.	Reconnect touchpad cable. Touchpad board System board

Modem-Related Symptoms

Symptom / Error	Action in Sequence
Internal modem does not work correctly.	Modem phone port modem combo board System board

NOTE: If you cannot find a symptom or an error in this list and the problem remains, see "Undetermined Problems" on page 82.

Intermittent Problems

Intermittent system hang problems can be caused by a variety of reasons that have nothing to do with a hardware defect, such as: cosmic radiation, electrostatic discharge, or software errors. FRU replacement should be considered only when a recurring problem exists.

When analyzing an intermittent problem, do the following:

1. Run the advanced diagnostic test for the system board in loop mode at least 10 times.
2. If no error is detected, do not replace any FRU.
3. If any error is detected, replace the FRU. Rerun the test to verify that there are no more errors.

Undetermined Problems

The diagnostic problems does not identify which adapter or device failed, which installed devices are incorrect, whether a short circuit is suspected, or whether the system is inoperative.

Follow these procedures to isolate the failing FRU (do not isolate non-defective FRU).

NOTE: Verify that all attached devices are supported by the computer.

NOTE: Verify that the power supply being used at the time of the failure is operating correctly. (See “Power System Check” on page 70):

1. Power-off the computer.
2. Visually check them for damage. If any problems are found, replace the FRU.
3. Remove or disconnect all of the following devices:
 - Non-Acer devices
 - Printer, mouse, and other external devices
 - Battery pack
 - Hard disk drive
 - DIMM
 - CD-ROM/Diskette drive Module
 - PC Cards
4. Power-on the computer.
5. Determine if the problem has changed.
6. If the problem does not recur, reconnect the removed devices one at a time until you find the failing FRU.
7. If the problem remains, replace the following FRU one at a time. Do not replace a non-defective FRU:
 - System board
 - LCD assembly

Use NAPP CD to Build Master Hard Disc Drive

CD to Disk Recovery

1. Prepare NAPP CD, Recovery CD and System CD.
2. Put NAPP CD into the optical drive. Then boot up the system.
3. The system will ask you if you want to build NAPP Master HDD. Please press any key to continue.

```
=====
                        The HDD Must bigger then 20GB.
=====

Do you want to build NAPP Master HDD?
press any key to continue or Ctrl-C to exit
_
```

4. NAPP CD will start to preload the system, please click [Y].

```
Acer NAPP Preload Selector for Acer System Version 1.4.0.1
Copyright 2003 Acer Inc.

=====

This will preload your system. Are you sure?[Y,N]?
```

5. Select CD to Disk Recovery.

```
Method Selector
=====
1. Disk To Disk Recovery
2. CD to Disk Recovery
X. Quit

Please select your Choose...[1,2,x]?
```

6. Put the Recovery CD to the optical drive. This step is to create image files to the system, you do not have to put the Recovery CD to the optical drive in order. Place one Recovery CD to the drive at one time till you finish all Recovery CDs.

```
Please Insert Any Recovery CD

Please Press Any Key to Continue.
Press any key to continue...
_
```

After you place the Recovery CD to the optical drive, you will see the display below.

```
Please Wait for COPYING .....  
X:\images \70E40101.HDD
```

7. Then insert the System CD to the optical drive.

```
Please Insert the System CD  
  
Please Press Any Key to Continue.  
Press any key to continue...  
_
```

8. You will see the screen displaying "PASS" when the system has built NAPP Master hard disc drive.



Disk to Disk Recovery

1. Prepare NAPP CD, Recovery CD and System CD.
2. Put NAPP CD into the optical drive. Then boot up the system.
3. The system will ask you if you want to build NAPP Master HDD. Please press any key to continue.



4. NAPP CD will start to preload the system, please click [Y].

```
Acer NAPP Preload Selector for Acer System Version 1.4.0.1
Copyright 2003 Acer Inc.
```

```
=====
This will preload your system. Are you sure?[Y,N]?
```

5. Select Disk to Disk Recovery. Then choose Single Language or Multi-Languages Recovery.
NOTE: For Multi-Languages Recovery, not more than five languages could be loaded to the system.


```
Method Selector
```

- ```
=====
1. Single Language Recovery
2. Multi-Languages Recovery
X. Quit
```

```
Please select your Choose...[1,2,x]?
```

6. Put the Recovery CD to the optical drive. This step is to create image files to the system, you do not have to put the Recovery CD to the optical drive in order. Place one Recovery CD to the drive at one time till you finish all Recovery CDs.

---

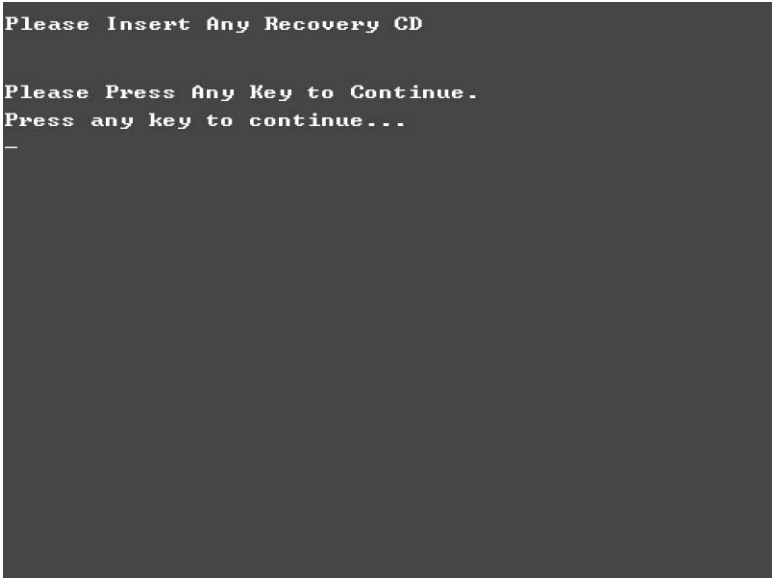

```
Please Insert Any Recovery CD


Please Press Any Key to Continue.
Press any key to continue...
_
```

After you place the Recovery CD to the optical drive, you will see the display below.



```
Please Wait for COPYING
X:\images \70E40101.HDD
```

7. Then insert the System CD to the optical drive.

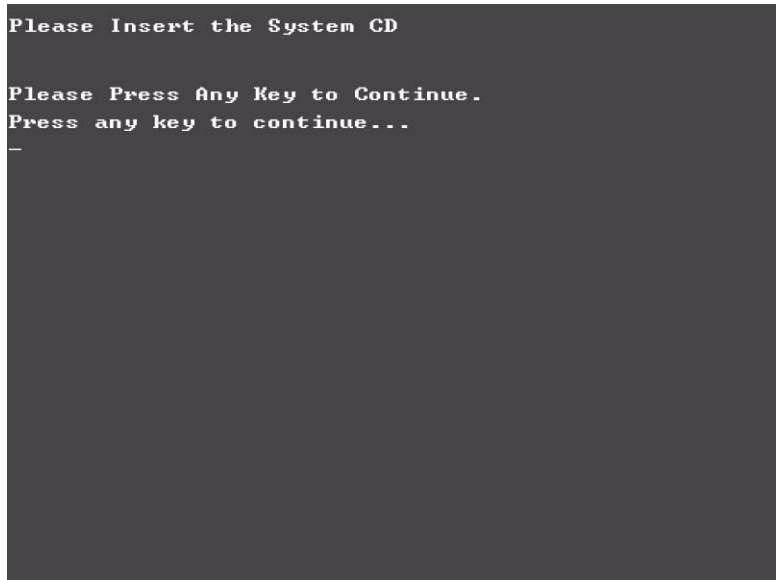


- 8. You will see the screen displaying "PASS" when the system has buit NAPP Master hard disc drive.



# Jumper and Connector Locations

Top View

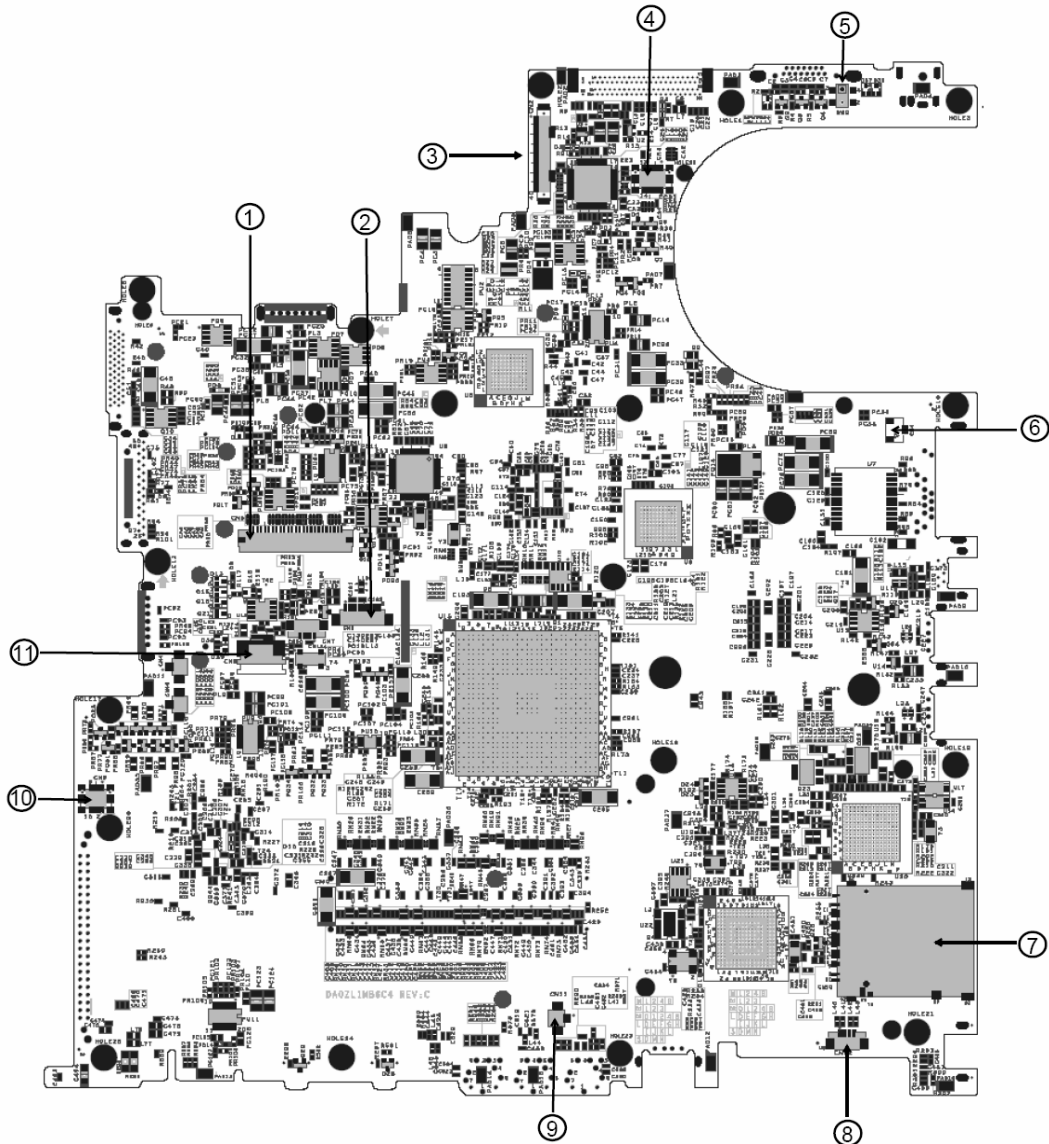


|   |                           |     |   |                               |      |
|---|---------------------------|-----|---|-------------------------------|------|
| 1 | Keyboard Connector        | CN5 | 7 | 3 in 1 Connector              | CN10 |
| 2 | Bluetooth Board Connector | CN6 | 8 | Speaker Connector             | CN12 |
| 3 | LCD Cable Connector       | CN2 | 9 | Internal Microphone Connector | CN11 |

---

|   |                       |     |    |                          |     |
|---|-----------------------|-----|----|--------------------------|-----|
| 4 | LED Board Connector   | CN3 | 10 | Modem Board Connector    | CN9 |
| 5 | Lid Switch            | SW2 | 11 | Touchpad Board Connector | CN8 |
| 6 | Modem Cable Connector | CN4 |    |                          |     |

# Bottom View

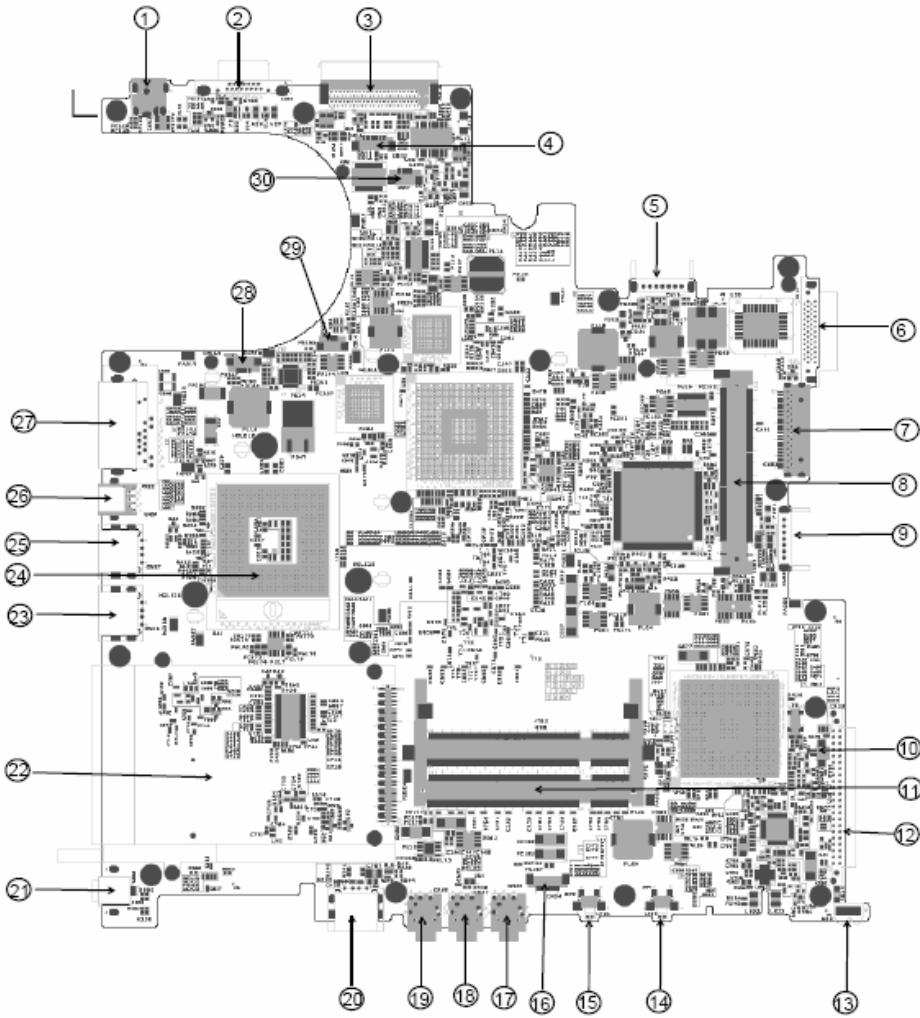

|    |                          |      |    |                         |      |
|----|--------------------------|------|----|-------------------------|------|
| 1  | Power Jack               | CN13 | 16 | Audio Cable Connector   | CN34 |
| 2  | CRT                      | CN14 | 17 | Line-in Connector       | CN39 |
| 3  | Docking                  | CN15 | 18 | Headphone Out Connector | CN37 |
| 4  | Audio Cable Connector    | CN16 | 19 | Microphone-in Connector | CN38 |
| 5  | Main Battery Connector   | CN18 | 20 | USB Connector           | CN36 |
| 6  | ODD Connector            | CN19 | 21 | IEEE 1394 Connector     | CN35 |
| 7  | Media Bay Connector      | CN23 | 22 | PCMCIA                  | CN30 |
| 8  | Mini PCI Slot            | CN24 | 23 | USB Connector           | CN28 |
| 9  | Second Battery Connector | CN26 | 24 | CPU Socket              | U41  |
| 10 | RTC Battery Connector    | CN31 | 25 | USB Connector           | CN27 |
| 11 | DDR DIMM Connector       | CN32 | 26 | S-Video                 | CN25 |
| 12 | HDD Connector            | CN33 | 27 | RJ45 and RJ11 Connector | CN22 |
| 13 | IR                       | U53  | 28 | LAN Cable Connector     | CN21 |

---

|    |                  |     |    |                     |      |
|----|------------------|-----|----|---------------------|------|
| 14 | Bluetooth Switch | SW4 | 29 | FAN Connector       | CN20 |
| 15 | Wireless Switch  | SW3 | 30 | LAN Cable Connector | CN17 |

## FRU (Field Replaceable Unit) List

---


This chapter gives you the FRU (Field Replaceable Unit) listing in global configurations of Aspire 1680/1410. Refer to this chapter whenever ordering for parts to repair or for RMA (Return Merchandise Authorization).



Please note that WHEN ORDERING FRU PARTS, you should check the most up-to-date information available on your regional web or channel. For whatever reasons a part number change is made, it will not be noted on the printed Service Guide. For ACER AUTHORIZED SERVICE PROVIDERS, your Acer office may have a DIFFERENT part number code from those given in the FRU list of this printed Service Guide. You MUST use the local FRU list provided by your regional Acer office to order FRU parts for repair and service of customer machines.




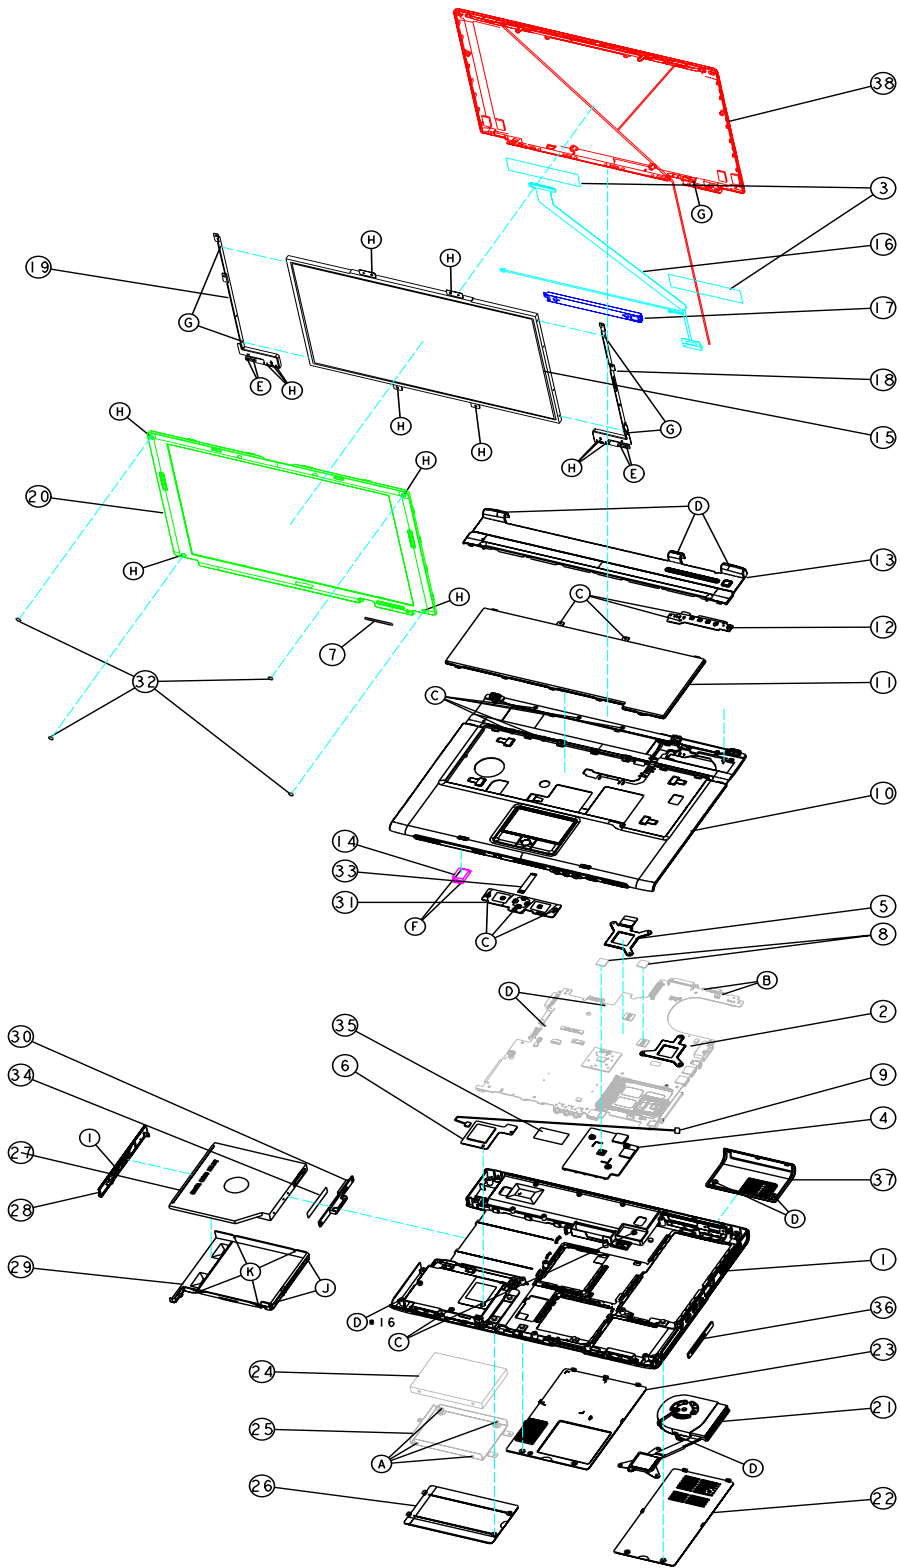

**NOTE:** To scrap or to return the defective parts, you should follow the local government ordinance or regulations on how to dispose it properly, or follow the rules set by your regional Acer office on how to return it.



# Exploded Diagram

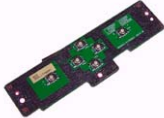

| <b>Adapter</b>                                                                      |     |                                                  |              |
|-------------------------------------------------------------------------------------|-----|--------------------------------------------------|--------------|
|                                                                                     | N/S | ADAPTER 65W 3 PIN DELTA SADP-65KB BF 19V         | TBD          |
|                                                                                     | N/S | ADAPTER 65W 3 PIN LITE-ON PA-1650-02 QA 19V      | TBD          |
|                                                                                     | N/S | ADAPTER 65W 3 PIN LI-SHIN SLS0335A 19V           | TBD          |
| <b>Battery</b>                                                                      |     |                                                  |              |
|    | N/S | BATTERY SANYO LI-ION 4S2P 4.4A 4UR18650F-2-QC140 | TBD          |
|                                                                                     |     | BATTERY PANASONIC LI-ION 4S2P 4.4A CGR-B/8B5AE   | TBD          |
|                                                                                     |     | BATTERY SIMPLO LI-ION 4S2P 4.4A 916-3020         | TBD          |
| <b>Board</b>                                                                        |     |                                                  |              |
|    | 9   | MODEM BOARD                                      | 54.T50V7.001 |
|  | 14  | BLUETOOTH MODULE W/ANTENNA                       | 54.T48V7.001 |
|  | N/S | WIRELESS LAN BOARD (802.11b+g) INTEL             | KI.CAX01.005 |
|  | 12  | LAUNCH BOARD                                     | 55.T50V7.001 |

|    | 31  | TOUCH PAD BOARD                                          | 55.T50V7.002 |
|-------------------------------------------------------------------------------------|-----|----------------------------------------------------------|--------------|
| <b>Cable</b>                                                                        |     |                                                          |              |
|    | N/S | FFC CABLE - TP/B TO MB                                   | 50.T50V7.001 |
|    | N/S | MODEM CABLE                                              | 50.T50V7.002 |
|                                                                                     | N/S | POWER CORD US (3 PIN)                                    | 27.A03V7.001 |
|                                                                                     |     | POWER CORD PRC (3 PIN)                                   | 27.A03V7.003 |
|                                                                                     |     | POWER CORD KOERA ( Pin)                                  | 27.T23V7.006 |
|                                                                                     |     | POWER CORD EU (3 PIN)                                    | 27.A03V7.002 |
|                                                                                     |     | POWER CORD UK (3 PIN)                                    | 27.A03V7.004 |
|                                                                                     |     | POWER CORD ITALIAN (3 PIN)                               | 27.A03V7.005 |
|                                                                                     |     | POWER CORD- SWISS                                        | 27.A03V7.007 |
|                                                                                     |     | POWER CORD AU (3 PIN)                                    | 27.A03V7.008 |
|                                                                                     |     | POWER CORD DANISH (3 PIN)                                | 27.A03V7.006 |
|                                                                                     |     | POWER CORD AF (3 PIN)                                    | 27.T48V7.001 |
| <b>Case/Cover/Bracket Assembly</b>                                                  |     |                                                          |              |
|  | 13  | MIDDLE COVER W/BUTTON                                    | 42.A27V7.001 |
|                                                                                     | 10  | UPPER CASE W/TP, TP BRACKET,<br>TP TO TP BOARD FFC CABLE | 60.A27V7.001 |
|  | 1   | LOWER CASE W/SPEAKER                                     | 60.T51V7.001 |

|    | 37  | I/O BEZEL                                                                                              | 42.T51V7.001 |
|-------------------------------------------------------------------------------------|-----|--------------------------------------------------------------------------------------------------------|--------------|
|    | 23  | DIMM/WIRELESS COVER                                                                                    | 42.T50V7.002 |
|    | 22  | HEATSINK COVER                                                                                         | 42.T50V7.003 |
|   | 26  | HDD COVER                                                                                              | 42.T50V7.004 |
|  | N/S | 3 IN 1 DUMMY COVER<br>Note: The location of 3 in 1 dummy cover is the same as 3 in 1 cover's location. | 42.T51V7.002 |
|  | 36  | 3 IN 1 COVER                                                                                           | 42.T50V7.005 |
|  | 25  | HDD BRACKET                                                                                            | 33.T50V7.001 |
| Communication Module                                                                |     |                                                                                                        |              |

|    | N/S | WIRELESS LAN ANTENNA                                         | 50.T50V7.003 |
|-------------------------------------------------------------------------------------|-----|--------------------------------------------------------------|--------------|
| CPU/Processor                                                                       |     |                                                              |              |
|    | N/S | INTEL PENTIUM M 1.5G 2M 400FSB<br>uFCPGA2 SL6F9 B-1 STEPPING | KC.N0001.715 |
|                                                                                     |     | INTEL PENTIUM M 1.6G 2M 400FSB<br>uFCPGA2 SL7EG B-1 STEPPING | KC.N0001.725 |
|                                                                                     |     | INTEL PENTIUM M 1.7G 2M 400FSB<br>uFCPGA2 SL7EP B-1 STEPPING | KC.N0001.735 |
|                                                                                     |     | INTEL PENTIUM M 1.8G 2M 400FSB<br>uFCPGA2 SL7EN B-1 STEPPING | KC.N0001.745 |
|                                                                                     |     | INTEL PENTIUM M 2.0G 2M 400FSB<br>uFCPGA2 SL7EM B-1 STEPPING | KC.N0001.755 |
| Optical Disk Drive Module                                                           |     |                                                              |              |
|   | N/S | DVD/CDRW COMBO MODULE 24X<br>QSI SBW-242C                    | 6M.T51V7.001 |
|  | 27  | DVD/CDRW COMBO DRIVE 24X QSI<br>SBW-242C                     | KO.02407.014 |
|  | 29  | OPTICAL DEVICE HOLDER-FIX                                    | 42.T51V7.003 |
|  | 28  | DVD/CDRW BEZEL FOR QSI                                       | 42.T50V7.008 |
|                                                                                     |     | DVD/CDRW COMBO MODULE KME<br>UIDA-760                        | 6M.T51V7.002 |
|                                                                                     |     | DVD/CDRW COMBO DRIVE 24X<br>KME UIDA-760                     | KO.02406.008 |
|                                                                                     |     | OPTICAL DEVICE HOLDER-FIX                                    | 42.T51V7.003 |
|                                                                                     |     | DVD/CDRW BEZEL FOR KME                                       | 42.T50V7.009 |


|                                                                                     |    | DVD DUAL MODULE QSI SDW-042                                  | 6M.T51V7.003 |
|-------------------------------------------------------------------------------------|----|--------------------------------------------------------------|--------------|
|                                                                                     |    | DVD DUAL DRIVE QSI SDW-042                                   | KU.00403.001 |
|                                                                                     |    | OPTICAL DEVICE HOLDER-FIX                                    | 42.T51V7.003 |
|                                                                                     |    | DVD DUAL BEZEL FOR QSI                                       | 42.T50V7.010 |
|                                                                                     |    |                                                              |              |
|                                                                                     |    | DVD DUAL MODULE PIONEER DVR-K14RA                            | 6M.T51V7.004 |
|                                                                                     |    | DVD DUAL DRIVE PIONEER DVR-K14RA                             | KU.00805.001 |
|                                                                                     |    | OPTICAL DEVICE HOLDER-FIX                                    | 42.T51V7.003 |
|                                                                                     |    | DVD DUAL BEZEL FOR PIONEER                                   | 42.T50V7.011 |
|                                                                                     |    |                                                              |              |
|                                                                                     |    | DVD DUAL MODULE LITE-ON SOSW-852S                            | 6M.T51V7.005 |
|                                                                                     |    | DVD DUAL DRIVE LITE-ON SOSW-852S                             | KU.00805.001 |
|                                                                                     |    | OPTICAL DEVICE HOLDER-FIX                                    | 42.T51V7.003 |
|                                                                                     |    | DVD DUAL BEZEL FOR LITE-ON                                   | 42.T50V7.012 |
|                                                                                     |    |                                                              |              |
|                                                                                     |    | DVD SUPER MULTI MODULE KME UJ-830B                           | 6M.T51V7.006 |
|                                                                                     |    | DVD SUPER MULTI DRIVE KME UJ-830B                            | KU.00807.003 |
|                                                                                     |    | OPTICAL DEVICE HOLDER-FIX                                    | 42.T51V7.003 |
|                                                                                     |    | DVD SUPER MULTI BEZEL FOR KME                                | 42.T50V7.013 |
|                                                                                     |    |                                                              |              |
|                                                                                     |    | DVD SUPER MULTI MODULE HLDS GSA-4080N                        | 6M.T51V7.007 |
|                                                                                     |    | DVD SUPER MULTI DRIVE HLDS GSA-4080N                         | TBD          |
|                                                                                     |    | OPTICAL DEVICE HOLDER-FIX                                    | 42.T51V7.003 |
|                                                                                     |    | DVD SUPER MULTI BEZEL FOR HLDS                               | 42.T50V7.014 |
| <b>HDD/Hard Disk Drive</b>                                                          |    |                                                              |              |
|  | 24 | 30G HGST 2.5" 4200 Moraga+ HTS424030M9AT00 13G1486 fw:DA1017 | KH.03007.006 |
|                                                                                     |    | Toshiba Pluto 30G 4200rpm MK3025GAS                          | KH.03004.002 |
|                                                                                     |    | Seagate 30G ST93015A,2MB F/W:4.05                            | KH.03001.001 |
|                                                                                     |    | 40G HGST 2.5" 4200 Moraga+ HTS424040M9AT00 13G1132 fw:DA1017 | KH.04007.010 |





|                                                                                   |    | Toshiba PLUTO 40G 4200rpm<br>MK4025GAS ,KA100A F/W:KA100A                | KH.04004.002 |
|-----------------------------------------------------------------------------------|----|--------------------------------------------------------------------------|--------------|
|                                                                                   |    | SEAGATE 40G 4200rpm ST94019A,<br>2MB F/W:3.05                            | KH.04001.010 |
|                                                                                   |    | HGST 60G 4200rpm MORAGA<br>IC25N060ATMR04-0 08K0634 F/<br>W:AD4A         | KH.06007.006 |
|                                                                                   |    | Toshiba PLUTO 60G 4200rpm<br>MK6025GAS (phase in Mar/Apr) F/<br>W:KA200A | KH.06004.003 |
|                                                                                   |    | HGST 80G 4200rpm MORAGA<br>IC25N080ATMR04-0 08K635 F/<br>W:AD4A          | KH.08007.007 |
|                                                                                   |    | TOSHIBA PLUTO 80G 4200rpm<br>MK8025GAS, 8MB F/W:KA023A                   | KH.08004.001 |
| <b>Keyboard</b>                                                                   |    |                                                                          |              |
|  | 11 | AS1680/AS1410 KEYBOARD<br>DARFON US International                        | KB.A2707.001 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Chinese                                 | KB.A2707.002 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Spanish                                 | KB.A2707.003 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Thai                                    | KB.A2707.004 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Brazilian Protugese                     | KB.A2707.005 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Korea                                   | KB.A2707.006 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON UK                                      | KB.A2707.007 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON German                                  | KB.A2707.008 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Italian                                 | KB.A2707.009 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON French                                  | KB.A2707.010 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Swiss/G                                 | KB.A2707.011 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Portuguese                              | KB.A2707.012 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Arabic                                  | KB.A2707.013 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Belgium                                 | KB.A2707.014 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Sweden                                  | KB.A2707.015 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Czech                                   | KB.A2707.016 |
|                                                                                   |    | AS1680/AS1410 KEYBOARD<br>DARFON Hungarian                               | KB.A2707.017 |

|                                                                                     |     | AS1680/AS1410 KEYBOARD<br>DARFON Norway          | KB.A2707.018 |
|-------------------------------------------------------------------------------------|-----|--------------------------------------------------|--------------|
|                                                                                     |     | AS1680/AS1410 KEYBOARD<br>DARFON Danish          | KB.A2707.019 |
|                                                                                     |     | AS1680/AS1410 KEYBOARD<br>DARFON Turkish         | KB.A2707.020 |
|                                                                                     |     | AS1680/AS1410 KEYBOARD<br>DARFON Canadian French | KB.A2707.021 |
|                                                                                     |     | AS1680/AS1410 KEYBOARD<br>DARFON Japanese        | KB.A2707.022 |
|                                                                                     |     | AS1680/AS1410 KEYBOARD<br>DARFON Greek           | KB.A2707.023 |
|                                                                                     |     | AS1680/AS1410 KEYBOARD<br>DARFON Hebrew          | KB.A2707.024 |
|                                                                                     |     | AS1680/AS1410 KEYBOARD<br>DARFON Russian         | KB.A2707.025 |
| LCD Module                                                                          |     |                                                  |              |
|    | N/S | LCD MODULE 15 IN. XGA AU<br>B150XG01             | 6M.A27V7.001 |
|  | 15  | LCD 15" TFT XGA AU B150XG01 V2<br>(spwg-B)       | LK.15005.001 |
|  | 17  | LCD INVERTER BOARD                               | 19.T50V7.001 |
|  | 16  | LCD CABLE - 15 IN. XGA                           | 50.T50V7.004 |



|   | 18 | LCD BRACKET W/HINGE 15 IN. - L                   | 33.T50V7.002 |
|------------------------------------------------------------------------------------|----|--------------------------------------------------|--------------|
|   | 19 | LCD BRACKET W/HINGE 15 IN. - R                   | 33.T50V7.003 |
|   | 38 | LCD PANEL W/LOGO ANTENNA 14/<br>15 IN.           | 60.A27V7.002 |
|  | 20 | LCD BEZEL W/RUBBER PAD 15 IN.                    | 60.T50V7.004 |
|                                                                                    |    |                                                  |              |
|                                                                                    |    | LCD MODULE 15 IN. XGA QDI<br>QDI150XL06-01       | 6M.A27V7.002 |
|                                                                                    |    | LCD 15 IN. XGA QDI QDI150XL06-01                 | LK.15009.002 |
|                                                                                    |    | LCD INVERTER BOARD                               | 19.T50V7.001 |
|                                                                                    |    | LCD CABLE - 15 IN. XGA                           | 50.T50V7.004 |
|                                                                                    |    | LCD BRACKET W/HINGE 15 IN. - L                   | 33.T50V7.002 |
|                                                                                    |    | LCD BRACKET W/HINGE 15 IN. - R                   | 33.T50V7.003 |
|                                                                                    |    | LCD PANEL W/LOGO ANTENNA 14/<br>15 IN.           | 60.A27V7.002 |
|                                                                                    |    | LCD BEZEL W/RUBBER PAD 15 IN.                    | 60.T50V7.004 |
|                                                                                    |    |                                                  |              |
|                                                                                    |    | LCD MODULE 15 IN. XGA<br>HANNSTAR HSD150PX14-A07 | 6M.A27V7.003 |
|                                                                                    |    | LCD 15 IN. XGA HANNSTAR<br>HSD150PX14-A07        | LK.15007.009 |
|                                                                                    |    | LCD INVERTER BOARD                               | 19.T50V7.001 |
|                                                                                    |    | LCD CABLE - 15 IN. XGA                           | 50.T50V7.004 |
|                                                                                    |    | LCD BRACKET W/HINGE 15 IN. - L                   | 33.T50V7.002 |
|                                                                                    |    | LCD BRACKET W/HINGE 15 IN. - R                   | 33.T50V7.003 |

|                                                                                     |   | LCD PANEL W/LOGO ANTENNA 14/15 IN.                            | 60.A27V7.002 |
|-------------------------------------------------------------------------------------|---|---------------------------------------------------------------|--------------|
|                                                                                     |   | LCD BEZEL W/RUBBER PAD 15 IN.                                 | 60.T50V7.004 |
|                                                                                     |   |                                                               |              |
|                                                                                     |   | LCD MODULE 15 IN. XGA SAMSUNG LTN150XB-L03                    | 6M.A27V7.004 |
|                                                                                     |   | LCD 15 IN. XGA SAMSUNG LTN150XB-L03                           | LK.15006.004 |
|                                                                                     |   | LCD INVERTER BOARD                                            | 19.T50V7.001 |
|                                                                                     |   | LCD CABLE - 15 IN. XGA                                        | 50.T50V7.004 |
|                                                                                     |   | LCD BRACKET W/HINGE 15 IN. - L                                | 33.T50V7.002 |
|                                                                                     |   | LCD BRACKET W/HINGE 15 IN. - R                                | 33.T50V7.003 |
|                                                                                     |   | LCD PANEL W/LOGO ANTENNA 14/15 IN.                            | 60.A27V7.002 |
|                                                                                     |   | LCD BEZEL W/RUBBER PAD 15 IN.                                 | 60.T50V7.004 |
|                                                                                     |   |                                                               |              |
|                                                                                     |   | LCD MODULE 15 IN. XGA HITACHI TX38D81VC1CAB                   | 6M.A27V7.005 |
|                                                                                     |   | LCD 15 IN. TFT XGA HITACHI TX38D81VC1CAB (SPWG-B)             | LK.15004.006 |
|                                                                                     |   | LCD INVERTER BOARD                                            | 19.T50V7.001 |
|                                                                                     |   | LCD CABLE - 15 IN. XGA                                        | 50.T50V7.004 |
|                                                                                     |   | LCD BRACKET W/HINGE 15 IN. - L                                | 33.T50V7.002 |
|                                                                                     |   | LCD BRACKET W/HINGE 15 IN. - R                                | 33.T50V7.003 |
|                                                                                     |   | LCD PANEL W/LOGO ANTENNA 14/15 IN.                            | 60.A27V7.002 |
|                                                                                     |   | LCD BEZEL W/RUBBER PAD 15 IN.                                 | 60.T50V7.004 |
|                                                                                     |   |                                                               |              |
|                                                                                     |   | LCD MODULE 15.4 IN. WXGA QDI QD15TL02-01                      | 6M.A27V7.006 |
|                                                                                     |   | LCD 15.4 IN. WXGA QDI QD15TL02-01                             | LK.15409.001 |
|                                                                                     |   | LCD INVERTER BOARD                                            | 19.T50V7.001 |
|                                                                                     |   | LCD CABLE - 15.4 IN. WXGA                                     | 50.T50V7.006 |
|                                                                                     |   | LCD BRACKET W/HINGE 15.4 IN. - L                              | 33.T50V7.004 |
|                                                                                     |   | LCD BRACKET W/HINGE 15.4 IN. - R                              | 33.T50V7.005 |
|                                                                                     |   | LCD PANEL W/LOGO ANTENNA 15.4 IN.                             | 60.A27V7.003 |
|                                                                                     |   | LCD BEZEL W/RUBBER PAD 15.4 IN.                               | 60.T50V7.006 |
| <b>Main Board</b>                                                                   |   |                                                               |              |
|  | 2 | MAINBOARD 855GME M11 64MB 3 IN 1 W/PCMCIA SLOT W/O CPU MEMORY | LB.A2706.001 |
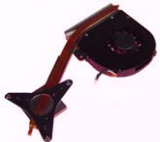
|                                                                                     |     | MAINBOARD 855GME UMA 3 IN 1 W/PCMCIA SLOT W/O CPU MEMORY                                           | LB.A2806.001 |
|-------------------------------------------------------------------------------------|-----|----------------------------------------------------------------------------------------------------|--------------|
| <b>Memory</b>                                                                       |     |                                                                                                    |              |
|    | N/S | 256MB NANYA SO-DIMM DDR333<br>256MB NT256D64SH8BAGM-6K (.14u)                                      | KN.25603.009 |
|                                                                                     |     | 256M Infineon SO-DIMM DDR333<br>HYS64D32020GDL-6-C (.11u/B)<br>(Sample April/M, 09/04' by firm PO) | KN.25602.022 |
|                                                                                     |     | 256M Infineon SO-DIMM DDR333<br>256MB HYS64D32020HDL-6-C 32x64<br>(.11u/G) (MP in Sept.)           | KN.25602.012 |
|                                                                                     |     | 256M Micron SO-DIMM DDR333<br>256MB MT4VDDT3264HG-335C2                                            | KN.25604.016 |
|                                                                                     |     | 256M Samsung SO-DIMM DDR333<br>256MB M470L3224FT0-CB3 (.13u)                                       | KN.2560B.008 |
|                                                                                     |     | 256M Hynix SO-DIMM DDR333<br>256MB HYMD232M646D6-J AA                                              | KN.2560G.001 |
|                                                                                     |     | 512M Infineon SO-DIMM DDR333<br>512MB HYS64D64020GBDL-6-C<br>(.11u/B)                              | KN.51202.013 |
|                                                                                     |     | 512MB NANYA SO-DIMM DDR333<br>512MB NT512D64SH8A0FM-6K                                             | KN.51203.011 |
|                                                                                     |     | 512MB Micron SO-DIMM DDR333<br>512MB MT8VDDT6464HDG-335C1<br>(.11u),                               | KN.51204.013 |
| <b>Speaker</b>                                                                      |     |                                                                                                    |              |
|  | N/S | SPEAKER SET                                                                                        | 23.T50V7.001 |
| <b>Heatsink</b>                                                                     |     |                                                                                                    |              |
|  | 21  | THERMAL MODULE                                                                                     | 60.T50V7.007 |
|  | 4   | VGA HEATSINK W/PAD                                                                                 | 34.T50V7.001 |
| <b>Miscellaneous</b>                                                                |     |                                                                                                    |              |
|                                                                                     | 7   | NAME PLATE                                                                                         | 47.A27V7.001 |
|                                                                                     | N/S | RUBBER FOOT                                                                                        | 47.T50V7.002 |

|       | N/S | LCD SCREW RUBBER PAD       | 47.T50V7.003 |
|-------|-----|----------------------------|--------------|
|       | 32  | LCD BEZEL RUBBER PAD       | 47.T50V7.004 |
| Screw |     |                            |              |
|       | N/S | SCREW M2.0X3.0-I-NI-NYLOK  | 86.A03V7.012 |
|       | C   | SCREW I2.5*3M-BNIH(M2.5L3) | 86.T25V7.012 |
|       | N/S | SCREW M2.5*4L-BZN-NYLOK    | 86.A03V7.006 |
|       | N/S | SCREW M2.0X5-I-NI-NYLOK    | 86.T23V7.006 |
|       | D   | SCREW MM25060IL69          | 86.A08V7.004 |
|       | N/S | SCREW M2.0*5-I(NI)(NYLOK)  | 86.T23V7.010 |
|       | K   | SCREW M2.0X2.5-I-NI-NYLOK  | 86.A03V7.007 |
|       | G   | SCREW I2*3M-NIHY (M2L3)    | 86.T25V7.008 |
|       | I   | SCREW M1.7*3.0-I (BK)      | 86.T50V7.001 |
|       | A   | SCREW I3*3.5M-NIH(M3L3.5)  | 86.A03V7.011 |



# Model Definition and Configuration

## Model Name Definition

### Aspire 1680 Model Name Definition

| Model Number | LCD           | CPU                   | Memory            | HDD  | ODD             | Wireless LAN | OS      |
|--------------|---------------|-----------------------|-------------------|------|-----------------|--------------|---------|
| 1681WLCi     | 15.4"<br>WXGA | PM 715<br>(1.5GHz/2M) | DDR333<br>1x256MB | 60GB | 24x Combo       | 11b/g        | XPH     |
| 1681WLMi     | 15.4"<br>WXGA | PM 715<br>(1.5GHz/2M) | DDR333<br>1x256MB | 60GB | 4x DVD-<br>Dual | 11b/g        | XPH     |
| 1682WLMi     | 15.4"<br>WXGA | PM 725<br>(1.6GHz/2M) | DDR333<br>2x256MB | 80GB | 4x DVD-<br>Dual | 11b/g        | XPH     |
| 1681WFLMi    | 15.4"<br>WXGA | PM 715<br>(1.5GHz/2M) | DDR333<br>1x256MB | 60GB | 4x DVD-<br>Dual | 11b/g        | IBM DOS |
| 1681WFLCi    | 15.4"<br>WXGA | PM 715<br>(1.5GHz/2M) | DDR333<br>1x256MB | 60GB | 24x Combo       | 11b/g        | IBM DOS |
| 1681WNLCi    | 15.4"<br>WXGA | PM 715<br>(1.5GHz/2M) | DDR333<br>1x256MB | 60GB | 24x Combo       | 11b/g        | Linux   |
| 1681WNLMi    | 15.4"<br>WXGA | PM 715<br>(1.5GHz/2M) | DDR333<br>1x256MB | 60GB | 4x DVD-<br>Dual | 11b/g        | Linux   |
| 1681LCi      | 15.0"<br>XGA  | PM 715<br>(1.5GHz/2M) | DDR333<br>2x256MB | 60GB | 24x Combo       | 11b/g        | XPH     |
| 1681LMi      | 15.0"<br>XGA  | PM 715<br>(1.5GHz/2M) | DDR333<br>2x256MB | 60GB | 4x DVD-<br>Dual | 11b/g        | XPH     |



# Test Compatible Components

---

This computer's compatibility is a test plan released by Acer Internal Testing Department. The test report is **NOT** ready as the service guide released. Once the final report is available, this chapter will be revised accordingly.



# Microsoft Windows XP Environment Test

| Item      | Specifications                                                                                                                                                                                                                                                                                                                                                                                                            |
|-----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Processor | Intel Celeron 1.3GHz<br>Intel Celeron 1.4GHz<br>Intel PMP 705Banias 1.5 GHz, Tj85<br>Intel Dothan 715/1.5GHz<br>Intel Dothan 725/1.6GHz<br>Intel Dothan 735/1.7GHz<br>Intel Dothan 745/1.8GHz<br>Intel Dothan 755/2.0GHz                                                                                                                                                                                                  |
| Memory    | 256MB NANYA SO-DIMM DDR333 NT256D64SH8BAGM<br>256MB Infineon SO-DIMM DDR333 HYS64D32020GDL<br>256MB Infineon SO-DIMM DDR333 HYS64D32020HDL<br>256MB Micron SO-DIMM DDR333 MT4VDDT3264HG<br>256MB Samsung SO-DIMM DDR333 M470L3224FT0<br>256MB Hynix SO-DIMM DDR333 HYMD232M646D6<br>512M Infineon SO-DIMM DDR333 HYS64D64020GBDL<br>512MB Micron SO-DIMM DDR333 MT8VDDT6464HDG<br>1GMB Elpida SO-DIMM DDR333 EBD11UD8ADDA |
| LCD       | 14.1"XGA B141XG05 (AU)<br>14.1"XGA QD141X1LH12 (QDI)<br>14.1"XGA N141XB-L01 (CMO)                                                                                                                                                                                                                                                                                                                                         |
| LCD       | 15.0"XGA B150XG01 V. 2 (AU)<br>15.0"XGA B150XG02 V.2 170 nits (AU)<br>15.0"XGA QD150XL06-01 160nits (QDI)<br>15.0"XGA LP150X08-A3 160nits (LG)<br>15.0"XGA HSD150PX14-A07 (Hannstar)<br>15.0"XGA LTN150XB-L03-C00 (Samsung)<br>15.0"XGA TX38D81VC1CAB Rev.B (Hitachi)<br>15.0"XGA N150X3-L07 (CMO/IDT)<br>15.0"XGA CLAA150XH01-N (CPT)                                                                                    |
| LCD       | 15.0"SXGA+ B150PG01 with NEC driver IC (AU)<br>15.0"SXGA+ N150P2-L04 (200nit) (IDT)(CMO)<br>15.0"SXGA+ B150PG03 (200nit) (AU)<br>15.0"SXGA+ LTN150P4-L03 (Samsung)<br>15.0"SXGA+ QD15FL02 RV.01 (200nit) (QDI)                                                                                                                                                                                                            |
| LCD       | 15.4"WXGA B154EW01 V.5 (170nit) (AU)<br>15.4"WXGA QD15TL02-01 (TN type) (185nit) (QDI)<br>15.4"WXGA N154I1-L09 (185nit) (CMO/IDT)<br>15.4"WXGA LTN154X2-L02 Low cost (Samsung)<br>15.4"WXGA Low cost TN TYPE (CPT)<br>15.4"WXGA Low Cost TN TYPE (LG)<br>15.4"WXGA TX39D85VC1FAA Low Cost (Hitachi)<br>15.4"WSXGA+ LP154W02-B1 (185nit) (LG)<br>15.4"WSXGA+ TX39D99VC1FAA (Hitachi)<br>15.4"WSXGA+ Low cost (Samsung)     |

| Item                         | Specifications                                                                                                                                                                                                                                                                                                                                                                             |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hard Disk Drive              | 30G HGST Moraga+ HTS424030M9AT00<br>30G Toshiba MK3025GAS30GB<br>30G Seagate 30G ST93015A<br><br>40G HGST Moraga+ HTS424040M9AT0040GB<br>40G Toshiba PLUTO MK4025GAS<br>40G SEAGATE ST94019A40G<br><br>60G HGST Moraga IC25N060ATMR04-0<br>60G TOSHIBA Neptune MK6021GAS<br><br>80G HGST Moraga IC25N080ATMR04<br>80G TOSHIBA Pluto MK8025GAS                                              |
| DVD-ROM Drive 8X             | DVD-ROM QSI SDR-083                                                                                                                                                                                                                                                                                                                                                                        |
| DVD/CD-RW Combo              | KME UJDA-760<br>QSI SBW-242C                                                                                                                                                                                                                                                                                                                                                               |
| DVD-dual                     | DVR-K14RA<br>Lite-on SOSW-852S<br>QSI SDW-042<br>QSI SDW-082                                                                                                                                                                                                                                                                                                                               |
| DVD-Super Multi              | KME UJ-830B<br>HLDS GSA-4080N                                                                                                                                                                                                                                                                                                                                                              |
| AC Adapter (3 pin)           | Delta NB Asapter 65W, SADP-65KB BF<br>Lite-on NB Adapter 65W, PA-1650-02<br>LSE NB Adapter 65W, P0335A1965                                                                                                                                                                                                                                                                                 |
| Power Cord                   | King Cord                                                                                                                                                                                                                                                                                                                                                                                  |
| Battery Li-Ion, 8 cells      | Sanyo 4UR18650F-2-QC140 ZL1,4S2P,4.4A / AHA842223I4<br>Panasonic CGR-B/8B5AE,ZL1,4S2P,14.8V,4.4A / AHA84222050<br>Simplo 916-3020 4S2P,4.4A / AHA842221I0<br>Sanyo 4UR18650F-QC141 ZL1,4S1P,2.2A / AHA44122A01<br>Panasonic CGR-B/423AE,ZL1,4S1P,14.8V,2.2A / AHA44122712<br>Simplo 916-2990 4S1P,2.2A / AHA44122909<br>Sanyo 3UF103450P-2-QC148 ZL1,3S2P,3.8A 6cell 2nd Bat / AHA63217219 |
| Network Adapters             |                                                                                                                                                                                                                                                                                                                                                                                            |
| LAN Ethernet/10baseT/100base | 3Com Etherlink III 3C589D<br>IBM EtherJet CardBus Adapter 10/100<br>Intel Ether Express Pro/100 Mobile Adapter MBLA3200<br>Xircom CardBus Ethernet 10/100 32 Bit CBE-10/100BTX                                                                                                                                                                                                             |
| Multifunction Card (Combo)   | 3Com Megahertz 10/100 LAN + 56K Modem PC Card<br>Xircom RealPort CardBus Ethenet 10/100 + Modem 56                                                                                                                                                                                                                                                                                         |
| LAN Token Ring               | IBM Token Ring 16/4 Adapter II                                                                                                                                                                                                                                                                                                                                                             |
| Wireless LAN Card            | IBM Wireless LAN Cardbus Adapter<br>Intel Pro-Wireless LAN PC Card<br>Proxim Skyline 802.11a Cardbus PC Card<br>Cisco Aironet 350 series Wireless Lan Card<br>NeWeb Wireless Lan Card 802.11b                                                                                                                                                                                              |
| Modem Adapters               |                                                                                                                                                                                                                                                                                                                                                                                            |
| Modem (up to 56K)            | 3Com Megahertz 56K Modem PC Card<br>Xircom Credit Card Modem 56<br>IBM 56K Double Jack Modem                                                                                                                                                                                                                                                                                               |

| Item                                     | Specifications                                                                                                                                                                                                                                                                                                                                                                                                    |
|------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ISDN                                     | US Robotics Megahertz 128K ISDN Card 405R17T7117M<br>IBM OBI International ISDN PC Card                                                                                                                                                                                                                                                                                                                           |
| I/O Peripheral                           |                                                                                                                                                                                                                                                                                                                                                                                                                   |
| I/O - Display                            | Acer 211c 21"<br>Viewsonic PF790 19"<br>Acer FP751 17" TFT LCD<br>IBM Color TFT LCD 14"<br>Compaq Color Monitor<br>NET Color Monitor 20"<br>Mozo 17" TFT LCD (DVI)                                                                                                                                                                                                                                                |
| I/O - Projector                          | NEC MultiSync MT-1040                                                                                                                                                                                                                                                                                                                                                                                             |
| I/O - Legacy (Parallel) Printer/Scanner  | Canon BJC-600J<br>Epson Stylus Color 740 Parallel Interface<br>HP DeskJet 890C<br>HP DeskJet 880C Parallel Interface<br>HP LaserJet 6MP<br>HP LaserJet 2200                                                                                                                                                                                                                                                       |
| I/O - IR Printer                         | HP LaserJet 6MP use IR<br>HP LaserJet 2200 use IR                                                                                                                                                                                                                                                                                                                                                                 |
| I/O - USB Keyboard/Mouse                 | Chicony USB Keyboard KU-8933<br>Microsoft Natural Keyboard Pro<br>Acer Aspire USB mouse<br>Logicool US Mouse<br>Logitech Cordless Mouseman Wheel USB Interface<br>Logitech USB Wheel Mouse M-BB48<br>Microsoft IntelliMouse Optical USB Interface                                                                                                                                                                 |
| I/O - Legacy (PS2/Serial) Keyboard/Mouse | IBM 101 key keyboard<br>IBM 109 key keyboard<br>Acer PS2 keyboard<br>Acer KB-101A<br>IBM Numeric Keypad III<br>IBM Numeric Keypad<br>Acer Mouse<br>IBM PS2 Mini Mouse<br>IBM PS2 Mouse<br>Logitech Cordless MouseMan Wheel PS2 interface<br>Logitech Serial Mouse M-M35<br>Microsoft IntelliMouse PS2 interface<br>Microsoft IntelliMouse Optical PS2 interface<br>Logitech First Mouse Three Button Serial Mouse |
| I/O - USB (Printer/Scanner)              | Epson Stylus Color 740 USB interface<br>HP DeskJet 880C USB interface<br>Canon CanonScan D1250 (USB 2.0, JP OS only)<br>HP ScanJet 3300C Color Scanner                                                                                                                                                                                                                                                            |
| I/O - USB (Speaker/Joystick)             | JS USB Digital Speaker<br>Panasonic USB Speaker EAB-MPC57USB<br>AIWA Multimedia Digital Speaker<br>Microsoft SideWinder Precision Pro Joystick<br>Logitech WingMan RumblePad                                                                                                                                                                                                                                      |

| Item                         | Specifications                                                                                                                                                                                                                                                           |
|------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| I/O - USB Camera             | Intel Easy PC Camera<br>Logitech QuickCam Express Internet<br>Logitech QuickCam Home PC Video Camera<br>Orange Micro USB 2.0 Web Cam                                                                                                                                     |
| I/O - USB Storage Drive      | Logitech CDRW +DVDROM combo USB interface<br>Iomega USB Zip 250MB                                                                                                                                                                                                        |
| I/O-USB Flash Drive          | IBM 32MB USB Memory key<br>Apacer USB Handy Drive 32MB<br>Apacer USB Handy Drive 256MB                                                                                                                                                                                   |
| I/O - USB Hub                | Belkin 4 Port USB Hub<br>Eizo I Station USB Hub<br>Elecom USB Hub 4 Port<br>Sanwa USB Hub 4 Port<br>4 Port Hub USB 2.0                                                                                                                                                   |
| I/O - Access Point (802.11b) | Hitachi DC-CN3300<br>Lucent RG-1000<br>Lucent WavePoint-II<br>Cisco Aironet 350<br>Orinoco AP-500                                                                                                                                                                        |
| I/O Access Point (802.11a/b) | Intel Dual Pro/Wireless 5000                                                                                                                                                                                                                                             |
| I/O Access Point (802.11a)   | Intel Pro/Wireless 5000                                                                                                                                                                                                                                                  |
| PCMCIA                       |                                                                                                                                                                                                                                                                          |
| PCMCIA - ATA                 | IBM Microdrive 340MB<br>IBM Microdrive 1G<br>Iomega Click! 40MB<br>Sony Memory Stick 64MB<br>Sandisk Flash Card 20MB<br>Apacer SD Flash Card 128MB<br>Apacer SD Flash Card 256MB<br>Transcend SD Card 32MB<br>Transcend SD Card 256MB<br>Hagiwara sys-com SD Card 256MBT |
| PCMCIA - USB 2.0             | Apricom EZ-USB2.0 Cardbus PC Card<br>DTK USB 2.0 2Port CardBus Host Controller<br>Adaptec USB2CONNECT                                                                                                                                                                    |
| PCMCIA - 1394                | Buffalo 1394 Interface Cardbus IFC-ILCB/DV<br>I-O Data 1394 Interface Cardbus CB1394/DVC<br>Pixela 1394 Cardbus PC Card PIX-PCMC/FW1                                                                                                                                     |
| PCMCIA-SCSI                  | Adaptec 1408 or B SCSI CB<br>NewMedia Bus Toaster SCSI II                                                                                                                                                                                                                |
| PCMCIA - Bluetooth           | IBM Community Bluetooth PC Card<br>Toshiba Bluetooth PC Card                                                                                                                                                                                                             |



## Online Support Information

---

This section describes online technical support services available to help you repair your Acer Systems.

If you are a distributor, dealer, ASP or TPM, please refer your technical queries to your local Acer branch office. Acer Branch Offices and Regional Business Units may access our website. However some information sources will require a user i.d. and password. These can be obtained directly from Acer CSD Taiwan.

Acer's Website offers you convenient and valuable support resources whenever you need them.

In the Technical Information section you can download information on all of Acer's Notebook, Desktop and Server models including:

- Service guides
- User's manuals
- Training materials
- Main manuals
- Bios updates
- Software utilities
- Spare parts lists
- Chips
- TABs (Technical Announcement Bulletin)

For these purposes, we have included an Acrobat File to facilitate the problem-free downloading of our technical material.

Also contained on this website are:

- Detailed information on Acer's International Traveller's Warranty (ITW)
- Returned material authorization procedures
- An overview of all the support services we offer, accompanied by a list of telephone, fax and email contacts for all your technical queries.

We are always looking for ways to optimize and improve our services, so if you have any suggestions or comments, please do not hesitate to communicate these to us.



**A**

AFLASH Utility 49  
Audio 29

**B**

Battery Pack 55  
BIOS 25  
    package 25  
    password control 25  
    ROM size 25  
    ROM type 25  
    vendor 25  
    Version 25  
BIOS Setup Utility 36  
BIOS Supports protocol 25  
BIOS Utility 36  
    Basic System Settings 41  
    Navigating 37  
    Onboard Device Configuration 44  
    Startup Configuration 43  
    System Security 48  
Board Layout  
    Bottom View 5, 92  
    Top View 4

**C**

Cache  
    controller 25  
    size 25  
caps lock  
    on indicator 13  
CardBus 30

**D**

DIMM  
    external 56, 60  
    removing 56, 60  
Disassembly  
    Battery Pack 54  
    LCD Module 64  
    Procedure Flowchart 53  
Disassemblyt  
    the Main Unit 61  
DVD-ROM Interface 28

**E**

Error Symptom-to-Spare Part Index 73

External CD-ROM Drive Check 69

**F**

Features 1  
Flash Utility 49  
Floppy Disk  
    removing the 64  
FRU (Field Replaceable Unit) List 94

**H**

Hard disk 27  
HDD 27  
Hot Keys 15

**I**

Indicators 13  
Intermittent Problems 81

**K**

Keyboard 31  
Keyboard or Auxiliary Input Device Check 69

**L**

L2 cache 25

**M**

Memory Check 70  
Modem 26

**N**

num lock  
    on indicator 13

**O**

Online Support Information 116

**P**

Panel 5  
    Bottom 12  
    left 7  
PC Card 13, 30  
PCMCIA 30  
Pentium III 25  
Power System Check 70  
    Battery Pack 72  
    Power Adapter 71



---

Processor 25

## **S**

Second Level Cache 25

System Check Procedures 69

System Diagnostic Diskette 49

System Memory 25

System Utility Diskette 49

## **T**

Touchpad Check 72

## **U**

Undetermined Problems 82

USB 30

utility

    BIOS 36

## **V**

Video 29

## **W**

Windows XP Environment Test 111